



Cat.Nos for 50 x 80 trunking

 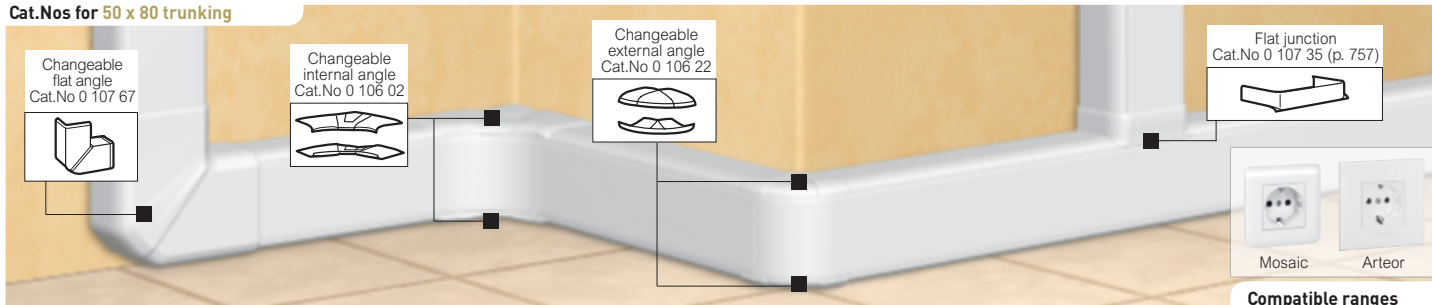


Cat.Nos for 50 x 105 trunking

 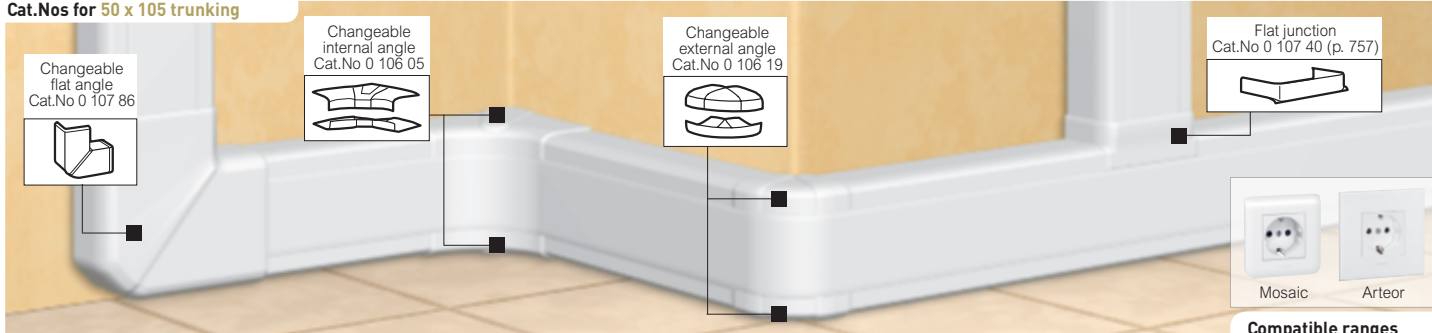


Selection chart **p. 752-753**
Wiring capacity chart **see e-catalogue**

Pack	Cat.Nos	Universal trunking 50 x 80
20 ¹	0 104 62	Trunking without partition Supplied with: - one 50 x 80 mm body - one flexible 65 mm width cover Fits onto the whole trunking including in internal and external angles Installation: can be used with Mosaic/Arteor ranges or DIN rail equipment Length 2 m
24 ¹	0 105 82	Partition Separation partition Length 2 m
20	0 106 91	Joints Body joint For aligning bases during installation
20	0 106 92	Body joint, attached with adhesive (fit at the end of installation)
10	0 108 01	Cover joint for 65 mm cover



Pack	Cat.Nos	Universal trunking 50 x 105
12 ¹	0 104 24	Trunking without partition Supplied with: - one 50 x 105 mm body - one flexible 65 mm width cover Fits onto the whole trunking including in internal and external angles Installation: can be used with Mosaic/Arteor ranges or DIN rail equipment Length 2 m
24 ¹	0 105 82	Partition Separation partition Length 2 m
20	0 106 96	Joints Body joint For aligning bases during installation
10	0 108 01	Cover joint for 65 mm cover



Pack	Cat.Nos	Angles and end cap for universal trunking 50 x 80
10	0 106 02	Internal and external bends Include the 2 components for the top and bottom of the trunking on which the flexible cover is fitted Changeable internal bend, from 85° to 95° for 50 x 80/50 x 105/50 x 150 and 50 x 195 mm trunkings
10	0 106 22	Changeable external bend, from 60° to 120° for 50 x 80/50 x 105/50 x 150 and 50 x 195 mm trunkings
10	0 107 67	Flat angle 90° flat angle
10	0 107 22	End cap Left or right end cap

Pack	Cat.Nos	Angles and end cap for universal trunking 50 x 105
10	0 106 05	Internal and external bends Include the 2 components for the top and bottom of the trunking on which the flexible cover is fitted Changeable internal bend, from 85° to 95° for 50 x 105 mm trunkings
10	0 106 19	Changeable external bend, from 60° to 120° for 50 x 105 mm trunkings
10	0 107 86	Flat angle 90° flat angle
20	0 107 00	End cap Left or right end cap

1: Number of metres in pack