



Pack	Cat.Nos	Control and signalling auxiliaries
		Shunt trip When energised the circuit breaker will be tripped For DMX-SP 2500 and DMX ³ 1600
1	0 281 31	24 V~/=
1	0 281 32	48 V~/=
1	0 281 33	110 - 130 V~/=
1	0 281 34	220 - 250 V~/=
1	0 281 35	415 - 440 V~
		Undervoltage releases When the coil is de-energised, the circuit breaker will be tripped For DMX-SP 2500 and DMX ³ 1600
1	0 281 36	24 V~/=
1	0 281 37	48 V~/=
1	0 281 38	110 - 130 V~/=
1	0 281 39	220 - 250 V~/=
1	0 281 40	415 - 440 V~
		Module for delayed tripping To be used with above undervoltage releases For DMX-SP 2500 and 4000 and DMX ³ frame 1600 to 6300
1	0 288 62	110 V~/=
1	0 288 63	230 V~/=
		Motor operators To motorize a DMX-SP, it is possible to connect, to the motor operators, a release coil (undervoltage or trip on energising) and a closing coil For DMX-SP 2500 and DMX ³ 1600
1	0 281 20	24 V~/=
1	0 281 21	48 V~/=
1	0 281 22	110 - 130 V~/=
1	0 281 23	220 - 250 V~/=
1	0 281 24	415 - 440 V~
		Closing coils Enables remote closing of the circuit breaker if the closing spring is charged For DMX-SP 2500 and DMX ³ 1600
1	0 281 26	24 V~/=
1	0 281 27	48 V~/=
1	0 281 28	110 - 130 V~/=
1	0 281 29	220 - 250 V~/=
1	0 281 30	415 - 440 V~
		Signalling contact for draw-out version Inserted / test / draw-out signalling contact 1 changeover contact per position (up to 2 contacts with double accessory if the safety button for test position Cat.No 6 696 08 is not mounted) For DMX-SP 2500 and DMX ³ 1600
1	0 281 73	

Pack	Cat.Nos	Locking
		For DMX-SP 2500 and DMX ³ 1600
		Universal key locks To be used in combination with key locking support Cat.No 0 281 91
1	4 238 80	Key barrel and flat key with random mapping
1	4 238 81	Key barrel and flat key with fixed mapping EL43525
1	4 238 82	Key barrel and flat key with fixed mapping EL43363
1	4 238 83	Key barrel and star key with random mapping
		Key locking support in "open" or draw-out position
1	0 281 91	For locking a DMX-SP 2500 and a DMX ³ 1600 in "open" or draw-out position To be equipped with universal keylocks Cat.Nos 4 238 80/81/82/83
		Door locking Prevents opening of the door with the circuit breaker closed
1	0 281 84	Left-hand and right-hand side mounting
		Accessories
		For DMX-SP 2500 and DMX³ 1600
1	0 281 88	Mechanical counter Counts total number of operation cycles of the device
1	0 281 74	Contact «ready to close» with charged springs
1	0 281 75	Module with 6 auxiliary contacts
1	0 281 89	Rating mis-insertion device Prevents the insertion of a draw-out circuit breaker in an incompatible base
		For DMX-SP 2500 draw-out version
1	6 696 08	Inserted / test / draw-out lock button