

## Auxiliaries and accessories for DMX-SP 4000



### Pack Cat.Nos Control and signalling auxiliaries

Pack	Cat.Nos	Control and signalling auxiliaries
		<b>Shunt trip</b> When energised the circuit breaker will be tripped For DMX-SP 4000 and DMX <sup>3</sup> frame 2500 to 6300
1	0 288 48	24 V~/=
1	0 288 49	48 V~/=
1	0 288 50	110 - 130 V~/=
1	0 288 51	220 - 250 V~/=
1	0 288 52	415 - 480 V~
		<b>Undervoltage releases</b> When the coil is de-energised, the circuit breaker will be tripped For DMX-SP 4000 and DMX <sup>3</sup> frame 2500 to 6300
1	0 288 55	24 V~/=
1	0 288 56	48 V~/=
1	0 288 57	110 - 130 V~/=
1	0 288 58	220 - 250 V~/=
1	0 288 59	415 - 480 V~
		<b>Module for delayed tripping</b> To be used with above undervoltage releases For DMX-SP 2500 and 4000 and DMX <sup>3</sup> frame 1600 to 6300
1	0 288 62	110 V~/=
1	0 288 63	230 V~/=
		<b>Motor operators</b> To motorize a DMX-SP, it is possible to connect, to the motor operators, a release coil (undervoltage or trip on energising) and a closing coil For DMX-SP 4000 and DMX <sup>3</sup> frame 2500 to 6300
1	0 288 34	24 V~/=
1	0 288 35	48 V~/=
1	0 288 36	110 - 130 V~/=
1	0 288 37	220 - 250 V~/=
1	0 288 38	415 - 440 V~
1	0 288 40	480 V~/=
		<b>Closing coils</b> Enables remote closing of the circuit breaker if the closing spring is charged For DMX-SP 4000 and DMX <sup>3</sup> frame 2500 to 6300
1	0 288 41	24 V~/=
1	0 288 42	48 V~/=
1	0 288 43	110 - 130 V~/=
1	0 288 44	220 - 250 V~/=
1	0 288 45	415 - 480 V~
		<b>Signalling contact for auxiliaries</b> Signalling contact for shunt trips, undervoltage releases and closing coils For DMX-SP 4000 and DMX <sup>3</sup> frame 2500 to 6300
1	0 288 16	
		<b>Signalling contact for draw-out version</b> Inserted / test / draw-out signalling contact For DMX-SP 4000 and DMX <sup>3</sup> frame 2500 to 6300
1	0 288 13	3 changeover contacts per position

### Pack Cat.Nos Locking

Pack	Cat.Nos	Locking
		For DMX-SP 4000 and DMX <sup>3</sup> frame 2500 to 6300
		<b>Universal key locks</b> To be used in combination with key locking support Cat.Nos 0 281 94/0 288 28
1	4 238 80	Key barrel and flat key with random mapping
1	4 238 81	Key barrel and flat key with fixed mapping EL43525
1	4 238 82	Key barrel and flat key with fixed mapping EL43363
1	4 238 83	Key barrel and star key with random mapping
		<b>Key locking support in "open" position</b> For locking a DMX-SP 4000 and a DMX <sup>3</sup> in "open" position To be equipped with universal keylocks Cat.Nos 4 238 80/81/82/83
1	0 288 28	
		<b>Key locking support in draw-out position</b> For locking a DMX-SP and a DMX <sup>3</sup> in draw-out position To be equipped with universal keylocks Cat.Nos 4 238 80/81/82/83
1	0 281 94	
		<b>Door locking</b> Prevents opening of the door with the circuit breaker closed
1	0 288 20	Left-hand and right-hand side mounting
		<b>Padlocks in "open" position</b>
1	0 288 21	Padlocking system for ACB (padlock not supplied)
1	0 288 26	Padlocking system for shutters (padlock not supplied)
		<b>Accessories</b>
		<b>For DMX-SP 4000 and DMX<sup>3</sup> frame 2500 to 6300</b>
1	0 288 25	Rating mis-insertion device Prevents the insertion of a draw-out circuit breaker in an incompatible base
1	0 288 23	Operations counter Counts total number of operation cycles of the device
1	0 288 14	Contact "ready to close" with charged springs
1	0 288 15	Additional signalling contact
1	0 288 79	Lifting plate
		<b>For DMX-SP 4000</b>
1	6 696 16	Trip contact To be ordered together with the DMX-SP 4000 for factory assembly