


Flexible cover universal DLP trunking 50 x 150 and 50 x 170 - 65 mm cover

White
length: 2 m



 
 



 
 
Cat.Nos for 50 x 150 trunking




 
 
 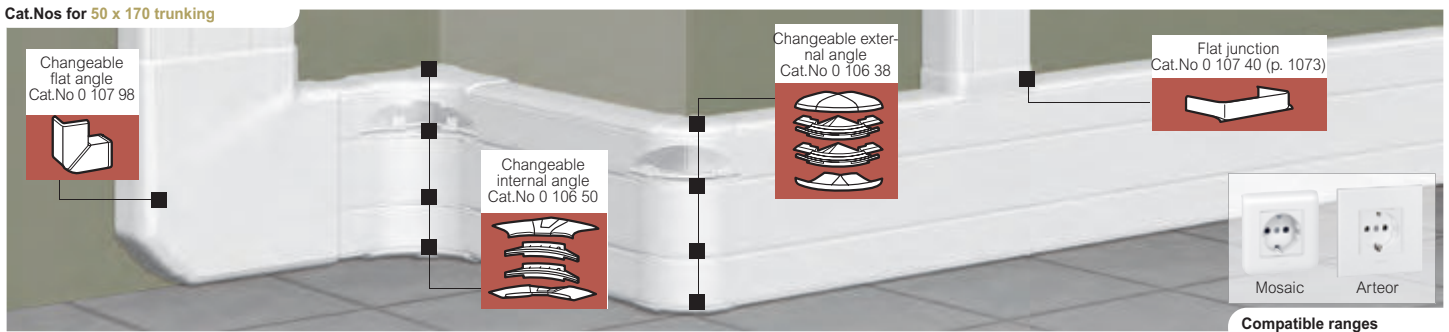




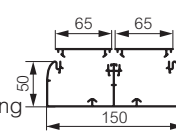

Cat.Nos for 50 x 170 trunking

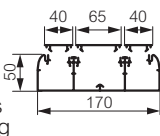

Selection chart **p. 1068-1069**
Wiring capacity chart **p. 1074-1075**

Pack	Cat.Nos	Flexible cover universal trunking 50 x 150
12'	0 104 27	Trunking with partition Supplied with: - one 50 x 150 mm body - two flexible 65 mm width covers Fits onto the whole trunking including in internal and external angles Installation: can be used with Mosaic/Arteur ranges or DIN rail equipment Length 2 m 
24'	0 105 82	Partition  Separation partition Length 2 m
20	0 106 91	Joints  Body joint For aligning bases during installation
20	0 106 92	 Body joint, attached with adhesive (fit at the end of installation)
10	0 108 01	 Cover joint for 65 mm cover
Angles for flexible cover universal trunking 50 x 150		
Internal and external bends Include the 3 components making the angle (parts for the top and bottom and the partition junction) on which the flexible cover is fitted		
5	0 106 06	 Changeable internal bend, from 85° to 95° for 50 x 150 and 50 x 195 mm trunkings
5	0 106 35	 Changeable external bend, from 60° to 120° for 50 x 150 and 50 x 195 mm trunkings
5	0 107 89	Flat angle  90° flat angle
10	0 107 03	End cap for flexible cover universal trunking 50 x 100  Left or right end cap

Pack	Cat.Nos	Flexible cover universal trunking 50 x 170
4'	0 104 67	Trunking with partition Supplied with: - one 50 x 170 mm body - one flexible 65 mm width cover and two flexible 40 mm width covers Fits onto the whole trunking including internal and external angles Installation: can be used with Mosaic/Arteur ranges or DIN rail equipment Length 2 m 
24'	0 105 82	Partition  Separation partition Length 2 m
20	0 106 91	Joints  Body joint For aligning bases during installation
20	0 106 92	 Body joint, attached with adhesive (fit at the end of installation)
10	0 108 01	 Cover joint for 65 mm cover
10	0 108 00	 Cover joint for 40 mm cover
Angles for flexible cover universal trunking 50 x 170		
Internal and external bends Include the 4 components making the angle (parts for the top and bottom and the 2 partition junctions) on which the flexible cover is fitted		
5	0 106 50	 Changeable internal bend, from 85° to 95° for 50 x 170 and 50 x 195 mm trunkings
5	0 106 38	 Changeable external bend, from 60° to 120° for 50 x 170 and 50 x 195 mm trunkings
2	0 107 98	Flat angle  90° flat angle
5	0 107 10	End cap for flexible cover universal trunking 50 x 170  Left or right end cap

Junctions and accessories
p. 1073

1: Number of metres in pack