

Viking 3 terminal blocks – spring connection

 
 
 
 
 


for copper cable

		Product detail p. 56-57		TERMINAL TYPE		
0372 60 0372 61 0372 64 0372 40 0372 69 0372 68 0372 02 0372 47 0372 21 0372 42	Connection p. 56	1 connection - 1 entry/1 exit				
		1 connection - 1 entry/2 exits				
		1 connection - 2 entries/2 exits				
		2 connections - 2 levels				
0372 70 0372 71 0372 72 0372 12	Protection p. 56	1 connection - 1 entry/1 exit - metal base				
		1 connection - 1 entry/2 exits - metal base				
		1 connection - 2 entries/2 exits - metal base				
0372 80 0372 82 0372 83 0372 84	Disconnection p. 57	1 connection	Open (to be equipped)			
			For fuse cartridge 5 x 20 with handle lever			
			For fuse cartridge 5 x 20 with handle lever + blown fuse indicator			
			For neutral circuit with handle lever			
			For standard circuit	With handle lever With mini lever		
			For circuit not broken	With handle lever With mini lever		
0372 54	Function blocks p. 57	1 connection - 2 entries/2 exits	Diode carrier 1N4007			
		2 connections - 2 entries	Diode carrier 1N4007			
			With voltage presence LED			

1 : Blown fuse indicator 12/24/48V_~ /~ Cat. No. 0375 24 or 110/250V_~ Cat. No. 0375 25 (p. 59)
 2 : Lower level only
 3 : Upper level only

accessories

for Viking 3 terminal blocks - spring connection

TERMINAL BLOCK				INSULATION		BRIDGING COMBS			MEASUREMENT	ASSOCIATED PRODUCTS						
Nominal cross section (mm ²)	Width (mm)	Colour	Cat. Nos.	End cap	Separation and insulation divider	Comb for 2 blocks	Comb for 3 blocks	Comb for 10 blocks	Test meter adaptor							
4	5	●	0372 60	0375 86	0375 95	0375 02	-	0375 01	0375 27	 End stops p. 58						
		●	0372 00													
		●	0372 20													
	6	●	0372 61								built-in	0375 95	0375 05	-	0375 04	0375 27
		●	0372 01													
		●	0372 21													
6	8	●	0372 62	built-in	-	-	0375 07	-	0375 27							
		●	0372 02													
10	10	●	0372 63	built-in	-	0375 82	-	-	-		 Label holder for end stop p. 58					
		●	0372 03													
16	12	●	0372 64	built-in	-	0375 85	-	-	-							
		●	0372 04													
4	5	●	0372 40	0375 87	0375 95	0375 02	-	0375 01	0375 27	 End caps p. 58						
		●	0372 41													
		●	0372 42													
4	6	●	0372 43	built-in	0375 95	0375 05	-	0375 04	0375 27							
		●	0372 44													
4	5	●	0372 46	0375 88	0375 95	0375 02	-	0375 01	0375 27							
		●	0372 47													
4	6	●	0372 69	built-in	-	0375 05	-	0375 04	0375 27							
		●	0372 09													
4	5	●	0372 67	0375 89	0375 96	0375 02	-	0375 01	0375 27 ³		 Dividers p. 58					
		●	0372 07													
4	6	●	0372 68	built-in	0375 96	0375 05	-	0375 04	0375 27 ³							
		●	0372 08													
4	5		0372 70	0375 86	-	-	-	-	-	 Blown fuse indicators p. 59						
			0372 71													
			0372 72													
			0372 73													
			0372 74													
4	5		0372 10	0375 87	-	-	-	-	-							
			0372 11													
			0372 12													
			0372 79													
2-5	6	●	0372 80	0375 90	-	0375 05	-	0375 04	0375 27		 Shielding p. 59					
		●	0372 81													
		●	0372 81 + 0375 24/25 ¹													
		●	0372 82													
		●	0372 83													
		●	0372 84													
		●	0372 85													
		●	0372 86													
			0375 90							-		0375 05	-	0375 04	0375 27	
			0375 90							-		0375 05	-	0375 04	-	
	0375 90	-	0375 05	-	0375 04	0375 27										
4	5	●	0372 54	0375 88	0375 95	0375 02	-	0375 01	-	 Starfix ferrules p. 78						
		●	0372 55													
		●	0372 56													
4	5		0375 89	0375 89	0375 96	0375 02	-	0375 01	-							
			0375 89								0375 96	0375 02 ²	-	0375 01 ²	-	