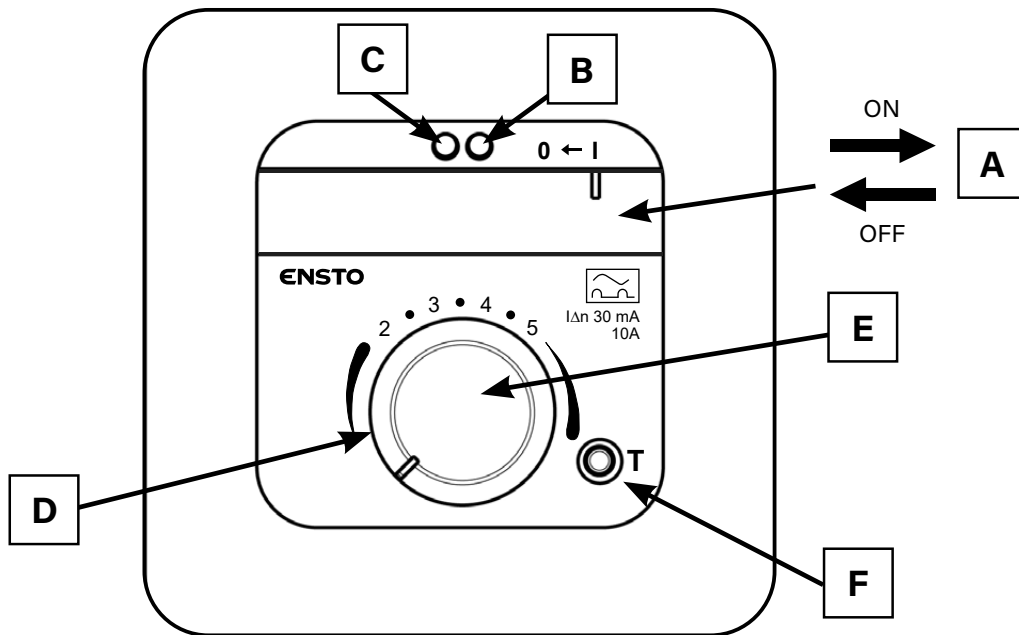


 





# Quick Guide

## Floor heating thermostat

# ENSTO

 
ECO10BTW-J



- A** **Switch**  

  - Extreme position on the right:** power is on
  - Extreme position on the left:** power is off
  
- B** **LED indicator B**  
  -  **Green:** the thermostat is on and the heating is off
  -  **Red:** the heating is on
  
- C** **LED indicator C**  
  -  **Blue flashing:** Bluetooth pairing is in progress
  -  **Blue static:** temperature change is activated
  -  **Blue flashing fast:** resetting to factory defaults
  
- D** **Bluetooth button** is under the adjustment knob (**E**)
  
- E** **Adjustment knob**  
  - Turn clockwise:** the temperature rises
  - Turn counter-clockwise:** the temperature drops
  
- F** **Residual Current Device (RCD) test button**  
**Press the button:** the current should go off, the slide switch A moves to the OFF position and the LED indicators turn off.  
**Test** the RCD once every three months

**Use energy saving features:**  
Ensto Heat control app + Bluetooth connection

**Note:**

-  **Blue and red LED indicator flashes alternately:** faulty floor sensor