


# Quick Guide

## Floor heating thermostat

# ENSTO

ECO16BT-E

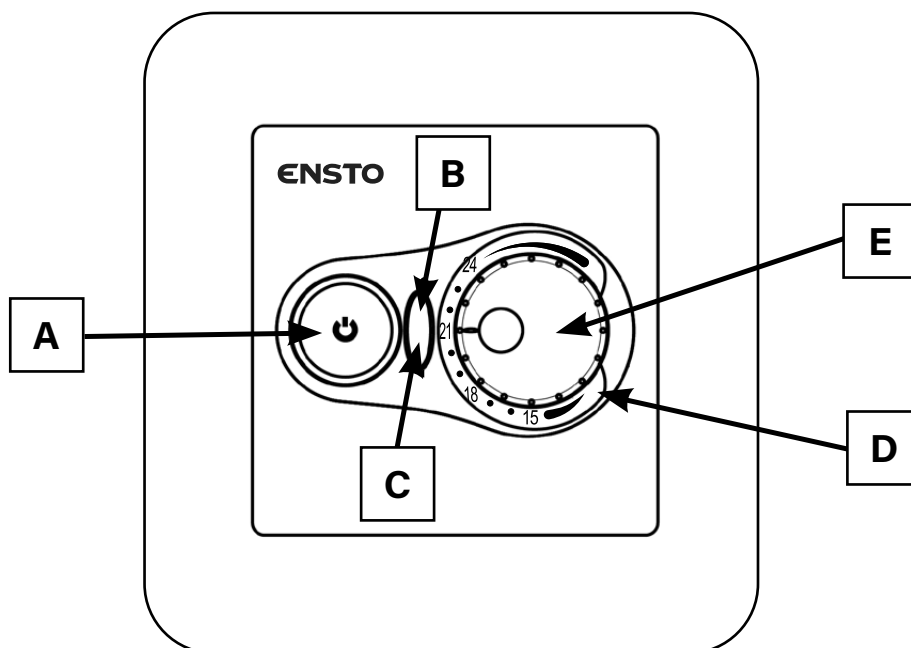

### A Switch

**Down:** power is on

**Up:** power is off

### B LED indicator B

● **Green:** the thermostat is on and the heating is off

● **Red:** the heating is on

### C LED indicator C

☀ **Blue flashing:** Bluetooth pairing is in progress

● **Blue static:** temperature change is activated

● **Blue flashing fast:** resetting to factory defaults


### D Bluetooth button is under the adjustment knob (E)

### E Adjustment knob

**Turn clockwise:** the temperature rises

**Turn counter-clockwise:** the temperature drops

Note:

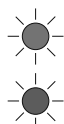

**Blue and red LED indicator flashes alternately:**  
faulty floor sensor