


Quick Guide

Floor heating thermostat

ENSTO

ECO16BT-EX

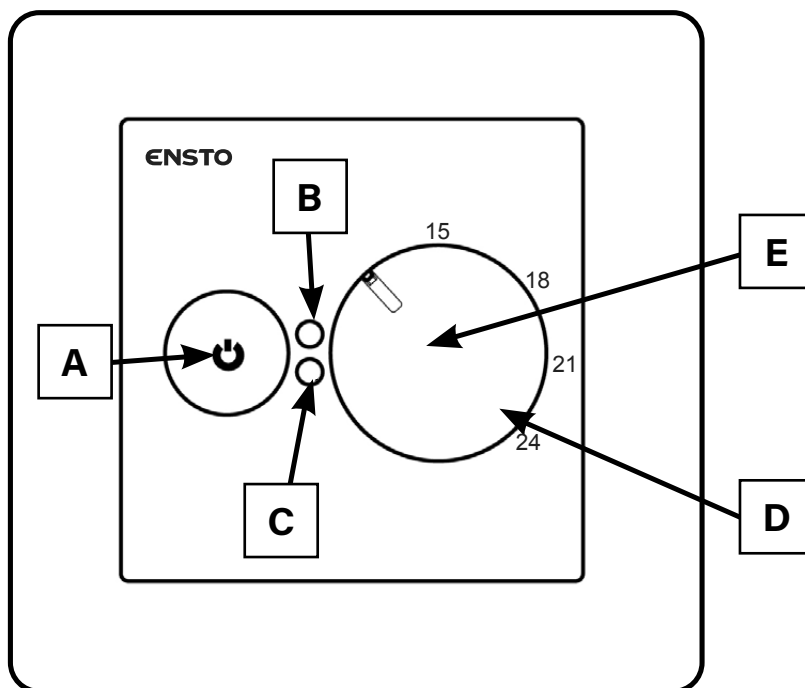

A

Switch

Down: power is on

Up: power is off

B

LED indicator B

● **Green:** the thermostat is on and the heating is off

● **Red:** the heating is on

C

LED indicator C



Blue flashing: Bluetooth pairing is in progress

● **Blue static:** temperature change is activated

● **Blue flashing fast:** resetting to factory defaults

D

Bluetooth button is under the adjustment knob (**E**)

 
E

Adjustment knob

Turn clockwise: the temperature rises

Turn counter-clockwise: the temperature drops

Note:



Blue and red LED indicator flashes alternately: faulty floor sensor