2 810 92xx yy



Safety instructions

(B)(A)(I)(IE)(US)(SG)

This product should be installed in compliance with installation rules, preferably by a qualified electrician. Incorrect installation and/or incorrect use can lead to risk of electric shock or fire.

Before carrying out the installation, read the instructions and take account of the product's specific mounting location.

Do not open up, dismantle, alter or modify the device except where specifically required to do so by the instructions.

All Legrand products must be opened and repaired exclusively by personnel trained and approved by Legrand. Any unauthorised opening or repair completely cancels all liabilities and the rights to replacement and guarantees. Use only Legrand brand accessories.

Presentation



-20°C+70°C	-5°C+35°C	≥40mm	—————————————————————————————————————	8 mm 1 4 mm ²
((10)	*		The state of the s	
Sound	day/dusk	30S	high/low	


Technical characteristics

 
		0	⊙	0	6	o					
	☆			====		- □	*				
240V~	5400W	5200VA	20200VA	3200VA	3100W	3100W	7100VA				
100V~	5200W	5100VA	20100VA	3100VA	350W	350W	750VA				

- 1 Incandescent lamp
- 2 Electronic step-down converter for extra low-voltage incandescent lamps(e.g.halogen)
- (a.g.halogen) Iron core transformer for extra low-voltage incandescent lamps(e.g.halogen)
- Fluorescent lamp
- 6 Self-ballasted fluorescent compact lamp(CFL)
- Self-ballasted LED lamp
- Inductive ballast fluorescent lamp with compensator

Wiring

• Wire the connected switch.

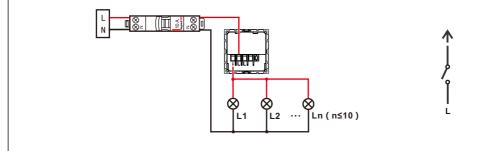



Some times, the leakage current will cause the ghost flash, please connect the compensator.

