 


Requires you to buy and install the «... with Netatmo» connected starter pack

Gateway power outlet Control and Home/Away wireless

Master control

 
Control Module








Pack contents






Wireless 4 scenes control

 Frequency bands: 2.4 - 2.4835 GHz Power level: < 100 mW 1 Start the wireless 4 scenes control configuration



Press the middle of the wireless master switch **until** its light briefly turns green, **and then stop pressing**. The indicator lights on the products which you have wired will turn green.

 
(2) Prepare the wireless 4 scenes control






Remove the battery's protective strip

 Briefly press one of the button of the wireless control to activate it. The indicator lights will flash green and then switch off.



The 2 indicator lights will flash green and then switch off. Your wireless control is ready.

(3) Complete the configuration

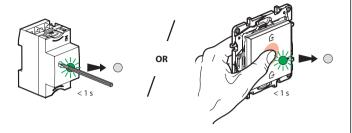

To complete your installation,
briefly press the configuration button of the **Control Modul** or in the middle of
the **wireless master switch**.

All the indicator lights on the products switch off.

Personalize your scenes

 
from **Legrand Home + Control app** (**Settings / Scenarios** menu) **Let yourself be guided**




LEGRAND - Pro and Consumer Service - BP 30076 87002 LIMOGES CEDEX FRANCE • www.legrand.com

Battery replacement

If the led flashes 3 times in red when pressing a button -> battery is low



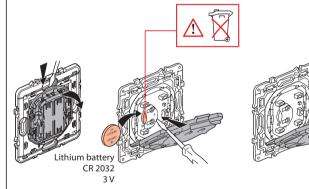

SIMPLIFIED **EU** DECLARATION OF CONFORMITY

The undersigned,

Legrand

declares that the radio-electric equipment referred to in these instructions complies with directive 2014/53/EU.

The full text of the EU declaration of conformity is available on the following website:

www.legrand.com/ecatalogue