

Starting Address of the Group Registers (Dec)	Starting Address of the Group Registers (Hex)	System Version (Release)	System Version (Build)	Group Name (Text)	Group Code (Hex)	Group Complexity (Hex)	Group Version (Hex)
45056	B000	-	-	<b>STATION DATA</b> (status, commands, registers, settings)	B001	10	0100

**MODBUS PROTOCOL DETAILS**

Function Code (Dec)	Exception Codes (Dec)	Data Encoding
1	01, 02, 03, 04	"Big Endian" (most significant byte first)
2	01, 02, 03, 04	
3	01, 02, 03, 04	
4	01, 02, 03, 04	
5	01, 02, 03, 04	
6	01, 02, 03, 04	
15	01, 02, 03, 04	
16	01, 02, 03, 04	

**MODBUS OVER SERIAL DETAILS**

Physical Layer	Transmission Modes	Device Addressing	Baud Rates (bit/s)	Data Bits	Data bits transmission sequence	Parity	Stop Bits
standard EIA/TIA 485 (RS-485) two-wire configuration	RTU	1÷247 (default 1)	9.600, 19.200, 38.400 (default 19.200), option 57.600	8	Least significant bit first	no, odd, even (default even)	1, 2 (default 1)

**MASTER/SLAVE COMMUNICATION TIMING**

Timer Description	Timer Value (msec)
Inter-character time-out	
Response delay (from master request)	
Delay Time (between two master transmissions)	

REFER ALSO TO:

[www.modbus.org](http://www.modbus.org)

- MODBUS over serial line specification and implementation guide V1.02
- MODBUS APPLICATION PROTOCOL SPECIFICATION V1.1b

Register Number	Register Address (Dec)	Register Address (Hex)	Dimension [bit]	Description	Note	Read Function Codes (Dec)	Write Function Codes (Dec)	Data Storing (2)
	45056	B000	1	station powered	1=powered	2		
	45057	B001	1	working mode	0=stand alone 1=managed After reset or power outage, the charge station must keep the working mode in memory	2		Y
	45058	B002	1	charge state	1 = charge terminated (only available with charge in Mode 3 EVPlug)	2		

Register Number	Register Address (Dec)	Register Address (Hex)	Dimension [bit]	Description	Note	Read Function Codes (Dec)	Write Function Codes (Dec)	Data Storing (2)
	45056	B000		STATION COMMANDS				
	45056	B000	1	Firmware Reset			5, 15	
	45057	B001	1	Statistics Reset			5, 15	
	45058	B002	1	Not implemented	0=not implemented	1	5, 15	
	45059	B003	1	Not implemented	0=not implemented	1	5, 15	
	45060	B004	1	Not implemented	0=not implemented	1	5, 15	
	45061	B005	1	Not implemented	0=not implemented	1	5, 15	
	45062	B006	1	EVPlug charge authorization	1=Charge permitted, 0=Charge not permitted (by default, position before each charge process) This bit control the autorisation of charge. You can stop/start the charge with this bit. Take care, the EV can take time (> 30s) in order to respond to the charge request. if you stop the charge, the EVPlug stays locked and goes in waiting state.	1	5, 15	
	45063	B007	1	EVPlug disable	1=Enable (by default), 0=Disable This bit is able to activate/desactivate the detection of the EVPlug. If the EVPlug is already detected (in charge, waiting ...) and you deactivate, the EV plug will be unlocked and stopped.	1	5, 15	
	45064	B008	2	EV Charging Level 1 (Configurable) - LSb EV Charging Level 2 (Configurable) - MSb	00 = 100%, 01 = 75%, 10 = 50%, 11 = 50%	1	15	
	45066	B00A	1	Reserved		1	5, 15	
	45067	B00B	1	Reserved		1	5, 15	
	45068	B00C	1	Start/Stop	1=START (led on), 0=STOP (led off) Control the push button on the HMI, when there is no plug connected this bit doesn't change	1	5, 15	
	45069	B00D	1	Not implemented	0=not implemented	1	5, 15	

Register Number	Register Address (Dec)	Register Address (Hex)	Dimension [word]	Bit Position	Description	Type	Scale	Unit	Range	Note	Read Function Code (Dec)	Data Storing (2)
<b>STATION REGISTERS</b>												
45056	B000	B000	1	0x0001 : Error condition detected 0x0002 : Charge request 0x0004 : Charge in progress 0x0008 : Charge waiting 0x0010 : RFID read 0x0020 : Date and time request 0x0040 : Remote identification request 0x0100 : EVPlug charge process (1=active, 0=inactive) 0x0200 : EVPlug inserted 0x0400 : EVPlug contactor closed 0x0800 : EVPlug locked 0x1000 : Reserved 0x2000 : Reserved 0x4000 : Reserved	Station State : Charge request = 1, just after a connection ; Charge request = 0 if the Charging station receives an authorisation (COILS register B006 or B00A) ; Charge in progress = depending of the contactor position ; Charge waiting = 1, just after the charge request and waiting the EV charge authorisation side ;						4	
45057	B001	B001	1	0x0001 : Main power failure 0x0002 : Low battery voltage 0x0010 : EVPlug locking system malfunction (unlock) 0x0020 : EVPlug locking system malfunction (lock) 0x0040 : EVPlug maximum charging current exceeded 0x0080 : EVPlug CP Failure detected (EV/cable/EVSE side) 0x0100 : EVPlug CP Failure detected (EVSE side) 0x0200 : EVPlug PP non-standard value detected 0x0400 : EVPlug diode not detected on EV side 0x0800 : EVPlug contactor failure 0x1000 : Reserved 0x2000 : 6mA failure detection	Station Errors 0x2000 : 6mA failure detection is only available on the ref. 0580XX						4	Y
45058	B002	B002	5		Last UserID Read (if no RFID=0000 0000 0000 0000 0000)						4	
45063	B007	B007	1		Backup Battery Voltage Level	unsigned integer	1/100	V	0..1500		4	
45064	B008	B008	1	0x0001 : Two side version 0x0002 : RFID reader (activate=1, not=0) 0x0004 : EVPlug lock (present=1, absent=0) 0x0008 : Ventilation system (yes=1, no=0) 0x0010 : Three phase (3P=1, 1P=0) 0x0020 : Type station (Plastic=1, metallic=0) 0x0040 : DOMPlug (present=1, absent=0) 0x0080 : Current range (1=32to25to20to16A, 0=20to16A)	Hardware Configuration						4	Y
45065	B009	B009	3		Serial Number ( 1st word Serial number, 2nd word Manufacturing date, 3rd word Reference)						4	Y
45068	B00C	B00C	1		Rated Current	unsigned integer	1/100	A	0..8000		4	
45069	B00D	B00D	2		HW Version				n.n.n.n		4	Y
45071	B00F	B00F	2		SW Version				n.n.n.n		4	Y
45073	B011	B011	1		Max Assignable Charging Current	unsigned integer	1/100	A	0..8000	(3)	4	Y
45074	B012	B012	1		Phase 1 Instant Current (R)	unsigned integer	1/100	A	0..8000		4	
45075	B013	B013	1		RESERVED (return 0000h)							
45076	B014	B014	1		RESERVED (return 0000h)							
45077	B015	B015	1		Phase 1 Average Current (R)	unsigned integer	1/100	A	0..8000		4	
45078	B016	B016	1		RESERVED (return 0000h)							
45079	B017	B017	1		RESERVED (return 0000h)							
45080	B018	B018	1		Phase 1 Max Peak Current (R)	unsigned integer	1/100	A	0..8000		4	
45081	B019	B019	1		RESERVED (return 0000h)							
45082	B01A	B01A	1		RESERVED (return 0000h)							
45083	B01B	B01B	2		Actual Charging Time	unsigned integer	1	sec	0..4294967295		4	
45085	B01D	B01D	2		Actual Idle Time	unsigned integer	1	sec	0..4294967295		4	
45087	B01F	B01F	2		Actual Waiting Time	unsigned integer	1	sec	0..4294967295		4	
45089	B021	B021	5		UserID currently served (if no RFID=0000 0000 0000 0000 0000)						4	
45094	B026	B026	2		Total number of charge	unsigned integer			0..4294967295		4	Y
45096	B028	B028	1		Total Average charging current (Full price)	unsigned integer	1/100	A	0..8000		4	Y
45097	B029	B029	1		Total Average charging current (Low cost price)	unsigned integer	1/100	A	0..8000		4	Y
45098	B02A	B02A	2		Total charging time (Full price)	unsigned integer	1	sec	0..4294967295		4	Y
45100	B02C	B02C	2		Total charging time (Low cost price)	unsigned integer	1	sec	0..4294967295		4	Y

				HISTORIC STATION REGISTERS									
N°1	45102	B02E	2	Charge ID						0..4294967295	4	Y	
	45104	B030	5	UserID (if no RFID=0000 0000 0000 0000 0000)							4	Y	
	45109	B035	2	<b>First Word</b>	Charge Properties							4	Y
				0x0001 : Plug type (1=EV)									
				0x0002 :									
				0x0004 : Charge state (1=terminated)									
				0x0008 : Main Power Failure									
				0x0010 : Generic HW error (recoverable)									
				0x0020 : Generic HW error (non-recoverable)									
				0x0040 : Phase charge (1=Three,0=Mono)									
				<b>Second Word</b>									
				0x0001 : Main power failure									
				0x0002 : Low battery voltage									
				0x0010 : EVPlug locking system malfunction (unlock)									
				0x0020 : EVPlug locking system malfunction (lock)									
0x0040 : EVPlug maximum charging current exceeded													
0x0080 : EVPlug CP Failure detected (EV/cable/EVSE side)													
0x0100 : EVPlug CP Failure detected (EVSE side)													
0x0200 : EVPlug PP non-standard value detected													
0x0400 : EVPlug diode not detected on EV side													
0x0800 : EVPlug contactor failure													
0x1000 : Reserved													
45111	B037	4	Date and Time IN							1 Word (MSW): DD-MM 2 Word : YYYY 3 Word : hh-mm 4 Word (LSW) : ss-(nd)	4	Y	
45115	B03B	4	Date and Time OUT							1 Word (MSW): DD-MM 2 Word : YYYY 3 Word : hh-mm 4 Word (LSW) : ss-(nd)	4	Y	
45119	B03F	1	Phase 1 Average Current (R)	unsigned integer	1/100	A	0..8000				4	Y	
45120	B040	1	RESERVED (return 0000h)									Y	
45121	B041	1	RESERVED (return 0000h)									Y	
45122	B042	1	Phase 1 Max Peak Current (R)	unsigned integer	1/100	A	0..8000				4	Y	
45123	B043	1	RESERVED (return 0000h)									Y	
45124	B044	1	RESERVED (return 0000h)									Y	
45125	B045	2	Charging Time	unsigned integer	1	sec	0..4294967295				4	Y	
45127	B047	2	Waiting Time	unsigned integer	1	sec	0..4294967295				4	Y	
N°2	45129	B049	27									Y	
N°3	45156	B064	27									Y	
N°4	45183	B07F	27									Y	
N°5	45210	B09A	27									Y	
N°6	45237	B0B5	27									Y	
N°7	45264	B0D0	27									Y	
N°8	45291	B0EB	27									Y	
N°9	45318	B106	27									Y	
N°10	45345	B121	27									Y	

20481	20480	5000	114	Single-phase Electric Measurement								
	20480	5000	2	Phase 1 Current Value (R)	unsigned integer	1/100	A			Expressed on "numeric coding"; without mark	4	
	20482	5002	2	RESERVED (return 0000h)								
	20484	5004	2	RESERVED (return 0000h)								
	20486	5006	52	RESERVED (all return "8000h")								
	20538	503A	2	Single-phase Active Power	unsigned integer	1/100	W			Expressed on "numeric coding"; without mark	4	
	20540	503C	11	RESERVED (all return "8000h")								
	20551	5047	2	Phase 1 Active Power	unsigned integer	1/100	W			Expressed on "numeric coding"; without mark	4	
	20553	5049	2	RESERVED (return 0000h)								
	20555	504B	2	RESERVED (return 0000h)								
	20557	504D	35	RESERVED (all return "8000h")								
	20592	5070	2	Positive Single-phase Active Energy	unsigned integer	1	Wh			Expressed on "numeric coding"; without mark	4	Y

Register Number	Register Address (Dec)	Register Address (Hex)	Dimension [word]	Bit Position	Description	Scale	Unit	Range	Note	Read Function Codes (Dec)	Write Function Codes (Dec)	Data Storing (2)		
	45056	B000			STATION SETTINGS									
	45056	B000	4		System Date and time (in RW)				1 Word (MSW): GG-MM 2 Word: AAAA 3 Word: hh-mm 4 Word (LSW): ss-(nd)	3	6, 16			
	45060	B004	2		Not implemented					3	6, 16			
	45062	B006	2		Not implemented					3	6, 16			