

IR barriers for windows

3518-3518/50-3518/150-3519

Description

The device consists of 2 columns, one operating as a TRANSMITTER (TX), and the other as a RECEIVER (RX). Both have a microprocessor for the management of the alarm and the synchronisation of the infrared beams. The table that follows shows the alarm tripping times based on the rays broken:

OR: alarm with at least one ray broken (maximum sensitivity) AND: alarm with at least two rays broken (minimum sensitivity).

Rays broken \ Tripping time	Microswitch setting			
	OR		AND	
	100	200	100	200
only 1	2 sec.	2 sec.	-	-
2 not adjoining	1 sec.	1 sec.	1 sec.	1 sec.
2 adjoining or all	100 ms	200 ms	100 ms	200 ms

Anti insetti

Per installazioni con distanza tra RX e TX maggiori di 1 m, l'oscuramento di un solo raggio se avviene direttamente su una delle barriere (per esempio a causa della presenza di un insetto), non provoca allarme. L'allarme è però immediato se vengono interrotti altri raggi.

 

Range and connection

The barriers have a maximum range of 12 m indoors and 6 m outdoors. They are connected to the rest of the burglar-alarm system by contact interfaces. If the maximum absorption of the burglar-alarm allows it, it is possible to connect one or more barriers using interface 3480V12 o F482V12 (one interface per barrier, and only for item 3518/50 and 3518). In alternative, due to absorption limitation or when barriers 3518/150 and 3519 are installed, contact interfaces 3480 or F482 must be used for the connection to the burglar-alarm system, as well as a power supply E47/12 for powering the barriers. In this way up to a maximum of seven barriers 3518 or six barriers 3519 can be installed.


Technical data

- Range:	12 m high power indoors and 6 m outdoors, 3 m low power both indoors and outdoors.
- Power supply:	12 Vdc +/- 2 Vdc
- Max. absorption:	50 mA
- Operating temperature:	(-25) – (+55)°C
- Protection index:	IP44

Dimensional data

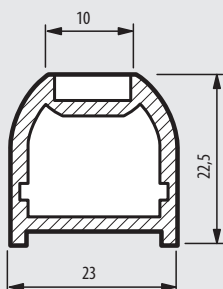

Item	Length A (mm)
3518	1080
3518/50	580
3518/150	1580
3519	2080

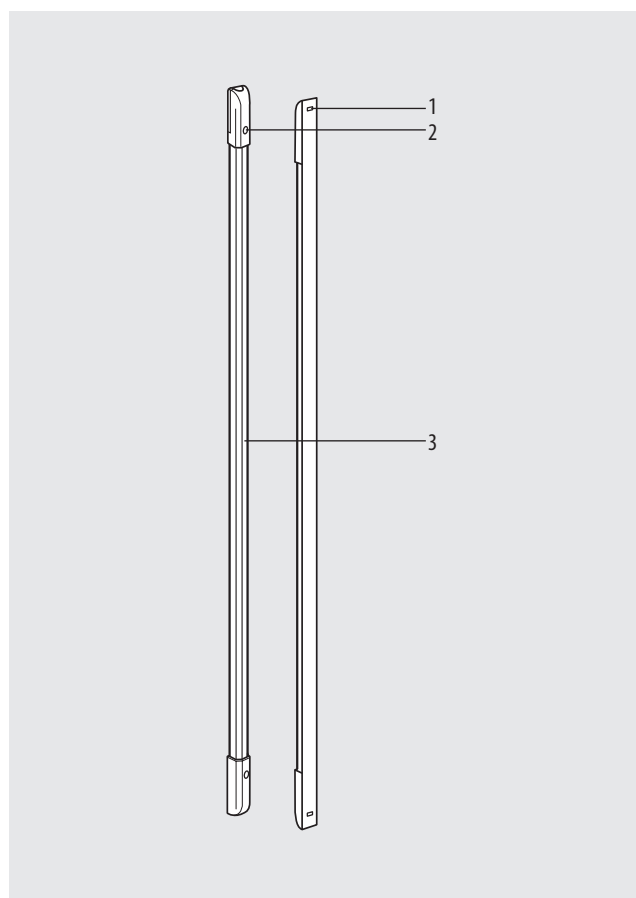


Legend

- 1 - Receiver;
- 2 - Transmitter;
- 3 - IR emission zone.

Configuration


The barriers are sold configured for operation in "AND" mode, with tripping time: 200ms.
To change the mode use the internal microswitch as shown in the following table:

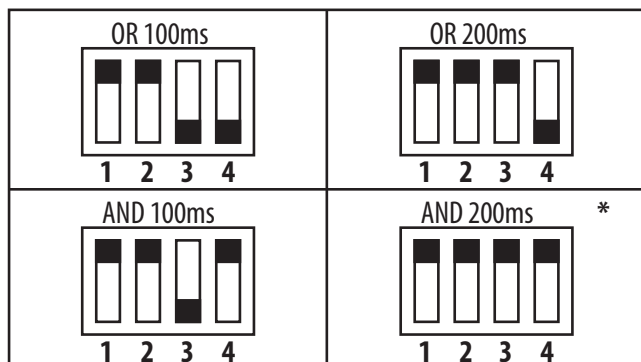

* default

Wiring diagram

Connection of the barrier to the item 3480V12 or F482V12

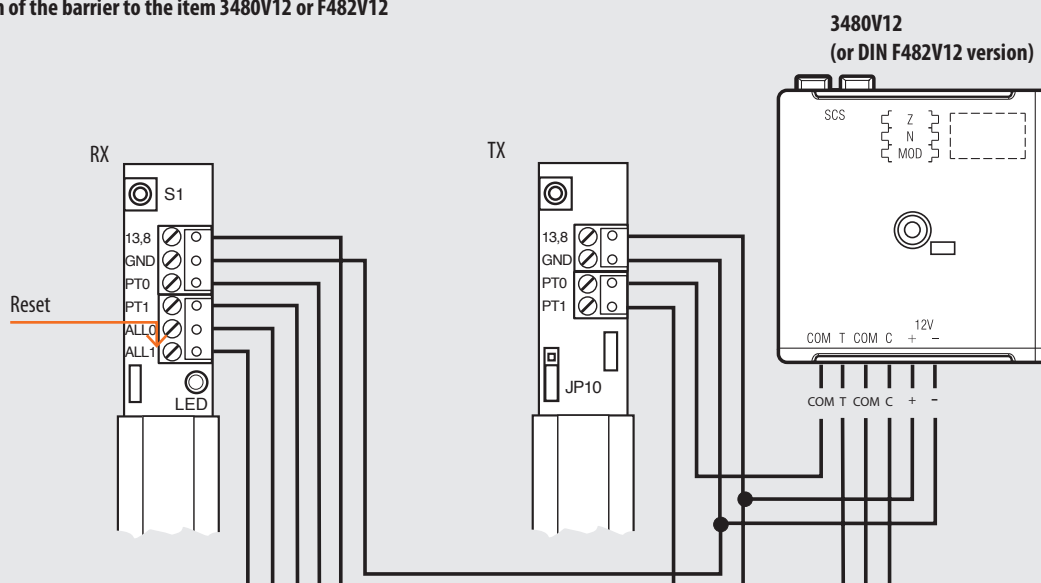

If the max. consumption of the system allows it, it is possible to connect the 3518 or 3518/50 barrier directly to only one interface item 3480V12 or F482V12.

WARNING: use a 30 m max twisted, unshielded cable.

Connection table

MS1	Receiver (RX)
1	+13.8V
2	GND
3	PT0 Tamper C
4	PT1 Tamper N.C.
5	ALL0 Alarm C
6	ALL1 Alarm N.C.


MS1	Transmitter (TX)
1	+13.8V
2	GND
3	PT0 Tamper C
4	PT1 Tamper N.C.

IR barriers for windows

3518-3518/50-3518/150-3519

Configuration


The barriers are sold configured for operation in "AND" mode, with tripping time: 200ms.
To change the mode use the internal microswitch as shown in the following table:

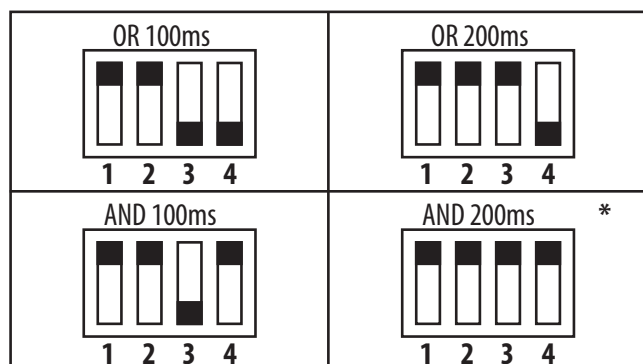

* default

Wiring diagram

Connection of the barrier to the item 3480V12 or F482V12

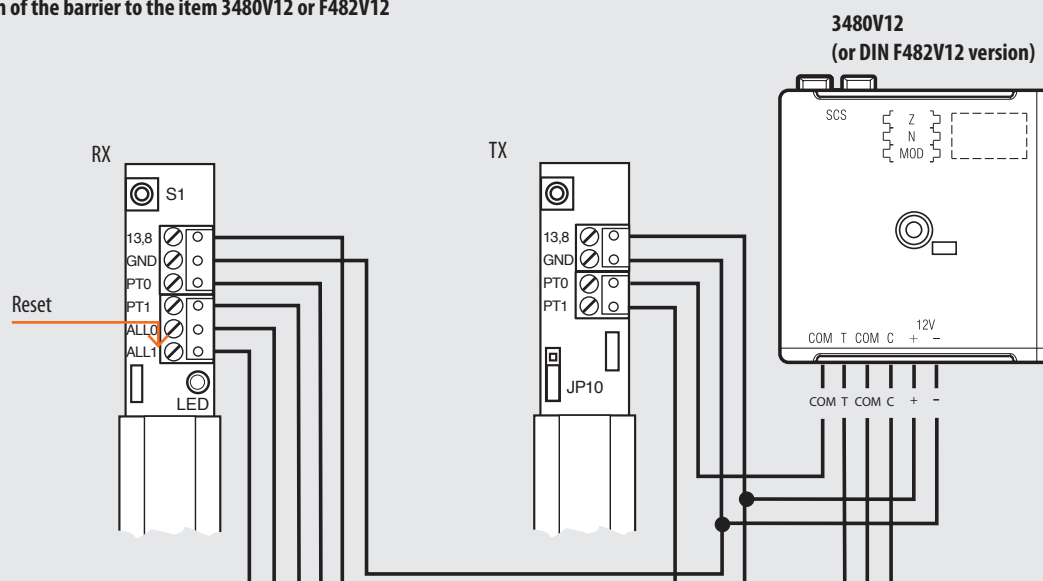

If the max. consumption of the system allows it, it is possible to connect the 3518 or 3518/50 barrier directly to only one interface item 3480V12 or F482V12.

WARNING: use a 30 m max twisted, unshielded cable.

Connection table

MS1	Receiver (RX)
1	+13.8V
2	GND
3	PT0 Tamper C
4	PT1 Tamper N.C.
5	Allo Alarm C
6	All1 Alarm N.C.

MS1	Transmitter (TX)
1	+13.8V
2	GND
3	PT0 Tamper C
4	PT1 Tamper N.C.