


Emergency lighting LED luminaires

Cat. Nos: 6 600 32/42/44/45/47/48

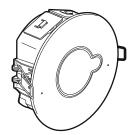

CONTENTS

1. Description	1
2. Installation	2
3. Operation	3
4. Connection	3
5. Maintenance	4
6. Compliance and approvals	5
7. Equipment and accessories	5

230 V standard


1. DESCRIPTION


IP42 - IK07 emergency lighting LED luminaires Class II:

IP20
IP42

Cat. No.	Flux/ standby power	Mode	M pwr cons. (W)	NM pwr cons. (W)	Batteries	No. of LEDs
6 600 32	100 lm/1 hr	NM	-	1.45	Ni-Cd	2
6 600 42	100 lm/1 hr	M/NM	2.2	0.8	Ni-Cd	4
6 600 44	200 lm/1 hr	M/NM	2.4	1	Ni-Cd	4
6 600 45	350 lm/1 hr	M/NM	1.9	0.4	Ni-MH	8
6 600 47	200 lm/2 hrs	M/NM	1.9	0.4	Ni-MH	6
6 600 48	100 lm/3 hrs	M/NM	2.5	1	Ni-Cd	4

 1. DESCRIPTION (CONTINUED)

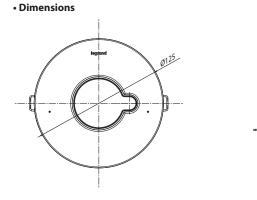



Page

Technical characteristics

Power supply:

230 V \sim - 50/60 Hz

Equipped with screw terminals 2.5 $\rm mm^2$ max. (draw-out connector). Class II: \square


Operating temperature: 0°C to +40°C

Connection to remote control 0 039 00/01 for setting to rest state during intentional mains power breaks.

Remote control input terminals protected against connection errors.

Conforming to standards: UNE EN 60598-2-22: 2014 + AMD: 2020 Awarded ENEC EN 60598-2-22 quality mark and AENOR quality mark For flush mounting in ceiling.


1. DESCRIPTION (CONTINUED)

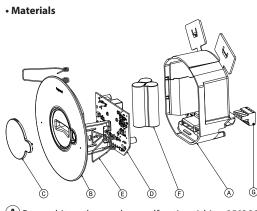

- A Base: white polypropylene, self-extinguishing 850° 30s
- **B** Reflector: white polycarbonate, self-extinguishing 850° 30 s
- C Diffuser: opal polycarbonate, self-extinguishing 850° 30 s
- D Circuit board
- **E** Spring
- **F** Battery pack
- **G** Power supply and remote control connector


All plastic parts weighing more than 50 g are marked with their material type so that the materials can be recycled at the product's end of life.

2. INSTALLATION

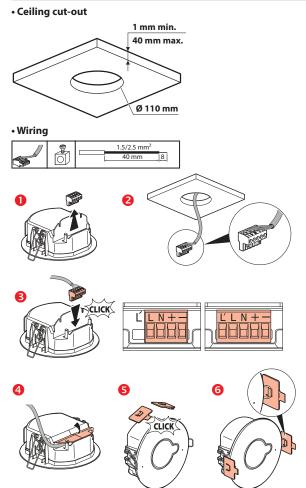


2. INSTALLATION (CONTINUED)

• Wiring (continued)

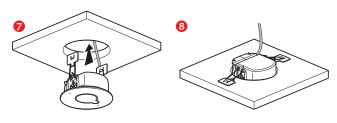


TELEC - Connection terminals: direction of connection with Legrand remote control Cat. No. 0 039 00/01 must be complied with. Terminal capacity: 2.5 mm² max.

Wiring up NM products

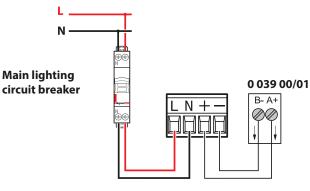

• Wiring up M-NM products

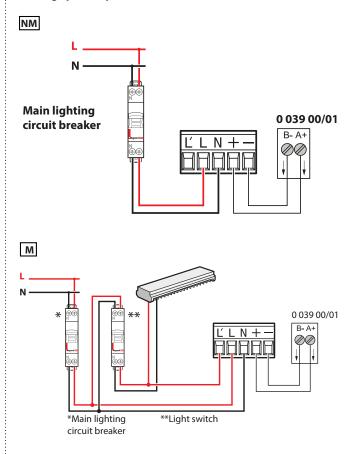

Updated: 03/04/2023

Created: 24/05/2022

2. INSTALLATION (CONTINUED)

 
• Wiring (continued)

Note: Although self-contained emergency lighting units do not consume much power, you must check that the line dedicated to these lighting units can deliver the necessary current. You will find below the current the line needs to withstand for 100 installed lighting units according to the catalogue number (for simplicity, we have assumed just one type of lighting unit is installed per line): $100 \times 6\,600\,32$ current = 5A

100 x 6 600 42/44/45/47/48 current = 1A

3. OPERATION

3.1 Switch-on/standby state




Maintained

- The emergency LEDs come on
- 2 Luminaire green status LED on
- .

Non-maintained

The emergency LEDs are offLuminaire green status LED on

 ■ 3.2 Mains supply break/emergency operation



Maintained

- The emergency LEDs come on at the rated flux
- Provide the green luminaire status LED goes off

Non-maintained

- The emergency LEDs come on at the rated flux
- Provide the green luminaire status LED goes off

3.3 Setting to rest state via the remote control Cat. No. 0 039 00/01 After the lighting is switched off intentionally:

Pressing the $\overset{\otimes}{\boxtimes}$ button sets the luminaire to rest state to prevent the battery discharging.

Lighting switched back on:

The luminaire automatically returns to standby in its initial operating mode.

3.4 Testing emergency lighting luminaires


- They can be tested by disconnecting the main power supply:
- They are working correctly if the emergency LEDs come on.
- The rated standby power is correct if the emergency LEDs stay on for the whole of the rated standby power time.

4. CONNECTION

L


Ν

4.1 Connection of emergency lighting luminaires to the mains power

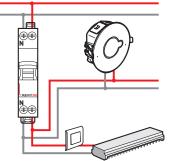

The branch can be joined in the electric cabinet, on the switch or in a junction box. The rules concerning the power supply are the same for emergency lighting as for any other type of luminaire.

■ 4.2 Connecting the remote control

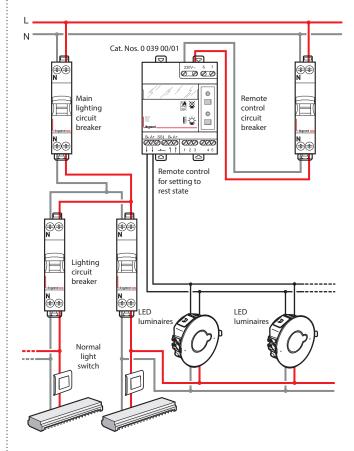

Note:

If performing a mains power present test (by pressing the ALL button on remote control 0 039 00/01), catalogue number 6 600 32 will follow the remote control commands:

1 s ON/4 s OFF/1 s ON; no need to press the EXT button to reset them to standby state.

If nothing happens, check the polarity of the remote control.

For the other catalogue numbers in this technical data sheet, the EXT button needs to be pressed to reset them to standby state.

In the event of interference on the remote control line or unwanted switching on of the self-contained emergency lighting units: add a 1 kohm resistor between the A+ and B- terminals on remote control 0 039 00/01 (this resistor is supplied with the remote control).

Updated: 03/04/2023

5. MAINTENANCE


■ 5.1 Spare parts

Luminaire Cat. No.	Battery	Spare battery Cat. No.
6 600 32/42	3.6 V 0.7 Ah Ni-Cd	6 601 80
6 600 44/48	3.6 V 1.1 Ah Ni-Cd	6 601 81
6 600 45/47	3.6 V 1.5 Ah Ni-MH	6 601 84

5.2 Replacing the batteries

The batteries must be replaced when the self-contained luminaire can no longer stay on for its rated operating time.


Caution: The product must be switched off before dismantling.

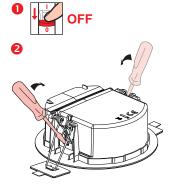



Press both sides at the same time to remove the circuit board.




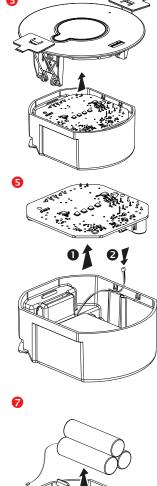



5. MAINTENANCE (CONTINUED)


■ 5.2 Replacing the batteries (continued)

8

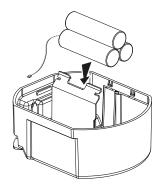

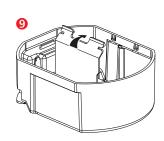


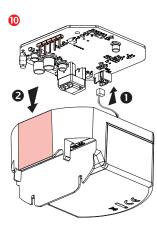

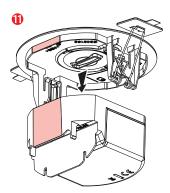

• NB: The LEDs cannot be replaced.

Legrand distribution partners take back used luminaires and batteries. After changing the batteries, write down the date on which the luminaire was returned to service in the designated location.

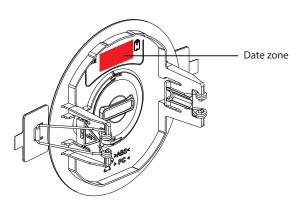

Technical data sheet: S000118532EN-2

Updated: 03/04/2023

Created: 24/05/2022

5. MAINTENANCE (CONTINUED)

5.3 Troubleshooting

All the LEDs are off:



Check whether at least one of these faults is present: - The battery is disconnected


- The battery has a voltage fault
- The charger and/or the electronics have a fault
- The light source has a fault

Recommendations:

For catalogue numbers with Ni-Cd batteries, we recommend completely discharging the self-contained emergency lighting units by manually disconnecting the power supply every three months in order to optimise the performance of the self-contained units.

7. EQUIPMENT AND ACCESSORIES

Vertical sign plate Cat. No. 6 601 93

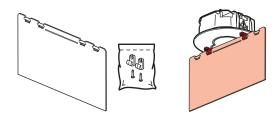

Legend stickers (not supplied):



- Conforming to standard EN ISO 7010:



6 6 1 6 7 0











661684

IRTEERA

SORTIDA

6 616 80



6. COMPLIANCE AND APPROVALS

EN 60598-2-22: 2014 + AMD: 2020: European standard "Luminaires: specific rules. Luminaires for emergency lighting" EN 60598-1 2015 + A1 2018: European standard "Luminaires". EN 50172: European standard "Emergency lighting systems" EN 1838: European standard "Lighting applications – Emergency lighting" Products certified with the AENOR N mark

Electromagnetic effects: EMC

Emission

- EN 55015 (disturbance voltages)
- EN 61000-3-2 (harmonic measurements) class C
- EN 55022 (radiated interference) class B

Immunity

- EN 61000-4-2 (electrostatic discharges)
- EN 61000-4-3 (radiated fields)
- EN 61000-4-4 (fast transients/bursts)
- EN 61000-4-5 (lightning impulses)
- EN 61000-4-6 (radiated fields)
- EN 61000-4-8 (magnetic fields)
- EN 61000-4-11 (voltage dips and short interruptions)