


# LIGHT UP DETECTORS

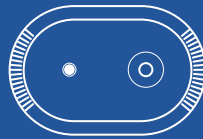

PROCEDURES MANUAL

SEPTEMBER  
2024

# Table of contents

	<b>INSTALLATION PRINCIPLES</b>	<b>3</b>
	<b>LIGHT UP OCCUPANCY DETECTORS CHART</b>	<b>4</b>
	<b>CLOSE UP APPLICATION</b>	<b>5</b>
	<b>INSTALLATION PREREQUISITES</b>	<b>6</b>
	1. Sign in to the Legrand Close Up application via your Legrand account	6
	2. Legrand Close Up application: opening the projects screen	7
	<b>INSTALLATION PROCEDURE</b>	<b>8</b>
	1. Searching for a detector using the Close Up application	8
	2. Viewing and/or modifying the detector's settings	9
	<b>PROCEDURE FOR ADDING A WIRELESS BATTERYLESS CONTROL</b>	<b>10</b>
	Connecting a wireless batteryless control to a detector	10
	<b>PROCEDURE FOR ADDING A CONNECTED OUTLET</b>	<b>11</b>
	Associating a connected outlet to a detector	11
	<b>PROCEDURE FOR REPLACING A BATTERYLESS WIRELESS CONTROL UNIT</b>	<b>13</b>
	Dissociating a batteryless wireless control from a detector	13
	<b>PROCEDURE FOR REPLACING A CONNECTED OUTLET</b>	<b>14</b>
	Dissociating a connected outlet from a detector	14
PROCEDURES	<b>PROCEDURE FOR REPLACING A DETECTOR</b>	<b>15</b>
	1. Disassociate wireless peripherals from a functional detector	15
	2. Installing a new detector and its wireless peripherals	15
	<b>PROCEDURE FOR UPDATING A DETECTOR</b>	<b>16</b>
	Updating a detector	16
	<b>PROCEDURE FOR INSTALLING A 3-ZONE DALI</b>	<b>17</b>
	1. Creating an installation	17
	2. Verifying an installation	18
	3. Modifying an installation	18
	4. Removing an installation	19
	<b>PROCEDURE FOR MASTER/SLAVE MANAGEMENT</b>	<b>20</b>
	1. Bluetooth connection to Master	20
	2. Adding Slaves	20
	3. End of procedure	22
	4. Removing Slaves	22
	5. Identify a Master via a Slave	23
	<b>SHARING OR TRANSFERRING PROJECT MANAGEMENT</b>	<b>24</b>
	1. Share project management	24
	2. Transfer project management	24

# INSTALLATION PRINCIPLES



The Light Up occupancy detectors can be used to control the lighting in a room while maintaining predetermined levels of brightness.

They can operate alone and/or in addition to :



- a wired control for manual override



- up to two wireless, batteryless controls (\*) for manual override



- up to five connected outlets to power plugged devices only when someone is present


\* See the "wireless, batteryless control" offer available in your area.

# LIGHT UP OCCUPANCY DETECTORS CHART


DESIGNATIONS	REFERENCES					
 Detector ON/OFF  DALI detector - 1 zone  DALI detector - 3 zones	0 485 51	•	•			
	0 485 52	•		•		
	0 485 55	•		•		
 Corridor ON/OFF detector  Corridor DALI detector - 1 zone  Corridor DALI detector - 3 zones	0 485 53	•	•			
	0 485 54	•		•		
	0 485 56	•		•		
 Multisensor DALI detector - 1 zone  Multisensor DALI detector - 3 zones	0 485 71	•	•	•		•
	0 485 73	•	•	•		•
 Advanced multisensor DALI detector - 1 zone  Advanced multisensor DALI detector - 3 zones	0 485 72	•	•	•	•	•
	0 485 74	•	•	•	•	•

The Light Up DALI - 3 zone detectors enable the control of 3 lighting zones:


- dimming on the window side
- dimming on the corridor side
- ON/OFF on the board side

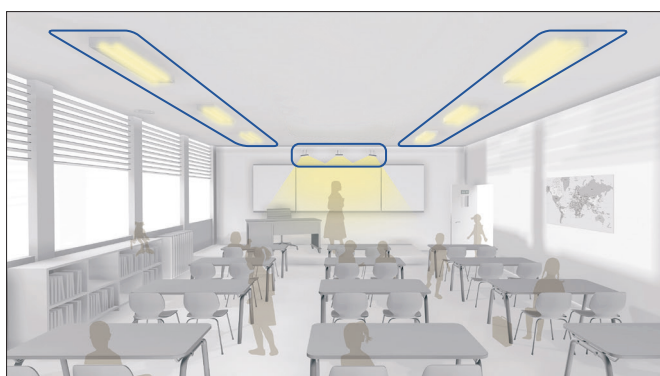

## CAPTIONS

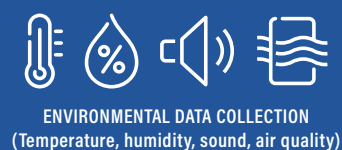

# CLOSE UP APPLICATION




**Legrand  
Close Up**


**DOWNLOAD FOR FREE ON**

DISPONIBLE SUR  
 Google Play

Télécharger dans  
 l'App Store




App Store is a service mark of Apple Inc. registered in the United States and other countries. Google, Google Play, Android, are registered trademarks of Google LLC.



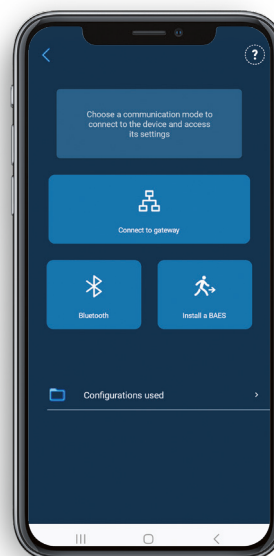

On opening the Legrand Close Up application for the first time, you must accept the following terms and conditions to ensure optimal use :

- geolocation : necessary for Bluetooth use
- access to photos, videos, music/audio files : to save settings within a file
- take photos and record videos: for scanning QR codes

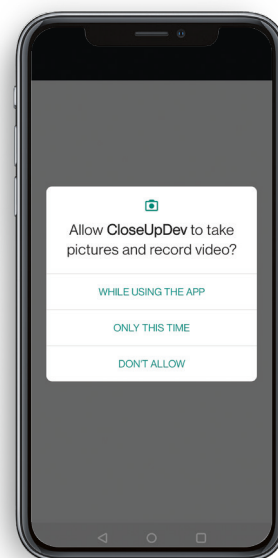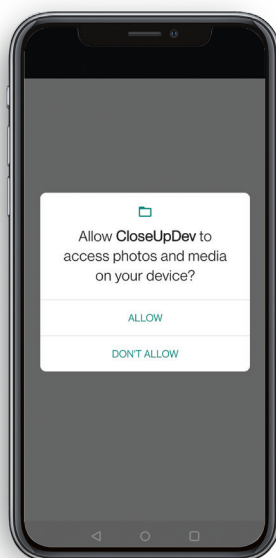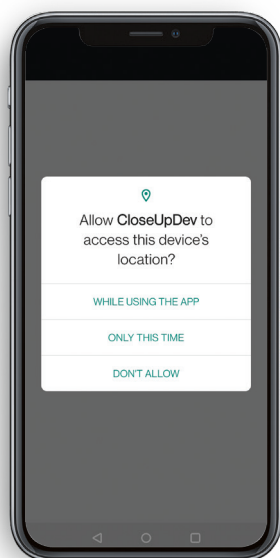


# INSTALLATION PREREQUISITES

## 1. SIGN IN TO THE LEGRAND CLOSE UP APPLICATION VIA YOUR LEGRAND ACCOUNT




Internet connection is required as all your sites will be linked to your Legrand account.




- Open the Legrand Close Up application :
- If you already have a **Legrand account**, log in and go directly to the following page.
- Otherwise, click on **Create a single account for all our applications**.

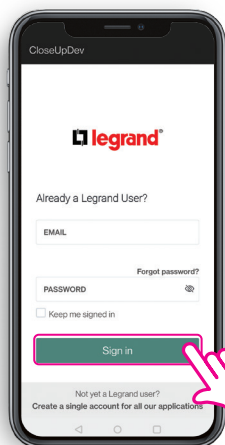

Or

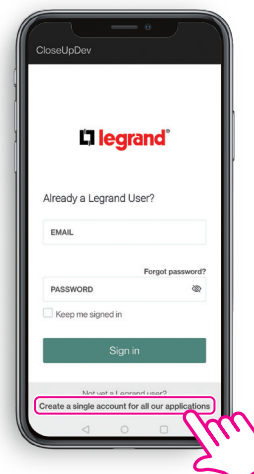


- To create your Legrand account, enter your **e-mail address** and the **verification code** you received before entering the required information.

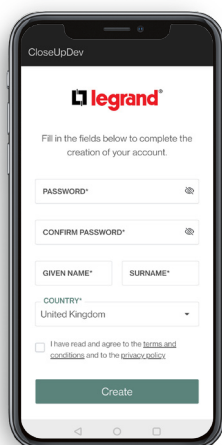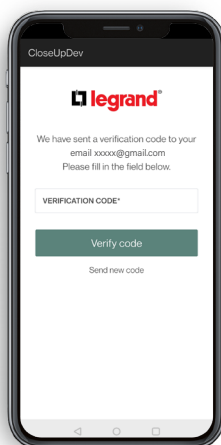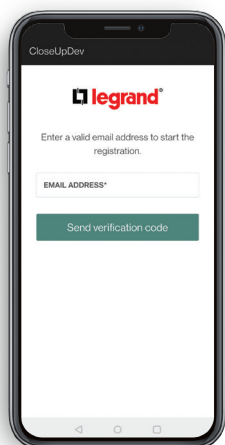

# INSTALLATION PREREQUISITES (CONTINUED)

## 2. LEGRAND CLOSE UP APPLICATION: OPENING THE PROJECTS SCREEN

The project exists :  
Click on it to select it.

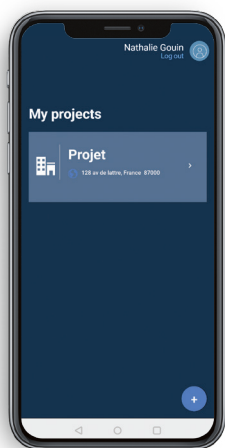

### NOTE


A project corresponds to a site (with one or more buildings, floors and zones)

### IMPORTANT

Once you have selected a site, any product you connect to afterwards will be linked to that site. As a result, it will no longer be possible to connect to this product from another site.

It is, however, possible to share or delegate sites.

The project does not exist :  
Click on **Create project** and fill in the requested details.

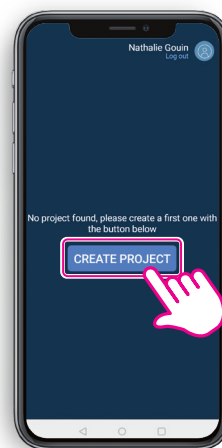

**Internet access is required to create a project.**

Offline access to the project requires the use of Close Up with a recent internet connection (less than 24 hours).

# INSTALLATION PROCEDURE


## 1. SEARCHING FOR A DETECTOR USING THE CLOSE UP APPLICATION




To access the detector settings, log on to the Close Up application.

• Before you get to this stage, please review the [Installation Prerequisites](#).

- Select **Bluetooth** to display the detectors list.

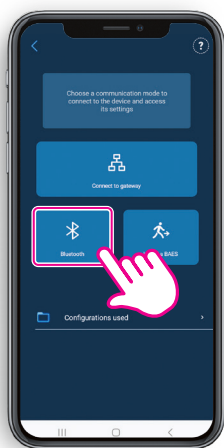

- A list of the nearby connected detectors appears.
- Click on the name of the detector you wish to access.




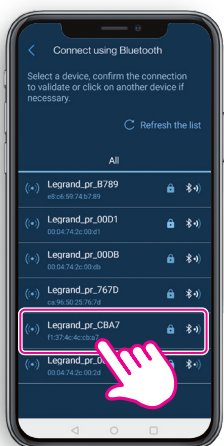


**TIP**  
The Bluetooth LED lights up blue throughout the connection.

# INSTALLATION PROCEDURE (CONTINUED)




## 2. VIEWING AND/OR MODIFYING THE DETECTOR'S SETTINGS

- You will then be taken to the **Tools** and **See details** screen.
- Click on **See details** to view and/or modify the detector's settings.
- A list of information will be displayed.
- It can be viewed and/or modified.
- When you modify a setting, it will be shown in **red**.
- Click on **Upload configuration** to send new information to the detector.

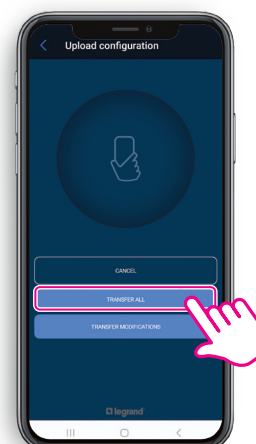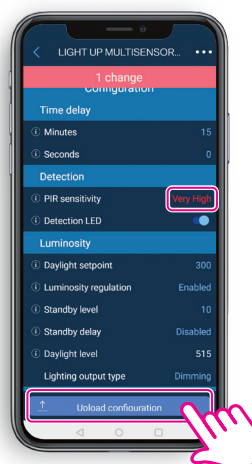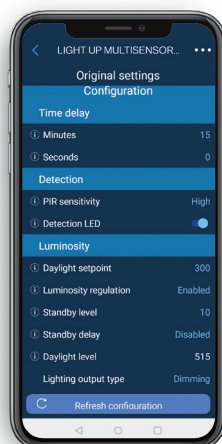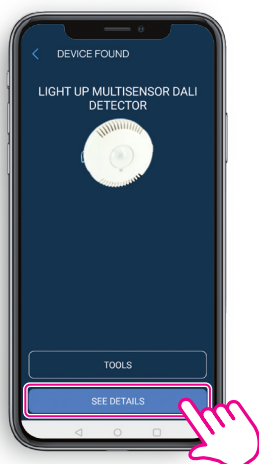

- You can transfer **all the information** or just the **modified information**.
- Then, click on **Close**.

- Once the transfer has been completed, all the settings revert to blue.

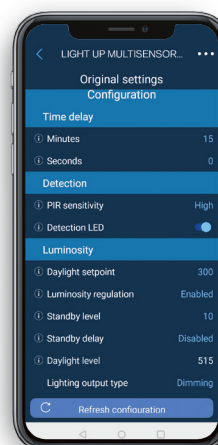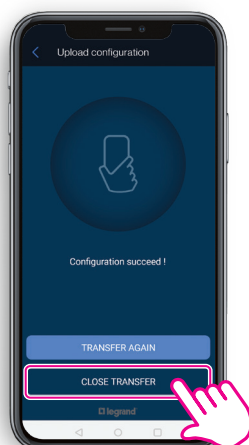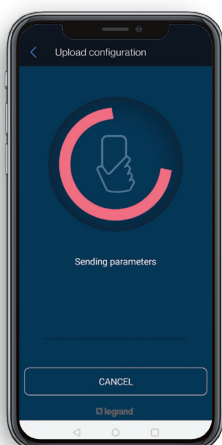


### TIP

If the transfer was not successful, click on **Transfer again**.


# PROCEDURE FOR ADDING A WIRELESS BATTERYLESS CONTROL

## CONNECTING A WIRELESS BATTERYLESS CONTROL TO A DETECTOR


- Return to the **Tools** and **See details** screen.
- Click on **Tools** to associate a control to the detector.

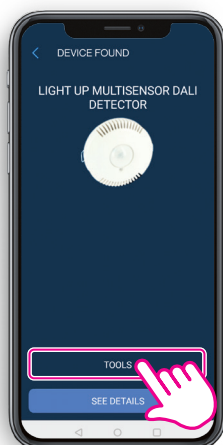


- Click on **Manage Legrand wireless devices**.

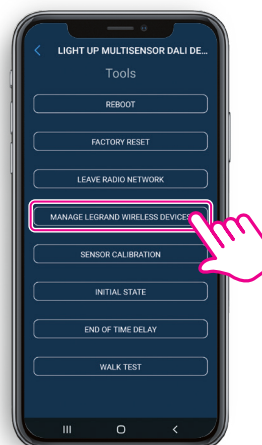

- Go to the **Wireless batteryless control** tab.
- Click on **+** then scan the QR code of the control you want to associate.

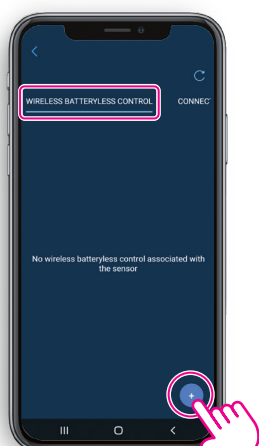

- The radio LED on the **detector** turns to a **steady magenta**, indicating that the network has been opened.
- After scanning the QR on the control, the message **Wireless batteryless control linked** appears. The procedure is complete for the control. The radio LED goes out.
- The control appears on the list.

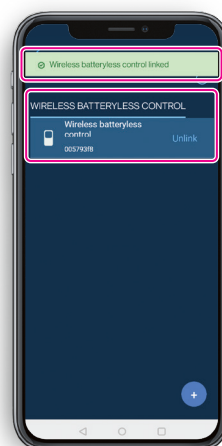

### TIP

To ensure that the connection between the control and the detector is working properly, press its button to check that it is indeed controlling the luminaire (s).

### TIP

The QR code is on the front of the product. Remember to zoom in before scanning.



# PROCEDURE FOR ADDING A CONNECTED OUTLET

## ASSOCIATING A CONNECTED OUTLET TO A DETECTOR





- Return to the **Tools** and **See details** screen.
- Click on **Tools** to associate an outlet to the detector.

- Click on **Manage Legrand wireless devices**.

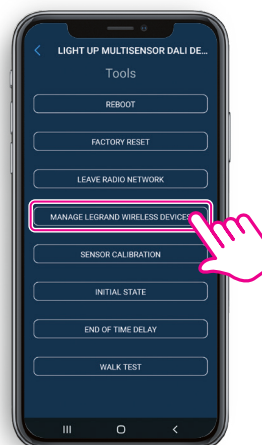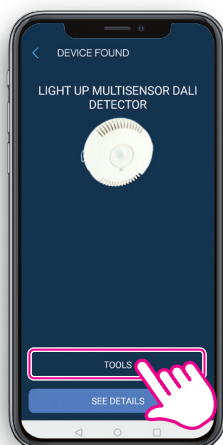

- Go to the **Connected outlet** tab.
- Click on **+** then scan the QR code of the connected outlet you want to associate.

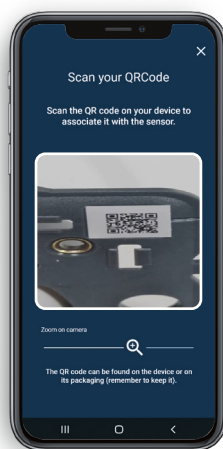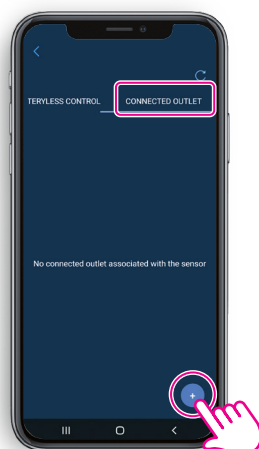

### TIP

The QR code to scan is printed on the product. Remember to zoom in before scanning.

# PROCEDURE FOR ADDING A CONNECTED OUTLET (CONTINUED)

## ASSOCIATING A CONNECTED OUTLET TO A DETECTOR (CONTINUED)



- Click **Open Network** on the application.



- The Radio LED on the **detector** turns to a **steady magenta**, indicating that the network has been opened.
- Then **press down on the outlet button**, as requested by the application.



### TIP




Once you have pressed down on the application, you must press down the outlet button within **3 minutes**.

- The **outlet's** Radio LED flashes **green** and then turns a **steady magenta** when it has joined the detector's network.



- Once the outlet has entered the network, press the network close button. Otherwise, wait until 3 minutes have passed.


- The outlet's LED will turn a **steady magenta** and the message **Connected outlet linked** will appear. The procedure is complete for the outlet.
- The outlet appears on the list.

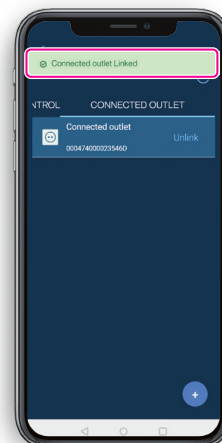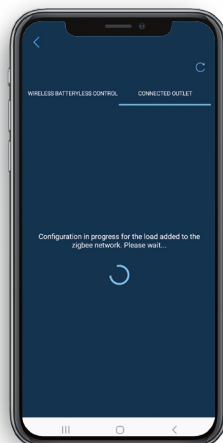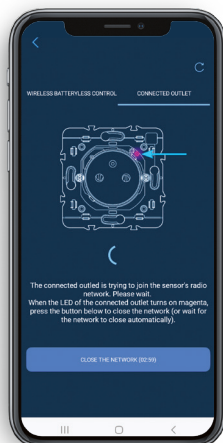


# PROCEDURE FOR REPLACING A BATTERYLESS WIRELESS CONTROL UNIT

## DISSOCIATING A BATTERYLESS WIRELESS CONTROL FROM A DETECTOR

- On the **Tools** and **See details** screen.
- Click on **Tools** then **Manage Legrand wireless devices**.
- Click **Unlink**.

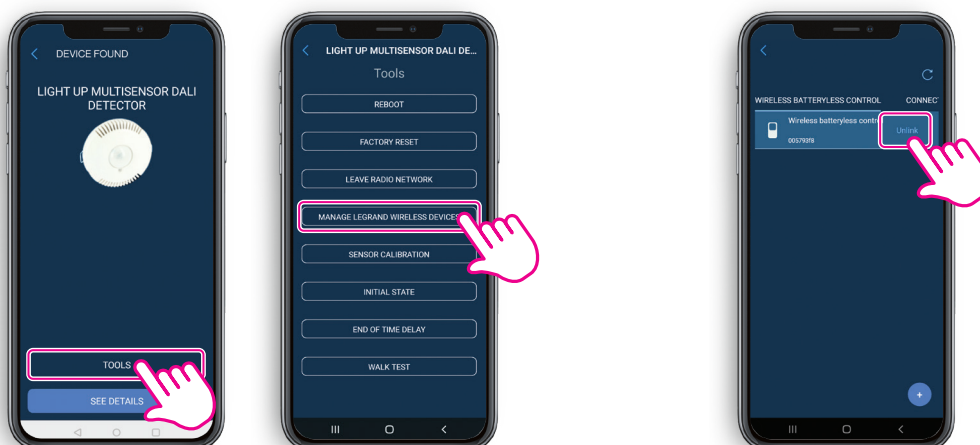



- The message **Wireless batteryless control unlinked** will appear.
- Click on **+** then scan the QR code of the new control you want to associate.
- The procedure for the control is complete.

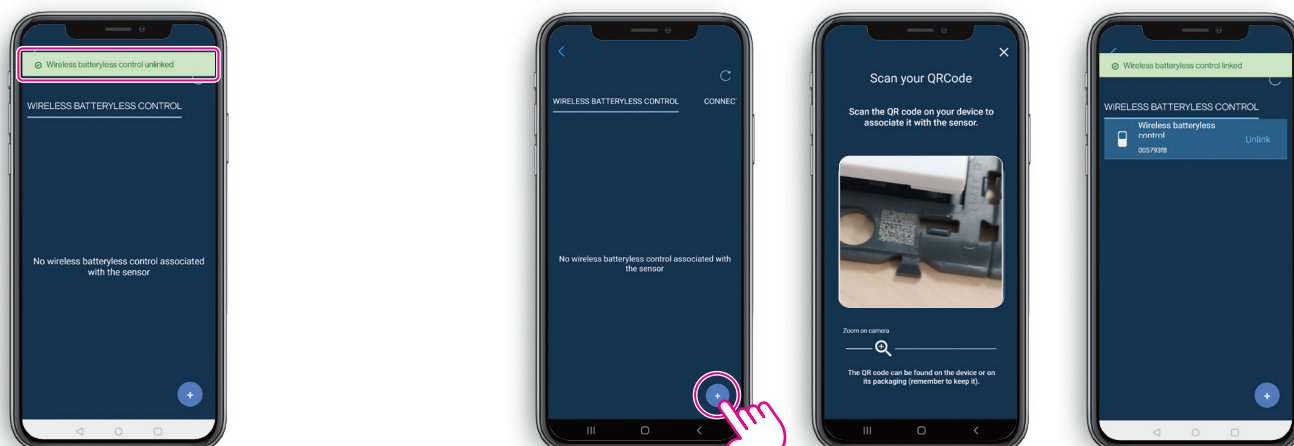

# PROCEDURE FOR REPLACING A CONNECTED OUTLET


## DISSOCIATING A CONNECTED OUTLET FROM A DETECTOR

- On the **Tools** and **See details** screen.
- Click on **Tools** then **Manage Legrand wireless devices** then go to the **Load** tab.
- Click **Unlink**.

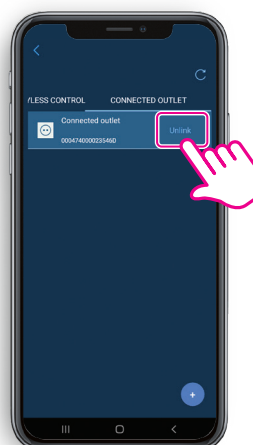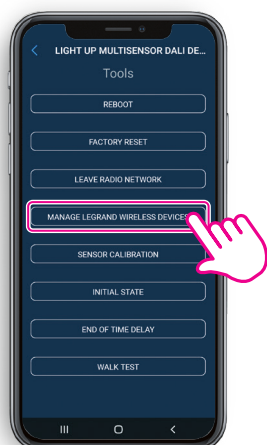

- The message **Connected outlet unlinked** will appear.

- Redo the **Procedure for adding a connected outlet > Associating a connected outlet to a detector.**

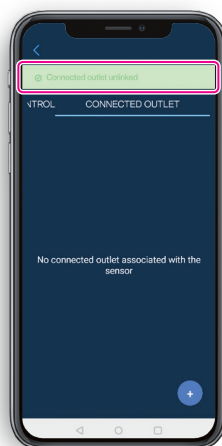


# PROCEDURE FOR REPLACING A DETECTOR

## 1. DISASSOCIATE WIRELESS PERIPHERALS FROM A FUNCTIONAL DETECTOR

- On the **Tools** and **See details** screen.
- Click on **Tools**.



- Click on **Leave radio network**.
- The detector's LED blinks red.

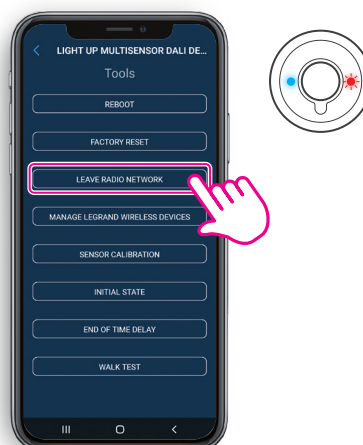

### IMPORTANT

If the detector cannot be reached via Bluetooth (non-functional product), it will be necessary to carry out the Reset process described in the manual for the connected outlet and to delete the configuration of the batteryless wireless control as described in the manual for the batteryless wireless control.


## 2. INSTALLING A NEW DETECTOR AND ITS WIRELESS PERIPHERALS

- To add the new detector and its peripherals, follow the steps given in the **Installation procedure > 1. Searching for a detector using the Close Up application.**


# PROCEDURE FOR UPDATING A DETECTOR

## UPDATING A DETECTOR

- Connect to the detector using Bluetooth.
- Click **Update Now** to launch the update.

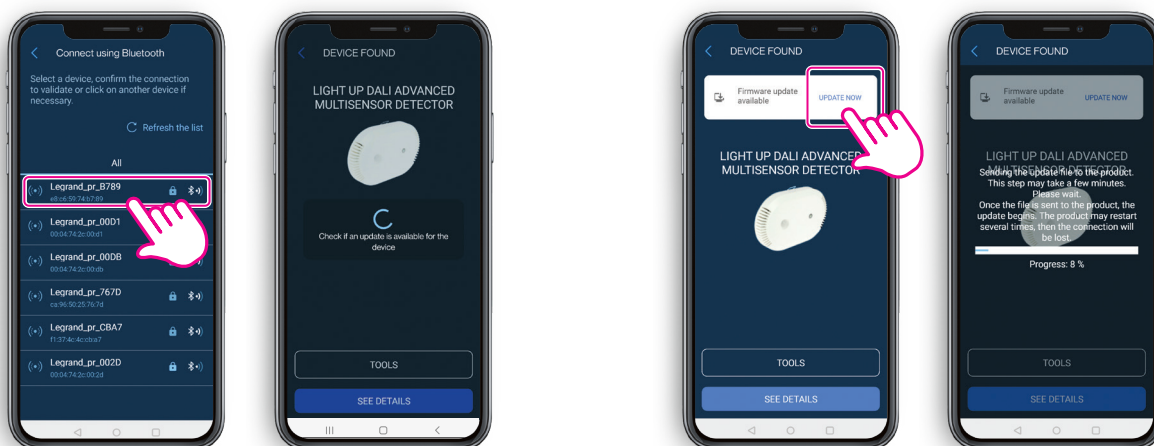

- The update file has been sent to the detector.
- The detector will blink cyan during the update. This step requires the detector to be restarted.

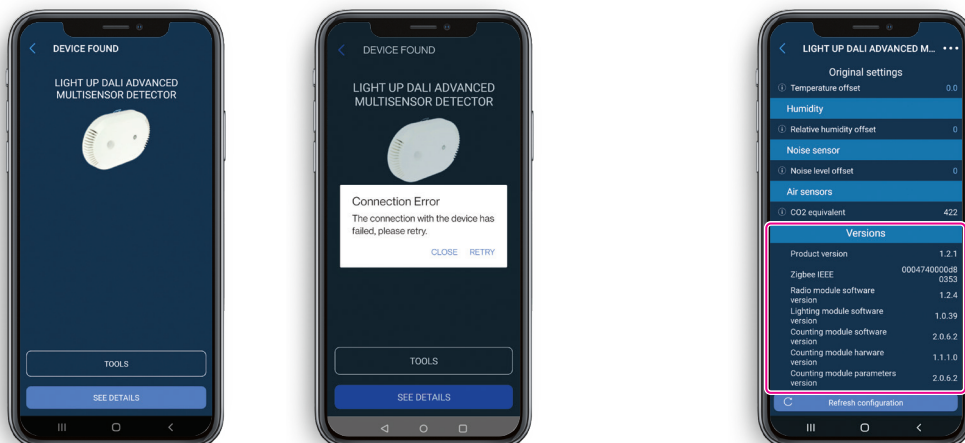


**TIP**  
To check the version of the product in the settings list, activate the "Advanced view".


# PROCEDURE FOR INSTALLING A 3-ZONE DALI

## 1. CREATING AN INSTALLATION


- Connect to the detector using Bluetooth.
- Click on **Tools**.
- Select **DALI management**.

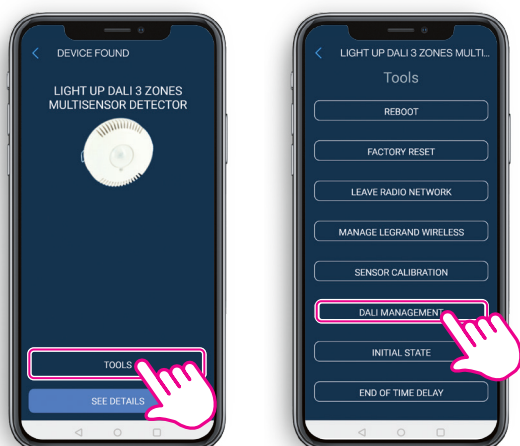


- If there is no existing installation, click **Begin installation**.
- The luminaire search is launched.

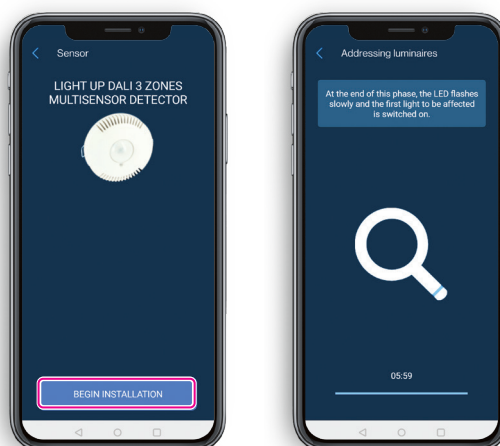

- The search and addressing phase is now complete. The number of luminaires found is indicated.
- Click on **Assign luminaires**.

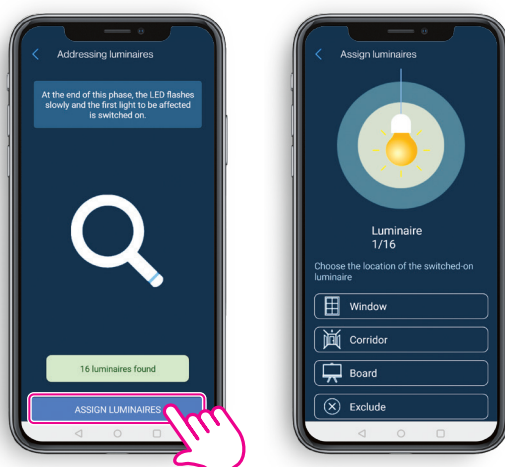

- For each luminaire, choose a group to assign it to:
  - window
  - corridor
  - board
  - the luminaire can also be excluded
- Each luminaire will light up individually, to facilitate its location in the room.

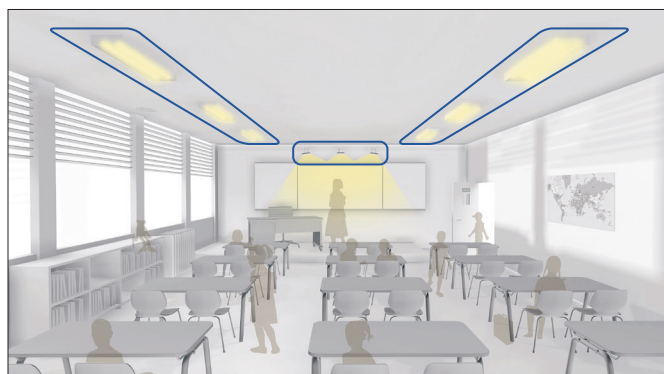

# PROCEDURE FOR INSTALLING A 3-ZONE DALI (CONTINUED)


## 2. VERIFYING AN INSTALLATION

- Once all the luminaires have been assigned, you can check each group of luminaires.



## 3. MODIFYING AN INSTALLATION


- If you need to modify the installation, click on **Modify installation**.

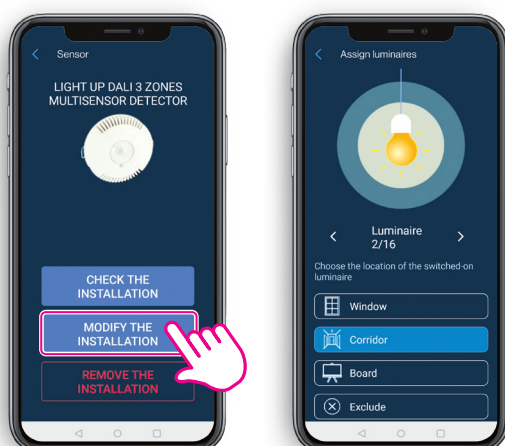

# PROCEDURE FOR INSTALLING A 3-ZONE DALI (CONTINUED)

## 4. REMOVING AN INSTALLATION

- Click on **Delete DALI Installation**.
- Confirm the deletion by clicking on **OK**.
- The installation is then deleted.

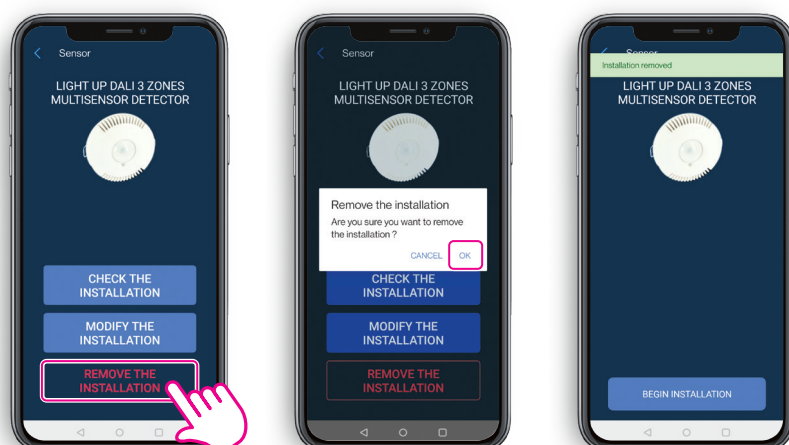




# PROCEDURE FOR MASTER/SLAVE MANAGEMENT

## PRE-REQUISITES

All luminaires must be connected to the Master detector only.


## 1. BLUETOOTH CONNECTION TO MASTER

- From the list of nearby Bluetooth devices, select the detector that will operate as the Master.
- Click on Tools
- Select Master/Slave Management

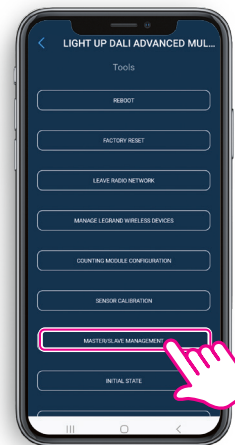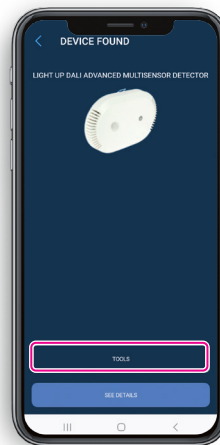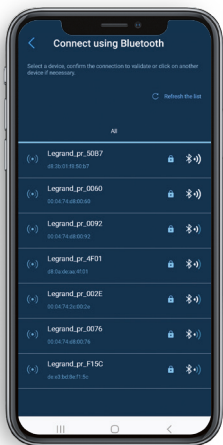

## 2. ADDING SLAVES

- To add slaves, press the + at the bottom of the screen.

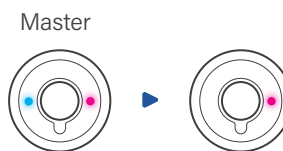

### TIP

The Master opens its Radio Network.


The Radio LED turns on magenta and the Bluetooth LED turns off.

# PROCEDURE FOR MASTER/SLAVE MANAGEMENT

## (CONTINUED)

### 2. ADDING SLAVES (CONTINUED)

- The list of nearby detectors is displayed, click on the Slave you wish to add.

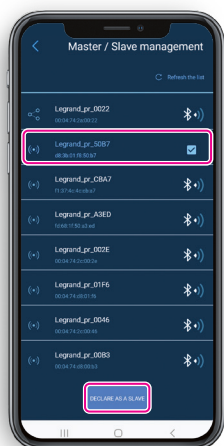

#### NOTE

It is possible to add up to 5 Slave detectors.

Slave




#### TIP

The app connects to the **Slave** when clicking on it.

The Bluetooth LED of the selected **Slave** lights up blue to identify the correct one.

- Then select Declare as a Slave.

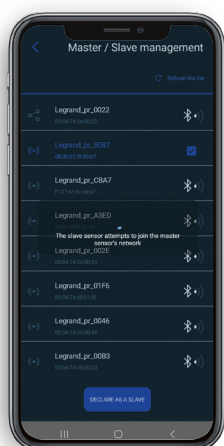

Slave



The **Slave's** Radio LED blinks magenta until it successfully joins the Master's network. Then, the LED goes to a steady magenta.

Slave



Finally, the app disconnects from the Slave and reconnects to the Master.

The **Slave's** Bluetooth LED turns **Off** and the the **Master's** turns **On**.


The Master closes its network, both Radio LEDs turn off.

# PROCEDURE FOR MASTER/SLAVE MANAGEMENT

## (CONTINUED)



### 3. END OF PROCEDURE

- The list of slaves associated with the master is displayed.

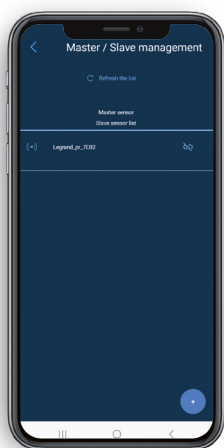

### 4. REMOVING SLAVES

- Click on the Slave you wish to remove.
- Click **OK** to delete the Slave.

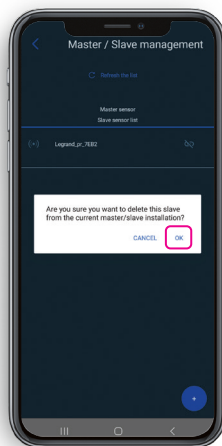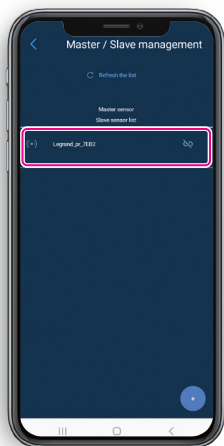

Slave



#### TIP


The Radio LED of the selected **Slave** will blink blue, for easy identification.

# PROCEDURE FOR MASTER/SLAVE MANAGEMENT



## (CONTINUED)

### 5. IDENTIFY A MASTER VIA A SLAVE


- On the list of nearby detectors, select the desired Slave to access its Master's name.

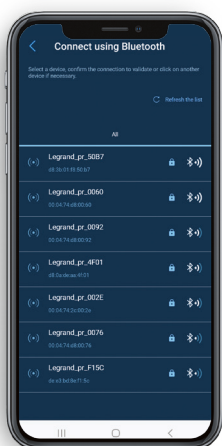

- Click on Tools
- Select Master/Slave Management

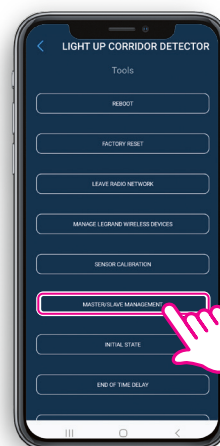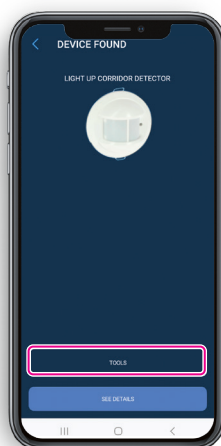


- The Master's name is then displayed.

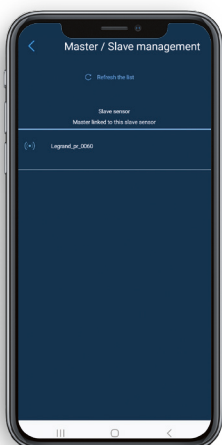


# SHARING OR TRANSFERRING PROJECT MANAGEMENT

## 1. SHARE PROJECT MANAGEMENT

- Open the projects list.
- Swipe from **right to left**.
- Click the **share** button.

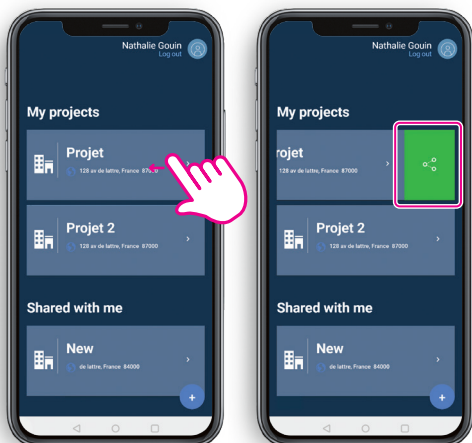

- Select **Delegation of ownership**.
- Enter the **e-mail** address of the person you want to share ownership of the project with.
- Click on **Validate**.

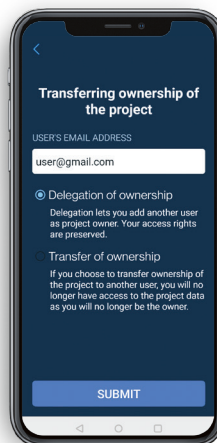


### NOTE


Ownership of the project is shared, preserving all your access settings.

## 2. TRANSFER PROJECT MANAGEMENT

- Open the projects list.
- Swipe from **right to left**.
- Click the **share** button.

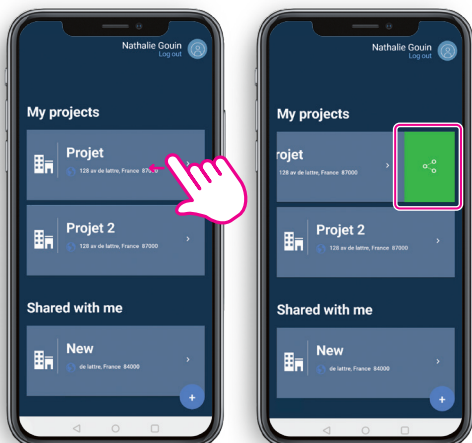

- Select **Transferring ownership of the project**.
- Enter the **e-mail** address of the person you want to transfer ownership of the project to.
- Enter your **Legrand account password**.

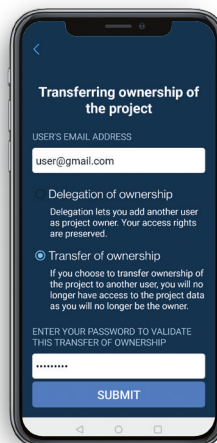

### NOTE

Ownership of the project is transferred completely. You will no longer have access to it.



facebook/legrand



linkedin/legrand



twitter/legrand



pinterest/legrand



legrand.fr

## Service Relations Pro

**0810 48 48 48** Free service  
+ price call

Monday to Friday 8am to 6pm  
128 av. de Lattre de Tassigny  
87045 Limoges Cedex - France  
E-mail : accessible on legrand.fr

