## Description

2 wires/Wi-Fi handsfree connected video internal unit with built-in\* Amazon Alexa® voice assistant, 5" vertical touch screen LCD display and video door entry answering machine.

It has a physical key for door lock release and capacitive keys for the control of the main video door entry functions: handsfree communication, entrance panel activation / camera scrolling and Favourite key (can be configured to activate the quick actions most frequently used – e.g. additional door locks, staircase light control, intercom). There are notification LEDs for: Wi-Fi network connection status, info / notifications and call exclusion.

It is possible to easily interact with the built-in Alexa<sup>®</sup> voice assistant, either using the dedicated capacitive keys or with your voice, and activate several functions, such as the video door entry functions, smart home, scenarios, reminders etc.

Using the touch display, it is possible to access the notification list, as well as your favourite door entry, security and Smart Home controls. The Home Page contains Smart Home function panels that allow to simultaneously control all the lights, shutters and fancoils of the house or individual rooms, to manage the thermostats and display the energy consumption of the home. Possibility of voice communication with the switchboard - if present in the system - after a specific call.

The device must be configured by physically connecting the configurators, or using the menu, which will give better possibilities of customisation of associated functions and texts. Thanks to the Wi-Fi connection, you can associate the video internal unit to the Home + Security App (available for Android and iOS). The App allows to use the main video internal unit functions (receiving calls, door lock release, display of the event timeline and activation of the entrance panel/camera cycling). With the Home + Security App, it is also possible to manage the products of the Netatmo Security range (outdoor and indoor cameras, door and window sensors, indoor siren, smoke detector). This allows you to quickly and easily create a Smart security system.

The device also allows to create and manage MyHOME BUS SCS solutions, without the need for adding dedicated gateways. The installer can configure the MyHOME system using the Home + Project app. Users can manage their homes: remotely with the Home + Control App, using the display interface and with Alexa<sup>®</sup> and Google<sup>®</sup> voice commands.

Wall mounted installation using the supplied bracket Possibility of Wi-Fi connection or using RJ45 ethernet cable with the dedicated accessory 344844.

(\*) Alexa<sup>®</sup> is not available in all languages and all countries. The features and functions of Alexa<sup>®</sup> may vary depending on location.

### **Related items**

344844Accessory for connections using the ethernet cable RJ45346020Additional power supply

Technical data	
Operating temperature:	

operating temperature.	J – TU C
Power supply voltage from BUS-AV:	21 – 27 V
Additional power supply from 1-2:	27 V
Maximum BUS-AV absorption in operation:	580 mA
Maximum BUS-AV absorption when powered by clamp 1-2:	22 mA
Maximum cable section for each clamp:	2 x 1 mm <sup>2</sup>
Maximum distance to be able to use Alexa®:	5 m in optimum ambient
	audio condition

 $5 - 40^{\circ}$ 


Wireless device in compliance with 802.11b/g/n standard, supports 2.4 GHz Wi-Fi band; transmission power < 20 dBm. WEP/WPA/WPA2 safety protocol.

Minimum connection speed of 512 Kbps (0.51 Mbps) for streaming music and other content through Alexa $^{\circ}$ 



344842 - 344884



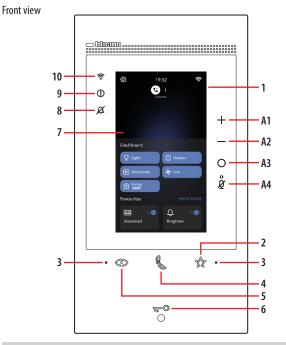

## Legend


- 1. 5" vertical touch screen display
- 2. "Favourites" touch key
- 3. Microphone
- 4. Touch key for answer
- 5. Entrance panel / scrolling activation touch key
- 6. Door release key
- 7. Home Page
- 8. Bell exclusion notification LED
- 9. Notification LED
- 10. Wi-Fi signal notification LED
- 11. Proximity sensor for future application

LED table flashing = incoming call. R steady: communication in progress. flashing for 2 seconds: active "Safe Door Lock" function, deactivated key. flashing (sequence of 2 short flashing): Door open (\*) or Professional 5 - T Studio active. steady: communication in progress. steady for 2 seconds: door opening. ø flashing: ringtone excluded. yellow steady: notifications from Alexa® 1 white steady: answering machine messages. steady: forwarding of call, automatic switching on or "Call home" function in progress from Home + Security App. ŝ OFF: WI-FI disabled or working correctly. flashing: WI-FI on but not connected to the network. Image: Second (\*) Only available with actuator 346260. Alexa<sup>®</sup> control keys

A1	Key used to increase the volume.	
A2	Key used to decrease the volume.	
A3	Alexa® enabling key.	
A4	"Mute" key, to disable both Alexa® and device microphone.	

Note: once powered, the device takes up to 2 minutes to be available for use.

### Rear view

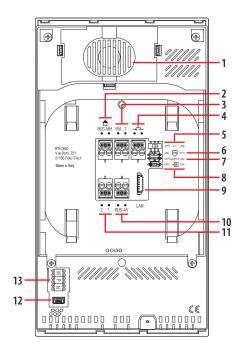

### Legend


- 1. Speaker
- 2. Clamps for connection to the BUS MH (MyHOME) (future application)
- 3. Additional bell connection clamps (5M 1). The connection must be point - point on the clamps of the additional bells
- 4. Clamps \_\_\_\_\_\_ for the connection of an external call to the floor pushbutton
- 5. Micro-switch to enable the additional power supply \*
- 6. Micro-switch for "Safe door lock" function \*
- 7. Micro-switch for "Master" function \*
- 8. Line termination micro-switch \*
- 9. LAN connector

For connection using RJ45 cable, use accessory 344844 (not supplied)

- 10. Clamps for connection to the AV BUS (audio video)
- 11. Additional power supply clamps (2-1)
- 12. Service USB interface
- 13. Configurator socket
- \*ON = enabled
- OFF = disabled

To activate the function with device not powered

## **Dimensional data**

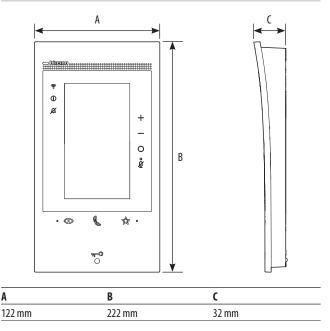

## Configuration

## **MyHOME Smart Home Configuration**

The MyHOME Smart Home system must be configured using the Home + Project App available for mobile and desktop devices.

Home + Project makes it possible to design the entire system, configure all the associated devices and finally deliver the functioning system to the end customer (who will still have to complete the commissioning using the Home + Control App).

Home + Project can be downloaded from App Store



or by logging on to https://homeproject.legrand.com site for the desktop version.

### Video door entry system configuration using the menu

It is possible to configure the device using the appropriate menu (see the Installation and configuration manual).

#### Video door entry system physical configuration

Alternatively, it is also possible to use physical configurators as shown below.

Ν	Λ	F	>	Ν			
0	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$		
$\odot$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$		

MM = Mode of operation according to the tables on the following pages.

**PP** = Address of the EP of which you can open the Door Lock with Handset idle, and to which you can send the auto-on command.

NN = Device address.



built-in

alexa

### **Physical configuration**

Ν	Λ	F	>	Ν		
$\bigcirc$	$\bigcirc$	$\bigcirc$	$\bigcirc$	0	$\bigcirc$	
$\odot$	$\bigcirc$	$\bigcirc$	$\bigcirc$	$\odot$	$\odot$	

The functions that can be attributed to the Preferred key  $(\clubsuit)$  using the physical

procedure configurator inserted in the MM - (units) socket are the following:

Ν	Λ	F	>	N		
$\odot$		0	0	0	$\bigcirc$	
$\odot$	$\odot$	$\odot$	$\odot$	$\odot$	$\odot$	


The MM (tens) physical configurator defines which 4 actions can be completed from the EDIT FAVORITES menu. The possible configurations are shown in the following table.

		<u> </u>		
				LEGEND
	Staircase Light Control		• • • • • • • • • • • • • • • • • • •	Activating the EP (configured with P+1) directly without the call or activating actuator 346210 (configured with P+1 and MOD=9)
MM = 1	Direct control of P+1 Door lock	P+1 P+1 MOD=5		Door lock opening of EP (configured with P+1) directly without the call or activating the actuator 346210 (configured with P+1 and MOD=5) or activating the actuator 346230 (configured with P+1)
MM = 2	Direct control of P+2 Door lock	P+2 P+2 P+2 P+2 P+2 MOD=5		Door lock opening of EP (configured with P+2) directly without the call or activating the actuator (configured with P+2 and MOD=5) or activating the actuator 346230
$MM = \boxed{\begin{array}{c} \bigcirc \\ 3 \\ \bigcirc \end{array}}$	Direct control of P+3 Door lock	P+3 P+3 P+3 P+3 P+3 MOD=5	P+2 P+2 MOD=5	(configured with P+2) Door lock opening of EP (configured with P+3) directly without the call or activating the actuator 346210
MM = 4	P+1 direct auto-switching on	P+1 MOD=9	P+3 P+3 MOD=5	(configured with P+3 and MOD=5) or activating the actuator 346230 (configured with P+3) Door lock opening of EP (configured with P+4) directly
MM = 5	P+2 direct auto-switching on	P+2 MOD=9	P+4	without the call or activating the actuator 346210 (con- figured with P+4 and MOD=5) or activating the actuator 346230 (configured with P+4)
$MM = \begin{array}{ c c } & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & &$	P+3 direct auto-switching on	© P+3 MOD=9		Intercommunicability between apartments in systems with apartment interface 346850
MM = 7	Paging			Intercommunicability inside an apartment in systems with apartment interface 346850 or intercommunicability between apartments in systems without apartment interface
MM = 8	Internal intercom			Intercom on itself, sends the call to all the devices with the same address
MM = 9	Enabling/disabling Office function			Paging, it makes general intercom and sends a call to all the handsets of the system
bticin		ST-00002123-EN	21/10/2024	

## 344842 - 344884

alexa built-in

alexa | built-in

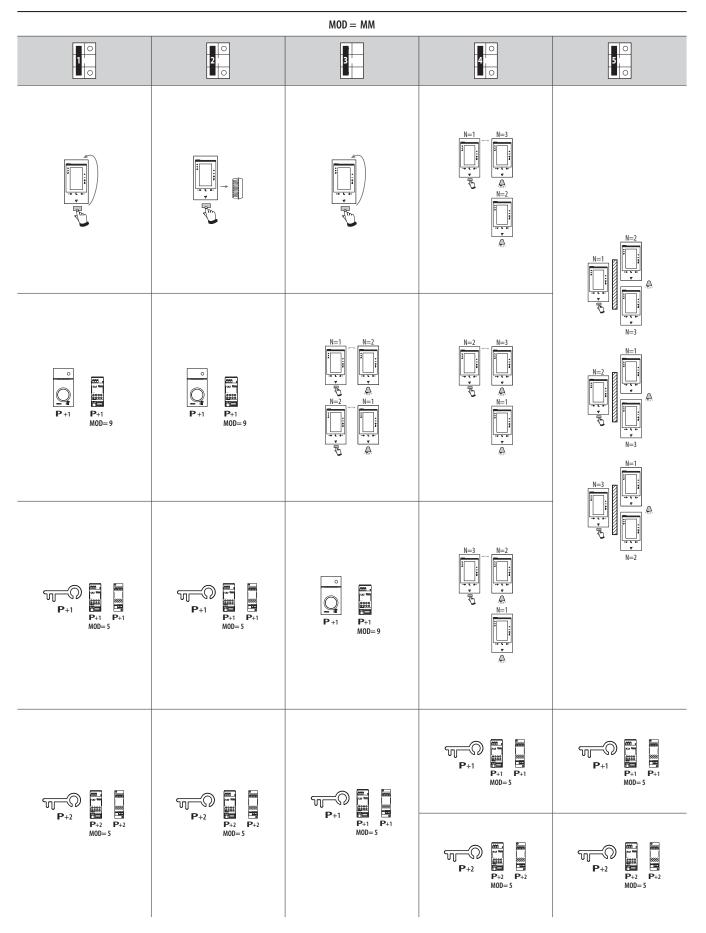


When configuring the device, wait one minute before connecting it to the system again.



### 344842 - 344884

alexa built-in

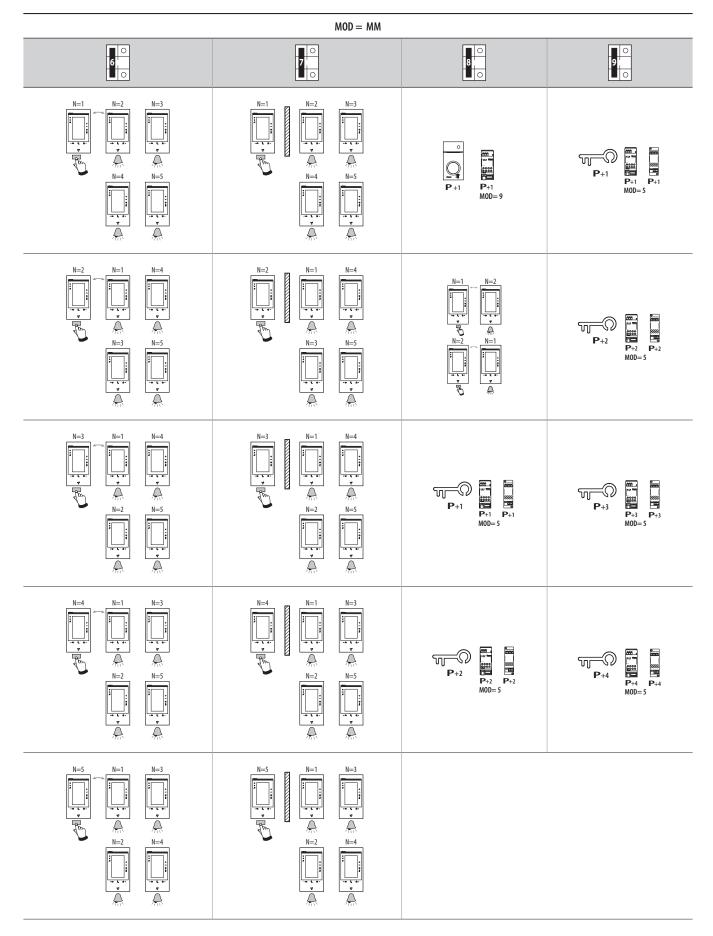

When configuring the device, wait one minute before connecting it to the system again.



5

### **Maximum distances and cable features**

CAUTION: The use of conductors with characteristics other than the prescribed ones does NOT guarantee correct performance of the system and good quality of the video signal.

Cable section mm <sup>2</sup>	2 normal cables > 0.2 mm <sup>2</sup>	BTicino cable 336904 0.5 mm <sup>2</sup>	Telephone twisted pair 0.28 mm <sup>2</sup>	BTicino cable C9881U/5E AWG24 cable or UTP5 cable	BTicino cable 336904/336905 0.5 mm <sup>2</sup>	0ne PTT 278 TP 0.28 mm <sup>2</sup>	OneSYT +Digital TP 5/10 OneSYT +Num TP 5/10 Cr(s)	AWG24 AWG24 One24 Answ Th	8/10 Cable ARB.6060-1	6/10 Cable EV6R 6/10	1 mm²
Max. distance Entrance Panel - Internal Unit	50	m	140 m	145 m	200 m	200 m	145 m	200	m	50 m	-
Max. distance Entrance Panel - Power supply	50	) m	115 m	80 m	200 m	115 m	80 m	200	m	50 m	-
Max. distance Power supply - Internal Unit	25	m	50 m	30 m	110 m (*)	50 m	30 m	110	m	25 m	-
Max. distance Entrance Panel - Door lock	30	) m	30 m	-	50 m	30 m	-	-		-	100 m

(\*) Note: if it is locally supplied 200 m.

- In systems where the EP is replaced by apartment interface 346850, and where the distance Entrance Panel - Power Supply is less than 1 m, the distance Power Supply - Internal Unit can reach the maximum distance of 200 m when using the 336904/336905 cable.

### Multi-family video systems made only with Classe 100 and Classe 300EOS with Netatmo Internal Units

Single family video systems made only with Classe 100 and Classe 300EOS with Netatmo Internal Units

Max. distance Entrance Panel - Furthest Internal Unit

Cable section mm <sup>2</sup>	2 normal cables > 0.2 mm <sup>2</sup>	BTicino cable 336904/336905 0.5 mm <sup>2</sup>	Telephone twisted pair 0.28 mm <sup>2</sup>	A pair of the multi-pair data cable CAT5
2 IU/2 pushbuttons	50 m	200 m	140 m	180 m
5 IU/5 pushbuttons	50 m	200 m	140 m	155 m
10 IU/10 pushbuttons	50 m	200 m	140 m	145 m
26 IU/26 pushbuttons	50 m	200 m	140 m	125 m
38 IU/38 pushbuttons	50 m	200 m	140 m	110 m
38 IU/ display call	50 m	200 m	140 m	115 m
64 IU/ display call	50 m	200 m	140 m	-

Max. distance Entrance Panel - Power supply

Cable section mm <sup>2</sup>	2 normal cablesi >0.2 mm <sup>2</sup> or L4669	BTicino cable 336904/336905 0.5 mm <sup>2</sup>	Telephone twisted pair 0.28 mm <sup>2</sup>	A pair of the multi-pair data cable CAT5
2 pushbuttons	50 m	200 m	130 m	95 m
5 pushbuttons	50 m	190 m	120 m	85 m
10 pushbuttons	50 m	180 m	110 m	80 m
26 pushbuttons	50 m	150 m	100 m	70 m
38 pushbuttons	50 m	140 m	90 m	65 m
Display call	50 m	150 m	95 m	65 m

### Max. distance Entrance Panel - Door lock

Cable section mm <sup>2</sup>	0.28 mm2	BTicino cable L4669 0.35 mm²	BTicino cable 336904/336905 0.5 mm <sup>2</sup>	1 mm²
(S+/S-) clamps	30 m	30 m	50 m	100 m

Max. distance Power Supply - Furthest Internal Unit

Cable section mm <sup>2</sup>	2 normal cablesi > 0.2 mm <sup>2</sup>	BTicino cable 336904/336905 0.5 mm <sup>2</sup>	Telephone twisted pair 0.28 mm <sup>2</sup>	A pair of the multi-pair data cable CAT5
5 IU (SHUNTED)	50 m	200 m	140 m	95 m
10 IU (SHUNTED)	50 m	200 m	140 m	95 m
26 IU (SHUNTED)	50 m	200 m	140 m	95 m
38 IU (SHUNTED)	50 m	200 m	140 m	95 m
64 IU (SHUNTED)	-	200 m	140 m	95 m

- Risers with max 26 internal units should be made in systems with more than 26 internal units

- Classe 300EOS with Netatmo always with additional power supply 1-2

- To ensure the correct operation of the system, we recommend the use of the YouDiagram software, which can be downloaded free of charge from www.professionisti.bticino.it



alexa built-in

L6-573903     08W51     BT-       L6-574503     ali     BT-       L6-574504     ali     BT-       L6-574504     ali     BT-       L6-07217     ali     BT-       L6-07217     ali     BT-       L6-07217     ali     BT-       L6-07218     ali     BT-       SCS/SCS interface     L6-067243     13W05       Multifunction touch command     L6-067243     13W05       L6-067244     13W05     BT-       BUS 8-key command     L6-067552     ali     BT-       BUS 8-key command     L6-067552     ali     BT-       BUS shutter command     L6-067552     ali     BT-       BUS shutter command     L6-067554     ali     BT-       BUS shutter command     L6-067557     ali     BT-       BUS shutter command     L6-067557     ali     BT-       BUS shutter command     L6-067558     ali     BT-       BUS shutter command     L6-067553     ali     BT-       BT-     E-067553     ali     BT-       BT-     E-067553     ali     BT-       BT-     E-067553     ali     BT-       BT-     E-067553     ali     BT-       BT- <th>STicino code</th> <th>From production batch:</th>	STicino code	From production batch:
IG-574503         all         BT- IG-667217         all         BT- IG-667218         all         BT- IG-667218         all         BT- IG-667218         all         BT- IG-667218         all         BT- IG-667287         all         BT- IG-667287         all         BT- IG-667287         all         BT- IG-667283         all         BT- IG-667283         III         BT- IG-667284         IIII         BT- IG-667284         IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	3T-L4680	09W08
IG-574504     all     BT- IG-07217     all     BT- IG-073478     BT- IG-073478     BT- IG-073478     BT- IG-073478     BT- IG-073478     BT- IG-07524     BT- IG-067243     BT- IG-067243     BT- IG-067244     BT- IG-067524     BT- IG-067524     BT- IG-067524     BT- IG-067524     BT- IG-067524     BT- IG-067522     BT- IG-06752     BT- IG-067552     BT- IG-067552     BT- IG-067552     BT- IG-067552     BT- IG-067552     BT- IG-067554     BT- IG-067554     BT- IG-067554     BT- IG-067554     BT- IG-067557     BT- IG-067557     BT- IG-067557     BT- IG-067557     BT- IG-067557     BT- IG-067557     BT- IG-067557     BT- IG-067557     BT- IG-067557     BT- IG-067558     BT- IG-067557     BT- IG-067558     BT- IG-067558     BT- IG-067558     BT- IG-067553     BT-	3T-N4680	09W08
IG-067217         all         BT-           IG-067218         all         BT-           IG-07978         all         BT-           IG-07978         all         BT-           IG-077978         all         BT-           Multifunction touch command         IG-067243         13W05         BT-           IG-067243         13W05         BT-         BT-         BT-           SUS 8-key command         IG-067592         all         BT-         BT-           Basic command         IG-067552         all         AR         BT-         BT-           Basic command         IG-067554         all         BT-         BT-         BT-           Basic command         IG-067554         all         BT-         <	BT-NT4680	09W08
Ic-067218allBT-Ic-078478allBT-Ic-079478allBT-Ic-079178allBT-Aultifunction touch commandIc-06724313W05Ic-06724413W05Ic-06724513W05Ic-06724513W05BT-BUS 8-key commandIc-067592allBT-Ir m basic commandIc-067552allARIr m basic commandIc-067554allBT-Ir m basic commandIc-067554allBT-Ir m basic commandIc-067554allBT-Ir m basic commandIc-067557allBT-Ir actuatorIc-067558allBT-Ir actuatorIc-067558allBT-Ir actuatorIc-067558allBT-Ir actuatorIc-067558allBT-Ir actuator Ic-007553allBT-BT-Ir actuator Ic-007553allBT-BT-Ir actuator Ic-007553allBT-BT-Ir actuator Ic-007240VIc-003847allBT-Ir actuator Ic-16100/240VIc-003848allBT-Ir actuator Ic-16100/240VIc-003842I0W18**BT-Ir actuator Ic-16100/240VIc-003842I0W18**BT-Ir actuator Ic-16100/240VIc-003842I0W18**BT-Ir actuator Ic-16100/240VIc-003842I0W18**BT-Ir actuator Ic-16100/240VIc-003842I0W18**BT-Ir actuator Ic-16100/240VIc	ST-HC4680	09W08
IG-078478allIG-079178allGCS/SCS interfaceIG-00756212W20BT-Aultifunction touch commandIG-06724313W05GIG-06724413W05IG-06724513W05BT-IG-06724513W05IGBT-BT-IW 58 key commandIG-067552allARBT-IW 58 key commandIG-067552allARBT-IW 58 key commandIG-067554allBT-BT-IW 58 key commandIG-067554allBT-BT-IW 58 key commandIG-067557allBT-BT-IW 58 key commandIG-067557allBT-BT-IW 58 key commandIG-067558allBT-BT-IW 58 key commandIG-067558allBT-BT-IUS shutter actuatorIG-067558allBT-BT-IUS shutter commandIG-067558allBT-BT-IUS shutter commandIG-067553allBT-BT-IUS shutter commandIG-003847allBT-BT-IUS shutter commandIG-003847allBT-BT-III actuator 16A 100/240VIG-003848allBT-BT-III actuator 16A 100/240VIG-00384110W17BT-BT-III actuator 16A 100/240VIG-00384210W18**BT-BT-III actuator 16A 100/240VIG-00384210W18**BT-BT-III actuator 16A 100/240VIG-003842	BT-HD4680	09W08
IG-079178         all           CS/SCS interface         IG-067243         12W20         BT-           IG-067244         13W05         IG-067244         13W05           IG-067245         13W05         IG-067245         13W05           US 8-key command         IG-067522         all         BT-           m basic command         IG-067552         all         RT-           m basic command         IG-067554         all         RT-           m basic command         IG-067554         all         RT-           m basic command         IG-067554         all         RT-           Ight actuator         IG-067557         all         RT-           Ight actuator         IG-067557         all         RT-           IUS shutter actuator         IG-067553         all         RT-           IUS shutter command         IG-067553         all         RT- <td< td=""><td>ST-HS4680</td><td>09W08</td></td<>	ST-HS4680	09W08
CS/SCS interface         LG-003562         12W20         BT-           Jultifunction touch command         LG-067243         13W05         IG-067244         13W05           LG-067245         13W05         IG-067245         13W05         BT-           US 8-key command         LG-067592         all         AR           m basic command         LG-067552         all         AR           m basic command         LG-067554         all         BT-           m basic command         LG-067554         all         BT-           m basic command         LG-067557         all         BT-           m basic command         LG-067557         all         BT-           m basic command         LG-067557         all         BT-           m basic command         LG-067558         all         BT-           m basic command         LG-067558         all         BT-           m basic command         LG-067553         BT-         BT-           m basic command         LG-067553         BT-         BT-           m basic command         LG-067553         BT-         BT-           m call command         LG-067553         BT-         BT-           m calu command		
Iultifunction touch command         IG-067243         13W05           IG-067244         13W05         IG-067245         13W05           US 8-key command         IG-067592         all         BT-           Im basic command         IG-067552         all         AR-           m basic command         IG-067554         all         BT-           Ight actuator         IG-067557         all         BT-           US shutter actuator         IG-067557         all         BT-           IUS shutter command         IG-067558         all         BT-           IUS shutter command         IG-067558         all         BT-           relay DIN actuator 16A 100/240V         IG-003847         all         BT-           relay DIN actuator 16A 100/240V         IG-003841         10W17         BT-           relay DIN actuator 16A 100/240V         IG-003841         10W17         BT-           relay DIN actuator 16A 100/240V         IG-003844         all         BT-           relay DIN actuat		
LG-067244         13W05           LG-067245         13W05           US 8-key command         LG-067592         all         BT-           m basic command         LG-067552         all         AR           m basic command         LG-067552         all         RT-           m basic command         LG-067554         all         RT-           m basic command         LG-067554         all         RT-           m basic command         LG-067557         all         RT-           m basic command         LG-067558         all         RT-           m basic command         LG-067558         all         RT-           m basic command         LG-067553         all         RT-           m basic command         LG-067553         all         RT-           m basic command         LG-067553         all         RT-           m calcular right         LG-003847         all         RT-           m calcular rifA 100/240V         LG-003848	BT-F422	12W20
IG-06724513W05US 8-key commandIG-067592allBT-m basic commandIG-067552allAR-m basic commandIG-067552allAR-m basic commandIG-067554allBT-m basic commandIG-067554allBT-m basic commandIG-067554allBT-m basic commandIG-067557allBT-m basic commandIG-067557allBT-m basic commandIG-067558allBT-m basic commandIG-067558allBT-m basic commandIG-067558allBT-m basic commandIG-067558allBT-m basic commandIG-067553allBT-m basic commandIG-067553allBT-m basic commandIG-067553allBT-m basic commandIG-067553allBT-m basic commandIG-003847allBT-m clay DIN actuator 16A 100/240VIG-003848allBT-m clay DIN actuator 16A 100/240VIG-00384110W177BT-m clay DIN actuator 16A 100/240VIG-00384110W18**BT-m clay DIN actuator 16A 100/240VIG-00384110W18**BT-m clay DIN actuator 16A 100/240VIG-002601allBT-m clay DIN actuator 16A 100/240VIG-002601allBT-m clay DIN actuator 16A 100/240VIG-002601allBT-m clay DIN actuator 16A 100/240VIG-002601 <td< td=""><td></td><td></td></td<>		
US 8-key commandLG-067592allBT-m basic commandLG-067552allARBT-BT-BT-BT-BT-BT-BT-BT-BT-BT-BT-BT-BT-BT-BT-Ight actuatorLG-067554allBT-US shutter actuatorLG-067557allBT-BT-BT-BT-BT-US shutter actuatorLG-067558allBT-T-relay DIN actuator 16A 100/240VLG-003847allBT-T-relay DIN actuator 16A 100/240VLG-00384110W17BT-T-relay DIN actuator 16A 100/240VLG-00384210W18**BT-T-relay DIN actuator 16A 100/240VLG-002602allBT-T-relay DIN actuator 16A 100/240VLG-002602all		
mbasic command         LG-067552         all         AR           mbasic command         LG-067554         all         AR           mbasic command         LG-067554         all         BT-           mbasic command         LG-067554         all         BT-           mbasic command         LG-067557         all         BT-           mbasic command         LG-067557         all         BT-           mbasic command         LG-067557         all         BT-           mbasic command         LG-067558         all         BT-           mbasic command         LG-067553         all         BT-           mbasic command         LG-067553         all         BT-           mbasic command         LG-067553         all         BT-           mbasic command         LG-003847         all         BT-           meal plin actuator 16A 100/240V         LG-003842         10W17         BT-           meal plin actuator 16A 100/240V         LG-003842         10W18** <td></td> <td></td>		
m basic command IG-067552 all AR- BT- BT- BT- BT- BT- BT- BT- BT	ST-LN4652	all
mbasic command         IG-067554         all         BT-           ght actuator         IG-067554         all         BT-           ight actuator         IG-067557         all         BT-           US shutter actuator         IG-067557         all         BT-           IG-067557         all         BT-         BT-           US shutter actuator         IG-067557         all         BT-           BT-         BT-         BT-         BT-           IUS shutter command         IG-067558         all         BT-           BT-         BT-         BT-         BT-           BT-         BT-         BT-         BT-           IUS shutter command         IG-067558         all         BT-           BT-         BT-         BT-         BT-           BT-         BT-         BT-         BT-           IUS shutter command         IG-067553         all         BT-           IUS shutter command         IG-067553         all         BT-           Interal DIN actuator 16A 100/240V         IG-003847         all         BT-           relay DIN actuator 16A 100/240V         IG-003848         all         BT-           relay DIN actuat	ST-H4652	all
Bi Br- Br- Br- Br- Br- Br- Br- Br- Br- B	R-64360	09W40
mbasic command       IG-067554       all       BT         ght actuator       BT       BT         ght actuator       IG-067557       all       BT         ght actuator       IG-067557       all       BT         JS shutter actuator       IG-067557       all       BT         IJS shutter actuator       IG-067558       all       BT         BT       BT       BT       BT         IJS shutter command       IG-067558       all       BT         DIS shutter command       IG-067553       all       AR-         Fread       BT       BT       BT         BT       BT       BT       BT         DIS shutter command       IG-067553       all       AR-         Fread       IG-067553       all       BR-         Fread       IG-067553       all       BR-	BT-H4652/2	09W40
m basic commandLG-067554allBT-ght actuatorIG-067557allBT-US shutter actuatorIG-067557allBT-IUS shutter actuatorIG-067558allBT-IUS shutter commandIG-067558allBT-IUS shutter commandIG-067558allBT-IUS shutter commandIG-067553allBT-IUS shutter commandIG-067553allBT-IUS shutter commandIG-067553allBT-IUS shutter commandIG-003847allBT-IUS shutter commandIG-003847allBT-IUS shutter 16A 100/240VIG-003848allBT-IUS shutter 16A 100/240VIG-003848allBT-relay DIN actuator 16A 100/240VIG-00384110W17BT-relay DIN actuator 16A 100/240VIG-00384110W17BT-relay DIN actuator 16A 100/240VIG-00384110W17BT-relay DIN actuator 16A 100/240VIG-00384110W27*BT-relay DIN actuator 16A 100/240VIG-002602allBT-relay DIN actuator 16A 100/240VIG-002602allBT-<	BT-L4652/2	09W40
m basic commandLG-067554allBT-ight actuatorIG-067557allBT-US shutter actuatorIG-067557allBT-IUS shutter actuatorIG-067558allBT-IUS shutter commandIG-067558allBT-IUS shutter commandIG-067553allBT-IUS shutter commandIG-067553allBT-IUS shutter commandIG-067553allBT-IUS shutter commandIG-067553allBT-IUS shutter commandIG-003847allBT-IUS shutter 16A 100/240VIG-003848allBT-relay DIN actuator 16A 100/240VIG-003848allBT-relay DIN actuator 16A 100/240VIG-00384110W17BT-relay DIN actuator 16A 100/240VIG-00384110W17BT-relay DIN actuator 16A 100/240VIG-00384110W18**BT-relay DIN actuator 16A 100/240VIG-00384110W27*BT-relay DIN actuator 16A 100/240VIG-002602allBT-relay DIN actuator 16A 100/240VIG-002604allBT-relay DIN actuator 16A 100/240VIG-002604allBT-relay DIN actuator 16A 100/240VIG-002602all<	BT-AM5832/22	09W40
BT-I         BT-I           ght actuator         BT-I           US shutter actuator         LG-067557         all         BT-I           BT-I         BT-I         BT-I         BT-I           US shutter command         LG-067558         all         BT-I           BT-I         BT-I         BT-I         BT-I           DS shutter command         LG-067558         all         BT-I         BT-I           DS shutter command         LG-067553         all         AR-I         BT-I         BT-I<	BT-L4652/3	09W40
Image: space s	BT-H4652/3	09W40
ght actuatorBT-US shutter actuatorLG-067557allBT-BT-BT-BT-BT-BT-BT-US shutter commandLG-067558allBT-Decial commandLG-067553allAR-Pecial commandLG-067553allAR-Terelay DIN actuator 16A 100/240VLG-003847allBT-Terelay DIN actuator 16A 100/240VLG-003847allBT-Terelay DIN actuator 16A 100/240VLG-003848allBT-Terelay DIN actuator 16A 100/240VLG-00384210W17BT-Terelay DIN actuator 16A 100/240VLG-00384210W18**BT-Terelay DIN actuator 16A 100/240VLG-002601allBT-relay DIN actuator 16A 100/240VLG-002602allBT-relay DIN actuator 16ALG-00384210W18**BT-relay DIN actuator 16A 100/240VLG-002601allBT-relay DIN actuator 16A 100/240VLG-002602allBT-relay DIN actuator 16A 100/240VLG-002604allBT-relay DIN actuator 16A 100/240VLG-002604allBT-relay DIN actuator 16A 100/240VLG-002604allBT-relay DIN actuator 16A 100/240V </td <td>BT-AM5832/3</td> <td>09W40</td>	BT-AM5832/3	09W40
LG-067557         all         BT-I           US shutter actuator         LG-067557         all         BT-I           BT-I         BT-I         BT-I         BT-I           US shutter command         LG-067558         all         BT-I           Decial command         LG-067553         all         AR-           BT-I         BT-I         BT-I         BT-I           Decial command         LG-067553         all         AR-           BT-I         BT-I         BT-I         BT-I           BT-I         BT-I         BT-I         BT-I           Image: State	BT-K8002L	all
US shutter command US shutter command UG-067558 all UG-067558 all BT-	BT-LN4661M2	all
US shutter command US shutter command US shutter command UG-067558 all US shutter command LG-067558 all BT- BT- pecial command LG-067553 all AR BT- BT- T- Pecial Command LG-003847 all BT- T- Pecial DIN actuator 16A 100/240V LG-003847 all BT- Pecial DIN actuator 16A 100/240V LG-003848 all BT- Pecial DIN actuator 16A 100/240V LG-003841 10W17 BT- Pecial DIN actuator 16A 100/240V LG-003842 10W18** BT- Pecial DIN actuator 16A 100/240V LG-003842 10W18** BT- Pecial DIN actuator 16A 100/240V LG-002601 all BT- Pecial DIN actuator 16A 100/240V LG-002602 all BT- Pecial DIN actuator 16A 100/240V LG-002602 all BT- Pecial DIN actuator 16A 100/240V LG-002604 all BT- Pecial DIN actuator 16A 100/240V LG-002604 BT- Pecial DIN Pecial	BT-H4661M2	all
BT-US shutter commandLG-067558allBT-BT-BT-BT-BT-BT-BT-pecial commandLG-067553allAR-Frelay DIN actuator 16A 100/240VLG-003847allBTrelay DIN actuator 16A 100/240VLG-003847allBTrelay DIN actuator 16A 100/240VLG-003848allBTrelay DIN actuator 16A 100/240VLG-00384110W17BTrelay DIN actuator 16A 100/240VLG-00384210W18**BTrelay DIN actuator 16A 100/240VLG-002601allBTrelay DIN actuator 16ALG-002601allBTrelay DIN actuator 16ALG-002602allBTrelay DIN actuator 16ALG-002604allBTrelay DIN actuator for 0-10V ballastLG-002604allBTrelay DIN actuator for 0-10V ballastLG-00365610W05BT-asic contact interfaceLG-0355310W13BT-IN contact interfaceLG-0355310W13BT-	BT-AM5861M2	all
US shutter command US shutter command US shutter command UG shutter command UG shutter command UG o67558 all BT- BT- BT- pecial command UG o67553 all AR- BT- BT- Frelay DIN actuator 16A 100/240V UG o03847 all BT- relay DIN actuator 16A 100/240V UG o03848 all BT- relay DIN actuator 16A 100/240V UG o03841 10W17 BT- relay DIN actuator 16A 100/240V UG o03842 10W18** BT- relay DIN actuator 16A 100/240V UG o02601 all BT- relay DIN actuator 16A 100/240V UG o02601 all BT- relay DIN actuator 16A 100/240V UG o02601 all BT- relay DIN actuator 16A 100/240V UG o02601 all BT- relay DIN actuator 16A 100/240V UG o02601 all BT- relay DIN actuator 16A 100/240V UG o02601 all BT- relay DIN actuator 16A 100/240V UG o02602 all BT- relay DIN actuator 16A 100/240V UG o02604 all BT- relay DIN actuator 16A 100/240V UG o02604 all BT- relay DIN actuator for 0-10V ballast UG o03656 10W05 BT- asic contact interface UG o03553 10W13 BT-	BT-K8002S	all
BT- BT- BT- pecial commandLG-067553allAR- BT- BT- - -relay DIN actuator 16A 100/240VLG-003847allBT- BT- -relay DIN actuator 16A 100/240VLG-003847allBT- -relay DIN actuator 16A 100/240VLG-003848allBT- -relay DIN actuator 16A 100/240VLG-00384110W18**BT- -relay DIN actuator 16A 100/240VLG-00384210W18**BT- -relay DIN actuator 16A 100/240VLG-00384210W18**BT- -relay DIN actuator 16A 100/240VLG-00384210W18**BT- -relay DIN actuator 16A 100/240VLG-00384410W22*BT- -relay DIN actuator 16A 100/240VLG-00384410W22*BT- -relay DIN actuator 16A 100/240VLG-00384410W22*BT- -relay DIN actuator 16A 100/240VLG-003604allBT- -relay DIN actuator 16A 100/240VLG-003604allBT- -relay DIN actuator 16A 100/240VLG-002612allBT- - - relay DIN actuator 16A 100/240VLG-00365610W05BT- - IN actuator for 0-10V ballastLG-00365610W04BT- - IN actuator for 0-10V ballastLG-00355310W13BT- -	3T-LN4660M2	all
pecial commandLG-067553allAR-pecial commandLG-067553allAR-BT-BT-BT-BT-BT-BT-relay DIN actuator 16A 100/240VLG-003847allBTrelay DIN actuator 16A 100/240VLG-003848allBTrelay DIN actuator 16A 100/240VLG-00384110W17BT-IN actuator vith 1 NC relay 16A 100/240VLG-00384210W18**BTrelay DIN actuator 16ALG-00384210W18**BTrelay DIN actuator 16ALG-002601allBTrelay DIN actuator 16A 100/240VLG-002602allBTrelay DIN actuator 16A 100/240VLG-002604allBTrelay DIN actuator 16A 100/240VLG-002604allBTrelay DIN actuator for 0-10V ballastLG-00365610W05BT-IN actuator for 0-10V ballastLG-00365610W05BT-asic contact interfaceLG-00355310W13BT-IN contact interfaceLG-00355310W13BT-	BT-H4660M2	all
LG-067553allAR-Pecial commandLG-067553allBT-BT-BT-BT-Image: BT-BT-BT-Image: BT-BT-BT-Image: BT-Image: BT-BT-Image: BT-Image: BT	BT-AM5860M2	all
BT-           relay DIN actuator 16A 100/240V         LG-003847         all         BT-           -relay DIN actuator 16A 100/240V         LG-003848         all         BT-           -relay DIN actuator 16A 100/240V         LG-003848         all         BT-           -relay DIN actuator 16A 100/240V         LG-003841         10W17         BT-           IN actuator 16A 100/240V         LG-003842         10W18**         BT-           -relay DIN actuator 16A         LG-002601         all         BT-           -relay DIN actuator 16A 100/240V         LG-002601         all         BT-           -relay DIN actuator 16A 100/240V         LG-002601         all         BT-           -relay DIN actuator 16A 100/240V         LG-002602         all         BT-           -relay DIN actuator 16A 100/240V         LG-002602         all         BT-           -relay DIN actuator 16A 100/240V         LG-002602         all         BT-           -relay DIN actuator 6A         LG-002604         all         BT-           -relay DIN actuator for 0-10V ballast         LG-002612         all         BT-           output DIN actuator for 0-10V ballast         LG-003656         10W05         BT-           isic contact interface         LG-03553	NR-64362	all
BT- Image: BT- <b< td=""><td>BT-L4651M2</td><td>08W41</td></b<>	BT-L4651M2	08W41
BTrelay DIN actuator 16A 100/240VLG-003847allBTrelay DIN actuator 16A 100/240VLG-003848allBTrelay DIN actuator 16A 100/240VLG-00384110W17BT-IN actuator 16A 100/240VLG-00384210W18**BTrelay DIN actuator 16ALG-00384210W18**BTrelay DIN actuator 16ALG-002601allBTrelay DIN actuator 16A 100/240VLG-002602allBTrelay DIN actuator 6ALG-00384410W22*BTrelay DIN actuator 6ALG-002604allBTrelay DIN actuator 16A 100/240VLG-002612allBTrelay DIN actuator for 0-10V ballastLG-00355610W05BT-IN actuator for 0-10V ballastLG-00355310W13BT-	BT-H4651M2	08W41
-relay DIN actuator 16A 100/240V         LG-003847         all         BT-           -relay DIN actuator 16A 100/240V         LG-003848         all         BT-           -relay DIN actuator 16A 100/240V         LG-003841         10W17         BT-           IN actuator 16A 100/240V         LG-003842         10W17         BT-           IN actuator 16A 100/240V         LG-003842         10W18**         BT-           -relay DIN actuator 16A         LG-002601         all         BT-           -relay DIN actuator 16A 100/240V         LG-002602         all         BT-           -relay DIN actuator 6A         LG-003844         10W22*         BT-           -relay DIN actuator 16A 100/240V         LG-002604         all         BT-           -relay DIN actuator 16A 100/240V         LG-003656         10W05         BT-           -relay DIN actuator 16A 100/240V         LG-003656         10W05         BT-           -relay DIN actuator 16A 100/240V         LG-003656         10W05         BT-	BT-AM5831M2	08W41
relay DIN actuator 16A 100/240V       LG-003848       all       BT-         relay DIN actuator 16A 100/240V       LG-003841       10W17       BT-         IN actuator with 1 NC relay 16A 100/240V       LG-003842       10W17       BT-         relay DIN actuator 16A       100/240V       LG-003842       10W18**       BT-         -relay DIN actuator 16A       LG-002601       all       BT-         -relay DIN actuator 16A 100/240V       LG-002602       all       BT-         -relay DIN actuator 16A 100/240V       LG-002602       all       BT-         -relay DIN actuator 16A 100/240V       LG-003844       10W22*       BT-         -relay DIN actuator 16A 100/240V       LG-002604       all       BT-         -relay DIN actuator for 0-10V ballast       LG-002612       all       BT-         IN actuator for 0-10V ballast       LG-002656       10W05       BT-         IN actuator for 0-10V ballast       LG-003656       10W04       BT-         IN contact interface       LG-03553       10W13       BT-	BT-AMI363 TMI2 BT-F411U1	all
relay DIN actuator 16A 100/240V       LG-003841       10W17       BT-         IN actuator with 1 NC relay 16A 100/240V       BT-       BT-         -relay DIN actuator 16A       LG-003842       10W18**       BT-         -relay DIN actuator 16A 100/240V       LG-003842       10W18**       BT-         -relay DIN actuator 16A 100/240V       LG-002601       all       BT-         -relay DIN actuator 16A 100/240V       LG-002602       all       BT-         -relay DIN actuator 16A 100/240V       LG-003844       10W22*       BT-         -relay DIN actuator 6A       LG-002604       all       BT-         -relay DIN actuator for 0-10V ballast       LG-002612       all       BT-         output DIN actuator for 0-10V ballast       LG-003656       10W05       BT-         IN actuator for 0-10V ballast       LG-003553       10W04       BT-         IN contact interface       LG-003553       10W13       BT-	BT-F411U2	all
IN actuator with 1 NC relay 16A 100/240VBTrelay DIN actuator 16ALG-00384210W18**BTrelay DIN actuator 16A 100/240VLG-002601allBTrelay DIN actuator 16A 100/240VLG-002602allBTrelay DIN actuator 6ALG-00384410W22*BTrelay DIN actuator 16A 100/240VLG-002602allBTrelay DIN actuator 6ALG-00384410W22*BTrelay DIN actuator 16A 100/240VLG-002604allBTrelay DIN actuator 16A 100/240VLG-002612allBTrelay DIN actuator for 0-10V ballastLG-00365610W05BT-IN actuator for 0-10V ballastLG-0365610W04BT-IN contact interfaceLG-0355310W13BT-		
relay DIN actuator 16A         LG-003842         10W18**         BT-           -relay DIN actuator 16A 100/240V         LG-002601         all         BT-           -relay DIN actuator 16A 100/240V         LG-002602         all         BT-           -relay DIN actuator 16A 100/240V         LG-002602         all         BT-           -relay DIN actuator 6A         LG-003844         10W22*         BT-           -relay DIN actuator 6A         LG-002604         all         BT-           -relay DIN actuator 16A 100/240V         LG-002604         all         BT-           output DIN actuator 16A 100/240V         LG-002604         all         BT-           output DIN actuator for 0-10V ballast         LG-002612         all         BT-           IN actuator for 0-10V ballast         LG-003656         10W05         BT-           asic contact interface         LG-573996         10W04         BT-           IN contact interface         LG-003553         10W13         BT-	BT-F411/1N	09W13 08W48
-relay DIN actuator 16A 100/240V         LG-002601         all         BT-           -relay DIN actuator 16A 100/240V         LG-002602         all         BT-           -relay DIN actuator 16A 100/240V         LG-003844         10W22*         BT-           -relay DIN actuator 6A         LG-002604         all         BT-           -relay DIN actuator 16A 100/240V         LG-002604         all         BT-           -relay DIN actuator 16A 100/240V         LG-002604         all         BT-           output DIN actuator 16A 100/240V         LG-002612         all         BT-           output DIN actuator for 0-10V ballast         LG-003656         10W05         BT-           asic contact interface         LG-573996         10W04         BT-           IN contact interface         LG-003553         10W13         BT-	BT-F411/1NC	
-relay DIN actuator 16A 100/240V         LG-002602         all         BT-           -relay DIN actuator 6A         LG-003844         10W22*         BT-           -relay DIN actuator 16A 100/240V         LG-002604         all         BT-           -relay DIN actuator 16A 100/240V         LG-002604         all         BT-           output DIN actuator 16A 100/240V         LG-002604         all         BT-           output DIN actuator for 0-10V ballast         LG-003656         10W05         BT-           IN actuator for 0-10V ballast         LG-003656         10W04         BT-           asic contact interface         LG-03553         10W13         BT-	BT-F411/2	09W04**
-relay DIN actuator 6A         LG-003844         10W22*         BT-           -relay DIN actuator 16A 100/240V         LG-002604         all         BT-           output DIN actuator 16A 100/240V         LG-002604         all         BT-           output DIN actuator for 0-10V ballast         LG-002612         all         BT-           IN actuator for 0-10V ballast         LG-003656         10W05         BT-           asic contact interface         LG-573996         10W04         BT-           IN contact interface         LG-003553         10W13         BT-	BT-BMSW1002	all
-relay DIN actuator 16A 100/240V         LG-002604         all         BT-           output DIN actuator for 0-10V ballast         LG-002612         all         BT-           IN actuator for 0-10V ballast         LG-003656         10W05         BT-           asic contact interface         LG-573996         10W04         BT-           IN contact interface         LG-003553         10W13         BT-	BT-BMSW1003	all
output DIN actuator for 0-10V ballast         LG-002612         all         BT-           IN actuator for 0-10V ballast         LG-003656         10W05         BT-           asic contact interface         LG-573996         10W04         BT-           IN contact interface         LG-003553         10W13         BT-	BT-F411/4	09W04*
IN actuator for 0-10V ballast         LG-003656         10W05         BT-           asic contact interface         LG-573996         10W04         BT-           VIN contact interface         LG-003553         10W13         BT-	BT-BMSW1005	all
asic contact interface LG-573996 10W04 BT- IN contact interface LG-003553 10W13 BT-	BT-BMDI1002	all
IN contact interface LG-003553 10W13 BT-	BT-F413N	09W14
	ST-3477	10W04
000VA DIN dimmer 16, 000201 all DT	3T-F428	09W50
	ST-F416U1	all
	3T-F414	09W29
	BT-F415	09W22
	3T-F417U2	all
00VA DIN dimmer         LG-003665         all         BT-           VIN2 dimmer x 300VA         LG-003651         all         BT-	3T-F418	all

\* If the device is installed on the output of the F422 interface, the minimum batch is 15W25

\*\* If the device is installed on the output of the F422 interface, it is not possible to associate it using the APP. It is recommended to replace it with the code F411U2





Description	Legrand code	From production batch:	BTicino code	From production batch:
m touch command	LG-573912	11W27	BT-HC4657M3	11W09
	LG-573913	11W09	BT-HD4657M3	11W12
			BT-HS4657M3	11W12
4 m touch command			BT-HC4657M4	11W12
			BT-HD4657M4	11W12
			BT-HS4657M4	11W14
SCS/DALI interface	LG-002631	10W13	BT-F429	10W20
Basic actuator			BT-3475	12W31
BUS shutter DIN actuator	LG-003666	all	BT-F401	all
Command actuator	LG-067561	all	BT-AM5852M2	all
	AR-64195	all	BT-H4672M2	all
	AR-64196	all	BT-LN4672M2	all
	AR-64393	all		
Basic command actuator			BT-3476	12W39
command actuator	LG-067556	all	BT-LN4671M2	all
			BT-H4671M2	all
IN dimmer for 0-10V ballast	LG-002611	all	BT-BMDI1001	all
IN dimmer for 0-10V ballast	LG-067226	all	BT-L4658N	all
	LG-078486	all	BT-N4658N	all
	LG-574048	all	BT-NT4658N	all
	LG-574098	all	BT-HC4658	all
	LG-AC5220MW	all	BT-HD4658	all
	LG-AC5220MB	all	BT-HS4658	all
			BT-YW4658	all
			BT-YD4658	all
			BT-YG4658	all
PIR BUS circuit breaker	LG-067225	all	BT-L4659N	all
	LG-078485	all	BT-N4659N	all
	LG-574046	all	BT-NT4659N	all
	LG-574096	all	BT-HC4659	all
		un	BT-HD4659	all
			BT-HS4659	all
PIR ceiling mounted sensor	LG-048820	all	BT-BMSE3001	all
PIR+US double technology ceiling mounted sensor	LG-048822	all	BT-BMSE3003	all
P55 PIR wall mounted sensor	LG-048834	all		un
2 m command	LG-MX5222	all	BT-K4652M2	all
communu		uii	BT-Y4652M2	all
B m command	LG-MX5223	all	BT-K4652M3	all
, in contribution		uii	BT-Y4652M3	all
Actuator/control for shutter	LG-MX5220	all	BT-K4672M2S	all
		un	BT-Y4672M2S	all
ctuator/control for lights and loads	LG-MX5230	all	BT-K4672M2L	all
		all	BT-Y4672M2L	all
.ight control			BT-KW8010	all
			BT-KM8010 BT-KM8010	all
				all
ull control			BT-KG8010	
un control			BT-KW8011	all
			BT-KM8011	all
Voice control			BT-KG8011	all
			BT-KW8013	all
			BT-KM8013	all
			BT-KG8013	all
MyHOME DALI2 Dimmer			BT-F429G	all
MyHOME DALI2 Gateway			BT-F429D	all
SCS interface for address extension			BT-F422A	all

NOTE: Classe 300EOS with Netatmo is not compatible with devices configured using physical configurators.



### Temperature Control Devices that can be directly associated via MyHOME Server

Description	Legrand code	From production batch:	BTicino code	From production batch:
Thermostat with Display	LG-067459	all	BT-LN4691	all
	LG-064170	all	BT-H4691	all
	LG-752131	all		
	LG-752731	all		
Temperature control probe			BT-KM4691	all
			BT-KG4691	all
			BT-KW4691	all
DIN actuator with 2 independent relays	LG-003579	13W06	BT-F430/2	13W06
DIN actuator with 4 independent relays	LG-003580	13W06	BT-F430/4	13W06
DIN actuator with 8 independent relays	LG-003517	all	BT-F430R8	all
DIN actuator with 2 outputs 0-10 V	LG-003518	all	BT-F430V10	all
DIN actuator with 3 independent relays and 2 outputs 0-10 V	LG-003519	all	BT-F430R3V10	all
Basic temperature probe			BT-3454	all

**NOTE:** Classe 300EOS with Netatmo:

- is not compatible with the temperature control solution with 99-zone central unit 573918, 573919, 067456, 3550.

- is not compatible with devices configured using physical configurators.

Description	Legrand code	From production batch:	BTicino code	From production batch:
3-input electricity meter	LG-003555	all	BT-F520	all
Central unit for load management	LG-003557	all	BT-F521	all
Actuator 16A with current sensor	LG-003558	all	BT-F522	all
16A actuator	LG-003559	all	BT-F523	all
2-module flush mounted actuator 16A			BT-L4672N	all
			BT-N4672N	all
			BT-NT4672N	all
			BT-HC4672N	all
			BT-HS4672N	all
			BT-HD4672N	all

Energy Devices that can be directly associated via Classe 300EOS with Netatmo

NOTE: Classe 300EOS with Netatmo is not compatible with devices configured using physical configurators.

**NOTE:** In case of several Classe 300EOS with Netatmo units installed in the same house, only one will be able to use the MyHOME Smart Home functions. **NOTE:** Classe 300EOS with Netatmo is not compatible with the HOMETOUCH device. The HOMETOUCH device is only compatible with MyHOMEServer1.



# Control compatibility on different lines

Not all controls can operate actuators located on a different line from their own. Please refer to the table with the exclusively compatible devices for details.

Description	Code	Possibility of controlling actuators on all lines	Possibility of only controlling the actuators on the own line
BUS 8-key command	LG-067592	YES	YES
	BT-LN4652		
BUS shutter command	LG-067558	YES	YES
	BT-LN4660M2		
Special command	LG-067553	YES	YES
	BT-L4651M2		
	BT-H4651M2		
Basic contact interface	BT-3477	YES	YES
DIN contact interface	BT-F428	YES	YES
3 m touch command	LG-573912	YES	YES
	LG-573913		
	BT-HC4657M3		
	BT-HD4657M3		
	BT-HS4657M3		
4 m touch command	BT-HC4657M4	YES	YES
	BT-HD4657M4		
	BT-HS4657M4		
2 m command	BT-K4652M2	≥ 24W04	YES
	BT-Y4652M2	YES	YES
	LG-MX5222	YES	YES
3 m command	BT-K4652M3	≥ 24W06	YES
	BT-Y4652M3	YES	YES
	LG-MX5223	YES	YES
Actuator/control for shutter	BT-K4672M2S	≥ 24W07	YES
	BT-Y4672M2S	YES	YES
	LG-MX5220	YES	YES
Attuatore/comando per luci e carichi	BT-K4672M2L	≥ 24W03	YES
	BT-L4651M2	YES	YES
	BT-H4651M2	YES	YES
Light control	BT-KW8010	≥ 24W03	YES
	BT-KM8010	≥ 24W09	YES
	BT-KG8010	≥ 24W09	YES
Full control	BT-KW8011	≥ 24W04	YES
	BT-KM8011	≥ 24W09	YES
	BT-KG8011	≥ 24W09	YES
2 m basic command	LG-067552	NO	YES
	BT-H4652/2		
	BT-L4652/2		
	BT-AM5832/2		



ST-00002123-EN 21/10/2024




Description	Code	Possibility of controlling actuators on all lines	Possibility of only controlling the actuators on the own line
3 m basic command	LG-067554	NO	YES
	BT-L4652/3		
	BT-H4652/3		
	BT-AM5832/3		
Command actuator	LG-067554	NO	YES
	BT-L4652/3		
	BT-H4652/3		
	BT-AM5832/3		
BUS Dual Tech Green Switch	LG-067226	NO	YES
	BT-L4658N		
	BT-N4658N		
	BT-NT4658N		
	BT-YW4658		
	BT-YD4658		
	BT-YG4658		
	LG-AC5220MW		
	LG-AC5220MB		
PIR BUS circuit breaker	BT-L4659N	NO	YES
	BT-N4659N		
	BT-NT4659N		
PIR ceiling mounted sensor	BT-BMSE3001	NO	YES
PIR+US double technology ceiling mounted sensor	BT-BMSE3003	NO	YES
Voice control	BT-KW8013	NO	YES
	BT-KM8013		
	BT-KG8013		



## Wiring diagrams

Below are some examples of connection of the Classe 300EOS with Netatmo 344842/344884 video handset in single family and multi-family 2 wire video door entry systems.

### DIAGRAM 1 - EXAMPLE OF MULTI-FAMILY SYSTEM

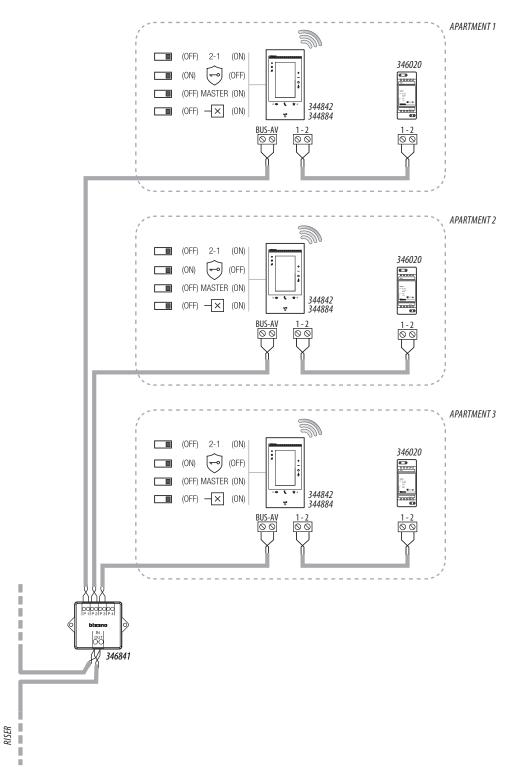

## NOTE:


Additional powersupply is mandatory

• Classe 300EOS with Netatmo has to be installed only in installation tottally 2wire technology

• For other system particularities, refer to the technical guide



DIAGRAM 2 - EXAMPLE OF ONE-FAMILY SYSTEM WITH POWER SUPPLY AND WITH AUTOMATION BUS

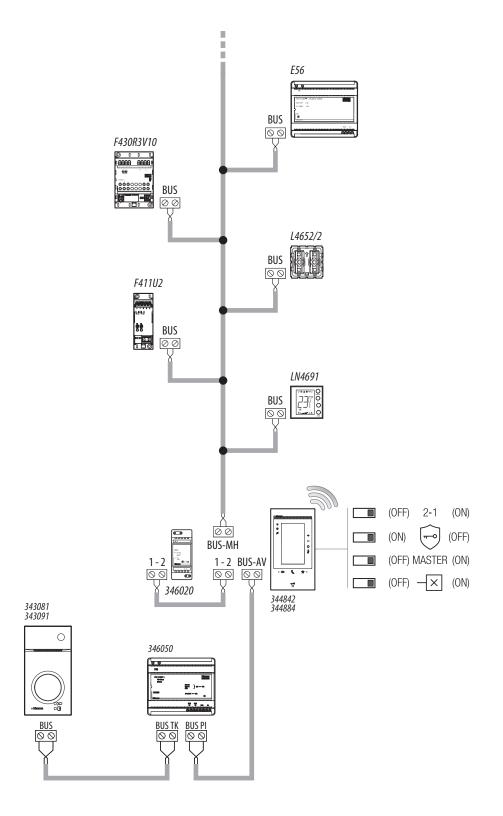

### NOTE:

Additional powersupply is mandatory

• Classe 300EOS with Netatmo has to be installed only in installation tottally 2wire technology

- For other system particularities, refer to the technical guide
- In case of several Classe 300EOS with Netatmo units installed in the same house, only one will be able to use the MyHOME Smart Home functions
- The Classe 300EOS with Netatmo is not compatible with the HOMETOUCH device. The HOMETOUCH device is only compatible with MyHOMEServer1




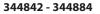


DIAGRAM 3 - EXAMPLE OF MULTI-FAMILY SYSTEM WITH POWER SUPPLY AND WITH AUTOMATION BUS

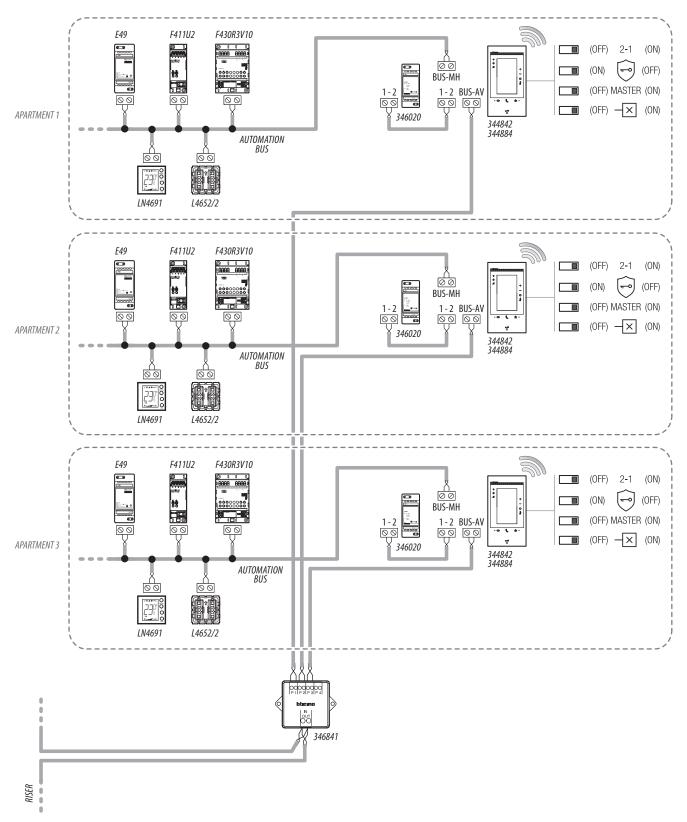

NOTE:

• The additional power supply is mandatory

• Classe 300EOS with Netatmo must be installed only in systems completely made with 2 wires technology


For other system particularities, refer to the technical guide

• In case of several Classe 300EOS with Netatmo units installed in the same house, only one will be able to use the MyHOME Smart Home functions

• The Classe 300EOS with Netatmo is not compatible with the HOMETOUCH device. The HOMETOUCH device is only compatible with MyHOMEServer1



DIAGRAM 4 - EXAMPLE OF MULTI-FAMILY SYSTEM WITH ADDITIONAL INTERNAL UNITS

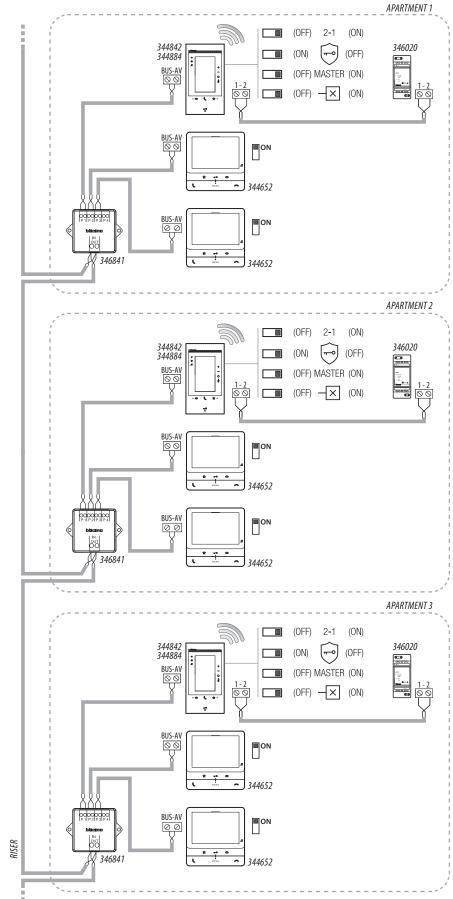



NOTE:

- Additional powersupply is mandatory;
- Max 3 internal units for apartment;
- Classe 300EOS with Netatmo has to be installed only in installation tottally 2wire technology.
- For other system particularities, refer to the technical guide





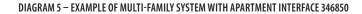

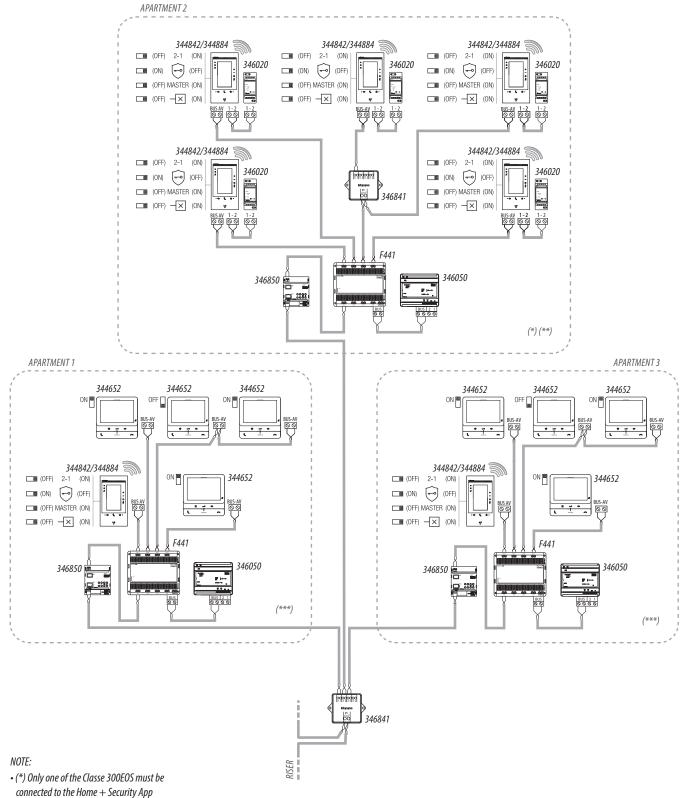

(\*\*) The addition of a second provide is a second

 ${\scriptstyle \bullet}$  (\*\*) The additional power supply is mandatory

• (\*\*\*) The use of an additional power supply is recommended to obtain the maximum performance of the device with Alexa<sup>®</sup>, but in this diagram it is not necessary for normal video door entry operation

• Max 5 internal units for apartment

• Classe 300EOS with Netatmo has to be installed only in installation tottally 2wire technology


• For other system particularities, refer to the technical guide




#### 344842 - 344884

alexa built-in

**DIAGRAM 6 - EXAMPLE OF SINGLE-FAMILY DIAGRAM** 

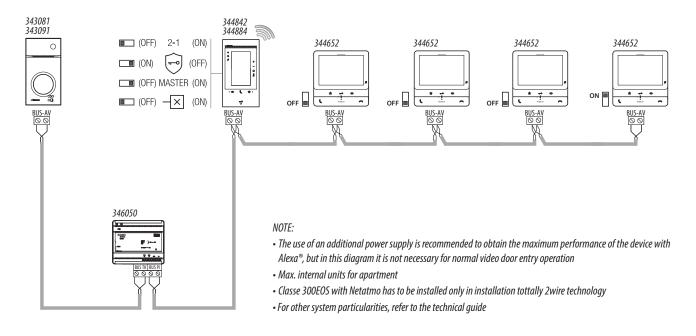

### SCHEMA 7 - EXAMPLE OF SINGLE-FAMILY DIAGRAM WITH 5 CLASSE 300EOS WITH NETATMO

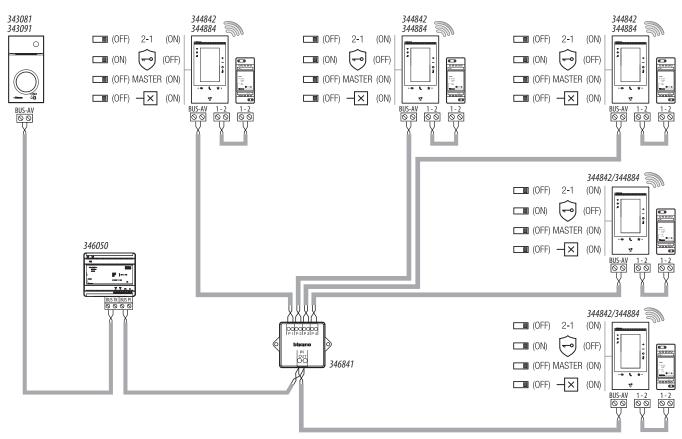

NOTE:


- The additional power supply is mandatory
- Max. 5 internal units for each apartment
- Classe 300EOS with Netatmo must be installed only in systems completely made with 2 wires technology
- For other system particularities, refer to the technical guide



344842 - 344884

alexa built-in

DIAGRAM 8 - EXAMPLE OF TWO-FAMILY DIAGRAM

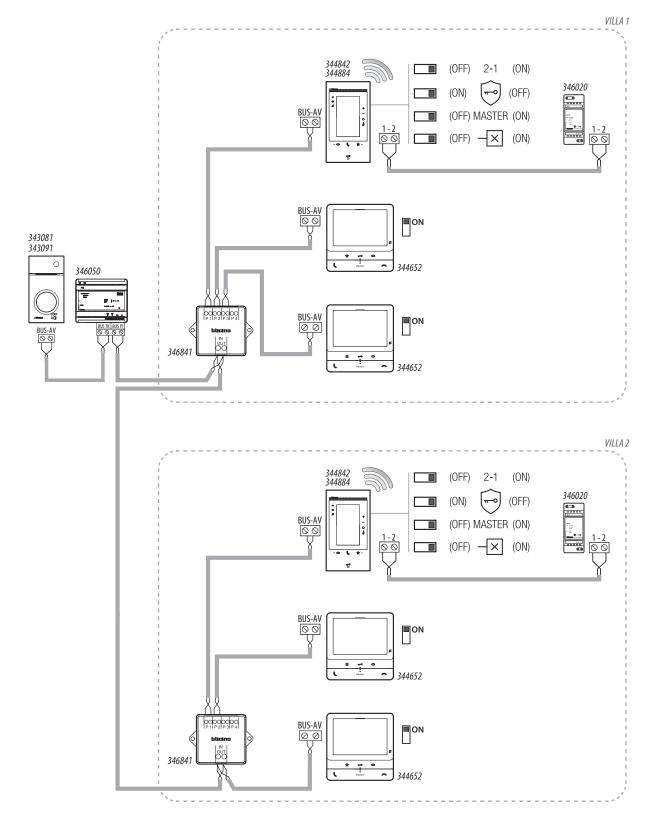

NOTE:

• Max 3 internal units for apartment

- Classe 300EOS with Netatmo has to be installed only in installation tottally 2wire technology
- For other system particularities, refer to the technical guide



### **Main functions**

From the Home Page of the device, it is possible to access the main functions, as described below:



### A Current time.

- Notifications: it displays different types of notifications. R
- C Network connection status.
- D Favourites: it opens the section containing the video door entry objects and the MyHome objects that activate the corresponding functions.
- E Video door entry Favourites highlighted, by default:
  - Ringtone Exclusion: it mutes the ringtone in case of call.
  - Answering machine: records unanswered entrance panel calls.

It is possible to customise the favourites highlighted, by adding them in the Home Page area, in the section "Add an object to the favourites".

F MyHOME function panels: this area displays some of the MyHOME functions available for controlling the home.

Function panels will only be visible if the installer has included at least one of the objects relating to the function. (e.g.: the light panel will only be visible if the installer has configured a light object).

G Settings: it opens the menu used to customise the functions and thus make the most of the device.

The video handset offers the possibility to select among 6 types of bells with programmed ringtones, which can be freely associated to the following type of calls:

**Call from the entrance panel** (configured with S=0)

**Call from the entrance panel** (configured with S=1) **Call from the entrance panel** (configured with S=2)

- **Call from the entrance panel** (configured with S=3)

Intercom call within the apartment Intercom call outside the apartment

## Floor call

The association of the type of ringtone to the event is performed using the dedicated menu on the device.

Using the advanced configuration, the video handset gives the possibility of programming up to: 50 generic activations

- 50 direct activations to the door locks
- 40 intercoms within the apartment
- 40 intercoms outside the apartment
- 50 direct auto-switching on to the EP



Video door entry answering machine

The video door entry answering machine allows (if enabled) to display a video message recorded by the visitor.

It is also possible to record an audio message to play back on the entrance panel in case of unanswered call.

## Intercom function

The intercom function allows for up to 3-minute communication between and among video door entry systems in the same apartment / in different apartments.

### **Door state function**

This function indicates the status of the door lock (only for systems preset with appropriate actuator). If open the "door lock LED" flashes, and if closed, the LED stays off. The function cannot be activated together with the Office function.

## **Office function**

The Professional Studio (Office) function gives the possibility of setting the automatic opening of the door lock in case of call from the Entrance Panel. It cannot be activated at the same time as the Door Status and Safe Door Lock functions. The door lock key flashing (()) indicates that the functions is active.

### **MyHOME Smart Home Functions**

### **MyHOME function panels**

MyHOME function panels allow to simultaneously control all the lights, shutters and fancoils of the house or individual rooms.

It is also possible to manage thermostats and display the energy consumption of the home.

### Simple program

This mode can be used to set different "Day" and "Night" band temperatures.

Example: Set a temperature of 21.5° from 7 a.m. to 10 p.m. and a temperature of 19.5° from 10 p.m. to 7 a.m

### **MyHOME functions**

After the installer has configured the objects in the various rooms and the user has placed them in the Favourites section, it is possible to control the home, for example to switch on the lights or operate the shutters, etc...

**MyHOME Function Table** Colored light If the system includes a coloured light (coloured Light Switch a light on and off, or Philips Hue\* and Lifx\* Enttec ODE\* LED lamps), adjust its intensity. it is possible to adjust its intensity and view its status. Blind Socket Adjust the opening and the Control the load connected closing of the shutters. to a controlled socket. **Towel warmer** Lock M Switch the towel warmer on It opens a door lock. and off. Shutter Scenarios Adjust the opening and the Executes the scenarios set by closing of shutters, rolling the installer. shutters and garage door.

\*The device may not be compatible with some models or their firmware versions.

built-in

alexa

