


This product is a connected accessory which **requires** you to buy and install the Arteor™ Advance with Netatmo Smart Gateway.

Pack contents:

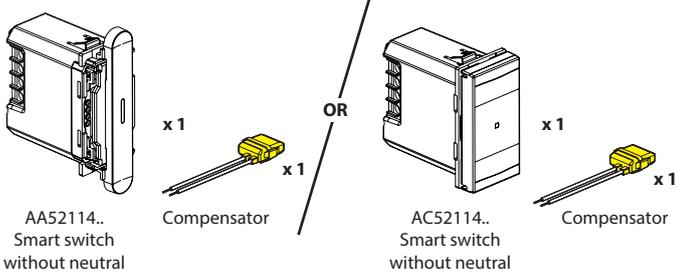

Frequency bands: 2.4 - 2.4835 GHz - Power level: < 100 mW

Characteristics

This switch works with the following types of bulb :


 +35°C +5°C 110 - 240 VAC 50/60 Hz 2 x 1,5 mm ²	 200 W 5 W 100 W 5 W	 (*) LED (*) 200 VA (*) 5 VA (*) 100 VA (*) 5 VA	 200 VA 5 VA 100 VA 5 VA	 200 VA 5 VA 100 VA 5 VA	 200 VA 5 VA 100 VA 5 VA

(*) or 15 bulbs max. For comfortable lighting, we recommend using bulbs of the same type and manufacturer.

Product **NOT COMPATIBLE** with ferromagnetic transformer .
Risk of product breaking

The compensator ref 040149 have to be used systematically to - avoid flash ghost effects when the load is OFF.


110-240V~	50/60 Hz	11 mA max.	-5°C → +55°C

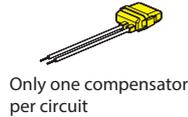

1

Before starting: wiring precautions

If you plan to install two-way light switches, read the following precautions:
To control a light with two or more switches, only use the following products:

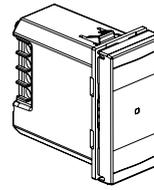


Smart switch without neutral

Never use two smart switches without neutral to control the same light.


AND

Smart wireless controls

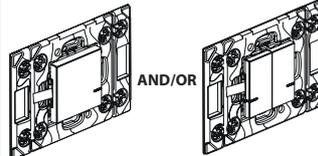


x 1 or several
Single or double smart wireless controls for all (not included in this pack)

Mechanical controls

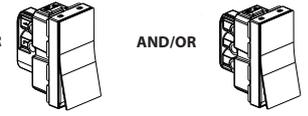

x 1 or several
Up to 5 mechanical push buttons without indicator light (not included in this pack)
x 1
Mechanical switch (not included in this pack).

1 Necessary safety precautions

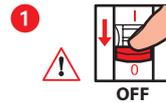

Switch off the power at the main circuit breaker




Make sure that the power is off before continuing with the installation.

2

2 Install the smart switch without neutral

1 Wire the smart switch without neutral

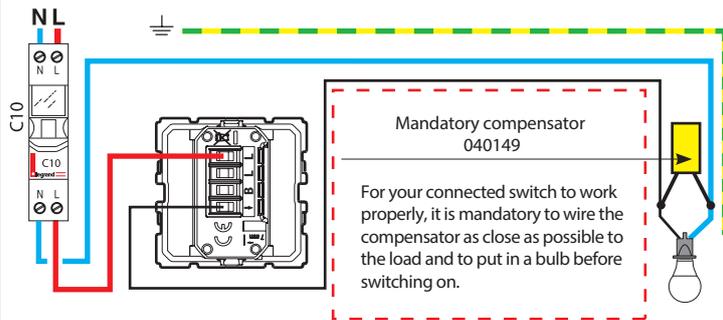

— N (neutral) = blue
— L (live) = any except blue and green/yellow
— Earth = green/yellow

3 Power the smart switch without neutral

Mandatory installation step:




Turn the power back on at the main circuit breaker.


3

Wiring examples:

Use case with 1 or more mechanical push buttons:

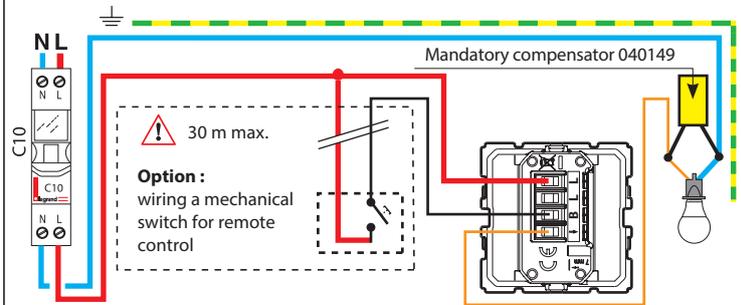

Case of replacing a two-way switch:

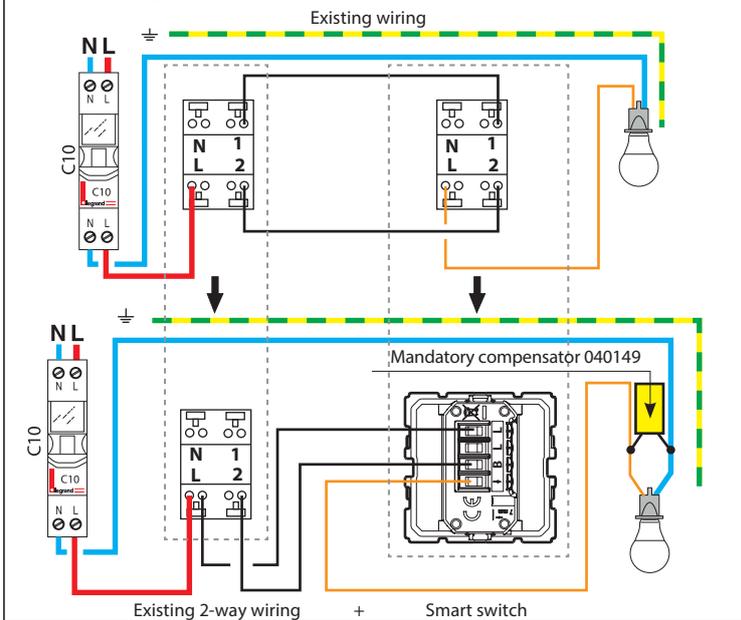


4

LE15074AA

Wiring examples (continued):

Case of replacing a two-way switch with a connected switch without neutral and a wireless light control (sold separately):

wiring with 1 or more wireless light control + a smart switch

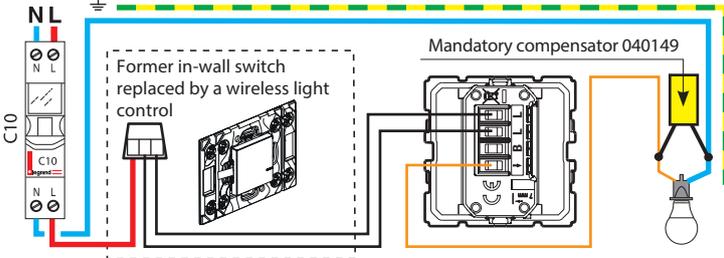


Use a **connector** to connect all 3 wires together (travellers 1 and 2 and lamp return wire).
Use another connector for neutral wire

Pair a wireless switch via the Home + Control app or manually


Start the wireless light control setup manually

1 Network opening to pair the wireless light control with the smart switch without neutral


Control Module

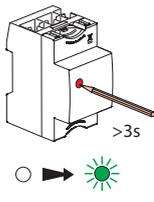


Gateway

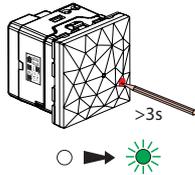

Control Mobile Outlet

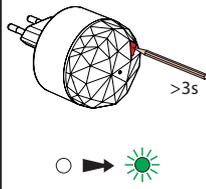

2 Remove the protective tab from the wireless light control. Briefly press the wireless light control to activate it, its indicator light flashes green then turns off.

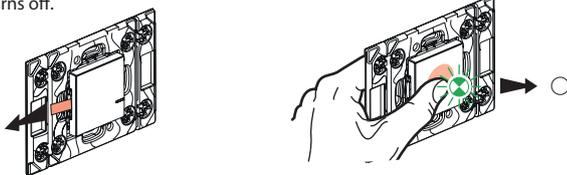


5


Start the wireless light control setup manually (continued)

7 To complete your installation, briefly press the configuration button on the **Control Module** or the **Control Mobile Socket** or on the **Gateway**.


Control Module

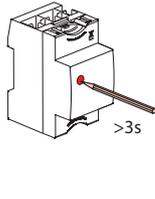

Gateway

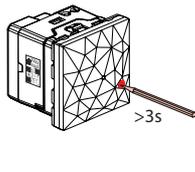


Control Mobile Outlet

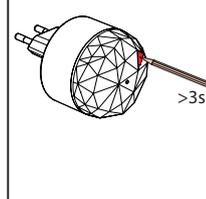

All indicator lights on the products turn off.

Download the **Home + Control** app and follow the instructions to connect your smart light switch.

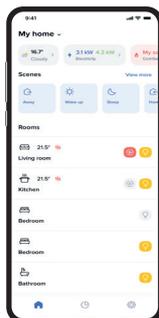


You are ready to control your installation via a vocal assistant and can customise your scenarios via the **Home + Control** App.





7

Start the wireless light control setup manually (continued)


3 The indicator light of the smart switch without neutral turns solid green

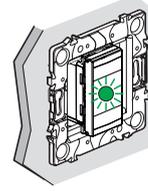

4 Press the center of the connected switch for 3 seconds until it flashes blue

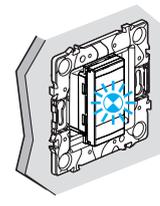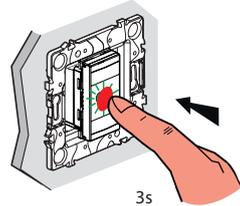

5 Maintain your finger on the button of the wireless light control, tapping 3 times the wireless light control on the smart switch without neutral.

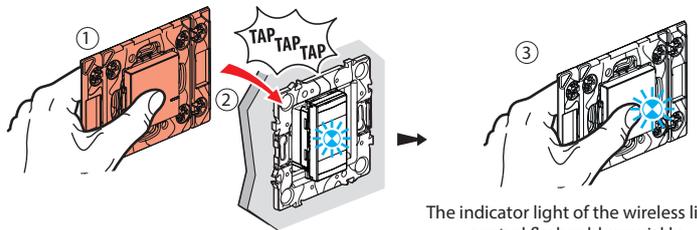


The indicator light of the wireless light control flashes blue quickly

6 The indicator lights on both products briefly turn solid blue, then the indicator light on the smart switch without neutral turns green again, and the indicator light on the wireless light control turns off. **The pairing succeeded.**

6

Reset process

To reset the product, do a long press (> 7sec) on the "Configuration" button, reachable by removing the cover. Reset operation is confirmed by a red flash.

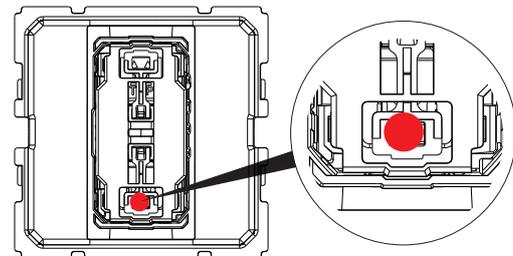

www.legrand.com/reference/AC52114MW
LEGRAND - Pro and Consumer Service - BP 30076
87002 LIMOGES CEDEX FRANCE • www.legrand.com

Safety instructions:

This product should be installed in compliance with installation rules, preferably by a qualified electrician. Incorrect installation and/or incorrect use can lead to risk of electric shock or fire. Before carrying out the installation, read the instructions and take account of the product's specific mounting location. Do not open up, dismantle, alter or modify the device except where specifically required to do so by the instructions. All Legrand products must be opened and repaired exclusively by personnel trained and approved by Legrand. Any unauthorised opening or repair completely cancels all liabilities and the rights to replacement and guarantees. Use only Legrand brand accessories.

SIMPLIFIED EU DECLARATION OF CONFORMITY


The undersigned, **Legrand** declares that the radio-electric equipment referred to in these instructions complies with directive 2014/53/EU.
The full text of the EU declaration of conformity is available on the following website : www.legrand.com/ecatalogue

iOS: To control this HomeKit-enabled accessory, the latest version of iOS or iPadOS is recommended. Apple: App Store is a service mark of Apple Inc, registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license. HomeKit: HomeKit and iPadOS are trademarks of Apple Inc, registered in the U.S. and other countries. HomeKit is a trademark of Apple Inc. Google Play: A recent version of Android with access to Google Play is recommended. Amazon: Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Android: Android, Google Play, and the Google Play logo are trademarks of Google LLC.

8

هذا المنتج هو ملحق متصل يتطلب منك شراء وتركيب الموجه الذي Arteor™ Advance مع Netatmo.

محتويات الحزمة :

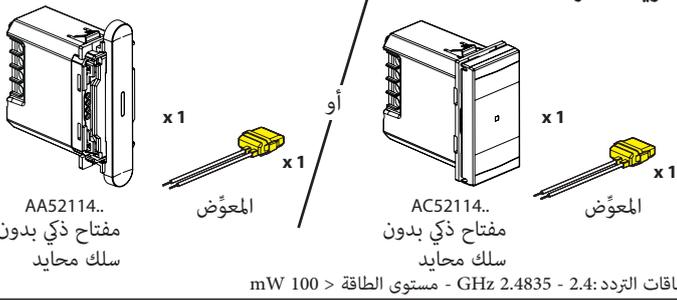

مواصفات المنتج

يعمل هذا المفتاح مع الأنواع التالية من المصابيح

+35°C +5°C	2 x 1,5 mm ²	LED (*)	LED (*)	LED (*)	LED (*)
110 - 240 VAC 50/60 Hz	2 x 1,5 mm ²	200 W 5 W	(*) 200 VA (*) 5 VA	200 VA 5 VA	200 VA 5 VA
240 VAC	Max. Min.	200 W 5 W	(*) 200 VA (*) 5 VA	200 VA 5 VA	200 VA 5 VA
110 VAC	Max. Min.	100 W 5 W	(*) 100 VA (*) 5 VA	100 VA 5 VA	100 VA 5 VA

(*) أو 15 مصباح كحد أقصى. للحصول على إضاءة مريحة، نوصي باستخدام مصابيح من نفس النوع والمصنع

المنتج غير متوافق مع المحولات الحديدية

هناك خطر من كسر المنتج

يجب استخدام المعوض رقم 040149 بشكل منظم لتجنب تأثيرات الوميض الخفي عندما يكون الحمل مطفئاً


V	50/60 Hz	A	°C
110-240V~	50/60 Hz	11 mA max.	-5°C → +55°C

معوض واحد فقط لكل دائرة

1

2) قم بتثبيت المفتاح الذكي بدون سلك محايد

1) قم بتوصيل المفتاح الذكي بدون سلك محايد

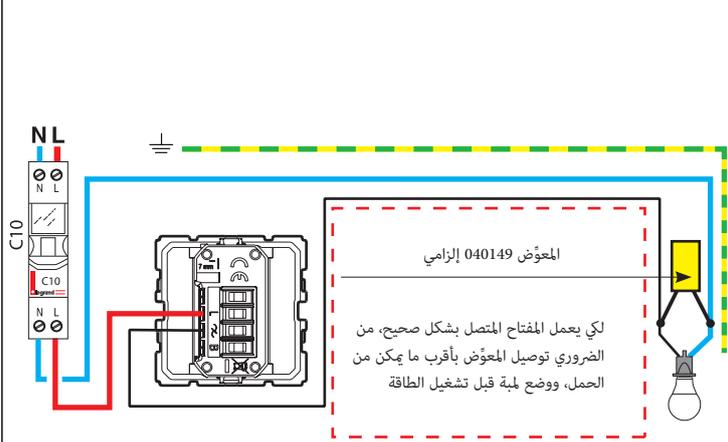

1

3) تشغيل المفتاح الذكي بدون سلك محايد


خطوة تثبيت إلزامية



3

قبل البدء: إحتياطات التوصيل

إذا كنت تخطط لتثبيت مفاتيح إضاءة ثنائية الاتجاه، اقرأ الإحتياطات التالية للتحكم في الضوء باستخدام مفتاحين أو أكثر، استخدم فقط المنتجات التالية

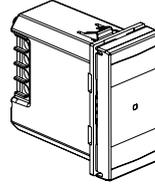

مفتاح ذكي بدون سلك محايد


لا تستخدم أبداً مفتاحين ذكيين بدون سلك محايد للتحكم في نفس الضوء



9

تحكمات لاسلكية ذكية

تحكمات ميكانيكية

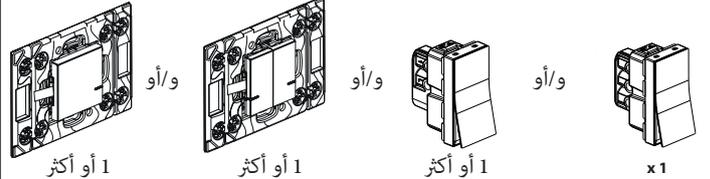

تحكمات لاسلكية ذكية مفردة أو مزدوجة لجميع التحكمات (غير متضمنة في هذه الحزمة)

مفتاح ميكانيكي حتى 5 أزرار ضغط ميكانيكية بدون ضوء مؤثر (غير متضمن في هذه الحزمة)

غير متضمنة في هذه الحزمة

1) إحتياطات السلامة اللازمة

2) تأكد من أن الطاقة مطفأة قبل الإستمرار في التركيب


1) قم بإيقاف تشغيل الطاقة عند قاطع الدائرة الرئيسي



2



أمثلة على التوصيل

مثال: مع زر أو أكثر من الأزرار الميكانيكية

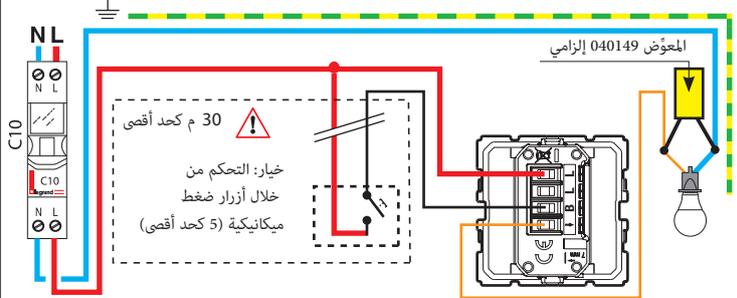

في حالة استبدال مفتاح ثنائي الاتجاه (متابعة)


التوصيل الحالي

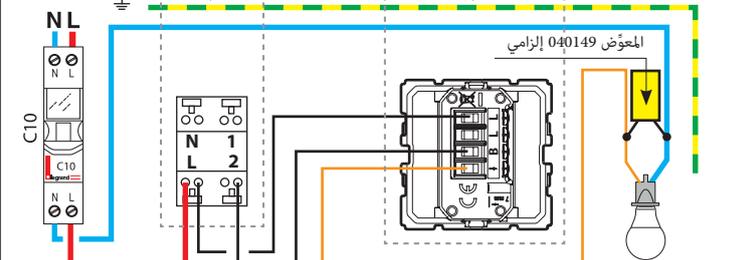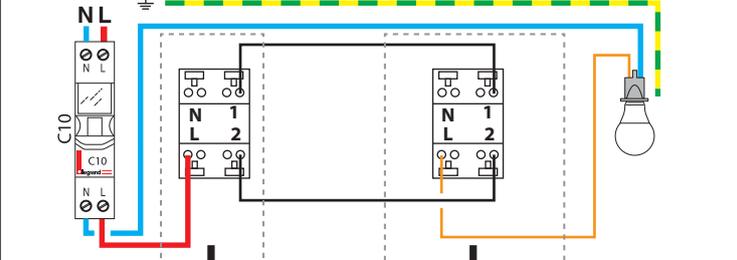

التوصيل الحالي ذو الاتجاهين

4


الحالة عند استبدال مفتاح ثنائي الاتجاه بمفتاح متصل بدون سلك محايد ووحدة تحكم لاسلكية (تابع بشكل منفصل)

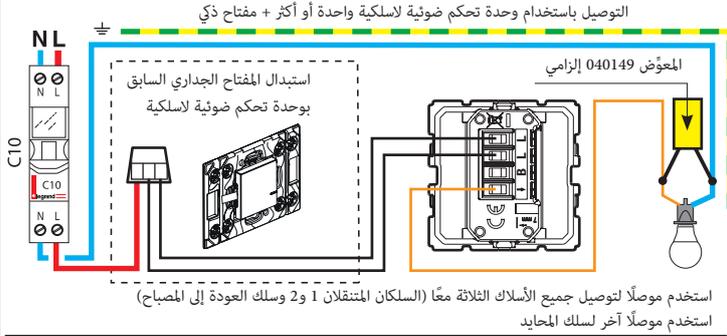

إقران المفتاح اللاسلكي عبر تطبيق Home + Control أو يدويًا

بدء إعداد وحدة التحكم اللاسلكية يدويًا

1 فتح الشبكة لإقران وحدة التحكم اللاسلكية مع المفتاح الذي بدون سلك محايد

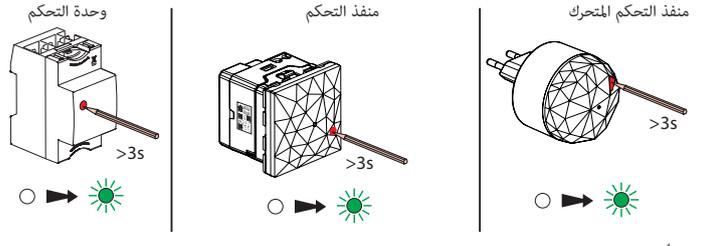


2 أزل الشريط الواقي من وحدة التحكم اللاسلكية اضغط على وحدة التحكم اللاسلكية لفترة وجيزة لتفعيلها، يضيء مؤشرها باللون الأخضر ثم ينطفئ




5


3 يتحول ضوء المؤشر في المفتاح الذي بدون سلك محايد إلى اللون الأخضر الثابت

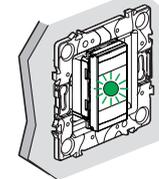

4 اضغط على منتصف المفتاح الذي لمدة 3 ثوانٍ حتى يبدأ في الوميض باللون الأزرق

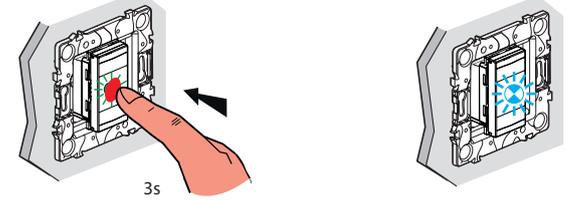


5 استمر بالضغط على زر وحدة التحكم اللاسلكية وقم بالنقر ثلاث مرات على المفتاح الذي بدون سلك محايد باستخدام وحدة التحكم اللاسلكية

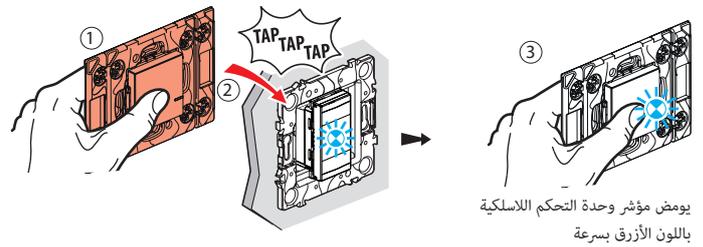

6 تتحول أضواء المؤشرات في كلا المنتجين إلى اللون الأزرق الثابت لفترة وجيزة، ثم يتحول مؤشر المفتاح الذي بدون سلك محايد إلى اللون الأخضر مرة أخرى وينطفئ مؤشر وحدة التحكم اللاسلكية، تم الإقران بنجاح


6

7 استكمال التثبيت، اضغط لفترة وجيزة على زر التكوين في وحدة التحكم أو المقبس المتحرك أو منتصف وحدة التحكم اللاسلكية الرئيسية

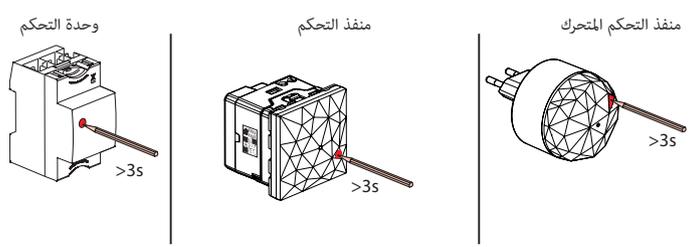

تنظف جميع أضواء المؤشرات في المنتجات

لإعادة ضبط المنتج، اضغط طويلاً (> 7 ثواني) على زر "التكوين"، الذي يمكن الوصول إليه عن طريق إزالة الغطاء تؤكد عملية إعادة الضبط بواسطة وميض أحمر

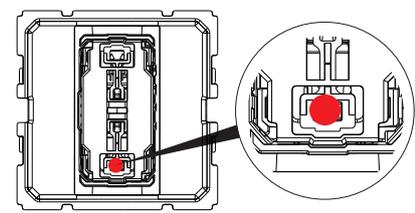

www.legrand.com/reference/AC52114MW
LEGRAND - Pro and Consumer Service - BP 30076
87002 LIMOGES CEDEX FRANCE • www.legrand.com

تعليمات السلامة


يجب تثبيت هذا المنتج وفقًا لقواعد التثبيت، ويفضل أن يتم ذلك بواسطة كهربائي مؤهل. يمكن أن تؤدي التثبيت غير الصحيح و/أو الاستخدام غير الصحيح إلى خطر الصدمة الكهربائية أو الحريق. قبل القيام بالتثبيت، اقرأ التعليمات واعتبر موقع تركيب المنتج المحدد. لا تقم بفتح الجهاز أو تفكيكه أو تغييره أو تعديله إلا عندما يتطلب الأمر ذلك موجب التعليمات. يجب أن يتم فتح وإصلاح جميع منتجات Legrand فقط بواسطة موظفين مدربين ومعتمدين من قبل Legrand. أي فتح أو إصلاح غير مصرح به يلغي تمامًا جميع المسؤوليات وحقوق الاستبدال والضمانات. استخدم فقط الملحقات من علامة Legrand التجارية.

إعلان المطابقة المبسط وفقًا للاتحاد الأوروبي

الموقعين أدناه، Legrand
EU / نعلن أن المعدات اللاسلكية المشار إليها في هذه التعليمات تتوافق مع التوجيه 2014/53.
النص الكامل لإعلان المطابقة للاتحاد الأوروبي متاح على الموقع التالي:
www.legrand.com/catalogue

iOS: للتحكم في هذه الملحقات المدعومة من HomeKit، يُوصى باستخدام أحدث إصدار من iOS أو iPadOS.
Apple: متجر التطبيقات هو علامة خدمة لشركة Apple Inc، مسجلة في الولايات المتحدة ودول أخرى.
iOS هي علامة تجارية أو علامة مسجلة لشركة Cisco في الولايات المتحدة ودول أخرى وتستخدم بموجب ترخيص.
HomeKit: HomeKit و iPadOS هما علامتان تجاريتان لشركة Apple Inc، مسجلتان في الولايات المتحدة ودول أخرى.
HomeKit هي علامة تجارية لشركة Apple Inc.
Google Play: يُوصى باستخدام إصدار حديث من Android مع إمكانية الوصول إلى Google Play.
Amazon: Amazon و Alexa وجميع الشعارات المنتملة بها هي علامات تجارية لشركة Amazon.com Inc، أو الشركات التابعة لها.
Android: Android و Google Play و شعار Google Play هي علامات تجارية لشركة Google LLC.

4 واتباع التعليمات لتوصيل مفتاح الإضاءة الذي الخاص بك Home + Control قم بتنزيل تطبيق

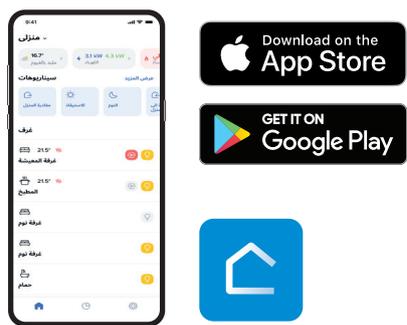

أنت الآن جاهز للتحكم في تثبيتك عبر مساعد صوتي ويمكنك تخصيص السيناريوهات المطلوبة عبر تطبيق Home + Control

