




# COUVERCLES ET CORNIÈRES

## → CLIP POUR COUVERCLES

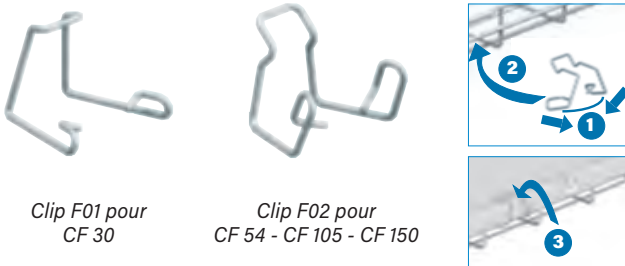

Clip F01 pour CF 30


Clip F02 pour CF 54 - CF 105 - CF 150

Prévoir 6 clips par longueur de 2m

Emb. **GS** **INOX**

<b>Clip F01</b>	Sac 25 P	646 220	646 224
<b>Clip F02</b>	Sac 25 P	<b>646 200</b>	<b>646 204</b>

## → RAD T 90 RS

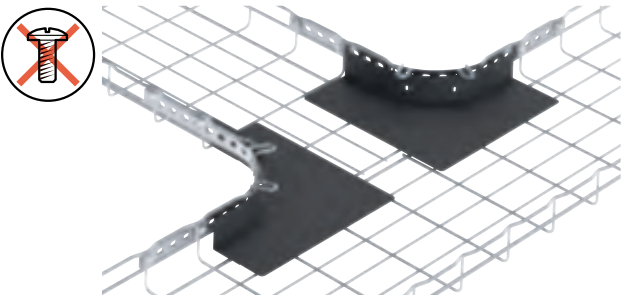



944 770

CF 54 - CF 105 - CF 150  
100 mm


Emb. **PLAST.**

<b>RAD T 90 RS</b>	10 P	944 770
--------------------	------	---------

### INFORMATIONS

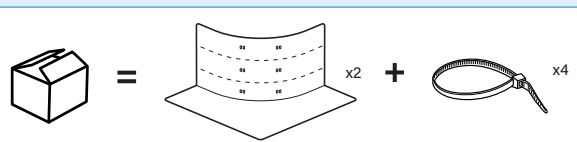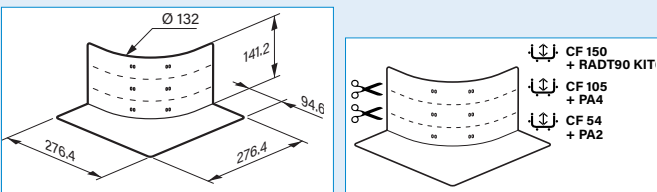

## → PANIER D'ANGLE PA

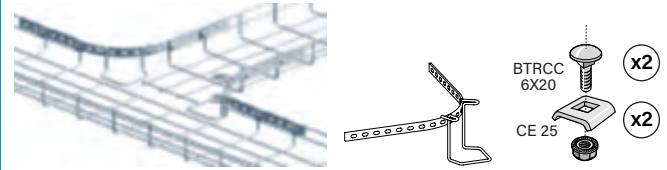


CF 30 - CF 54 - CF 105  
50 -> 600 mm

À associer au clip pour réaliser un T

H (mm) Emb. **EZ**

<b>PA1</b>	30	15 P	840 101
<b>PA2</b>	54	15 P	840 111
<b>PA4</b>	105	15 P	840 131

## → PANIER D'ANGLE RADT 90

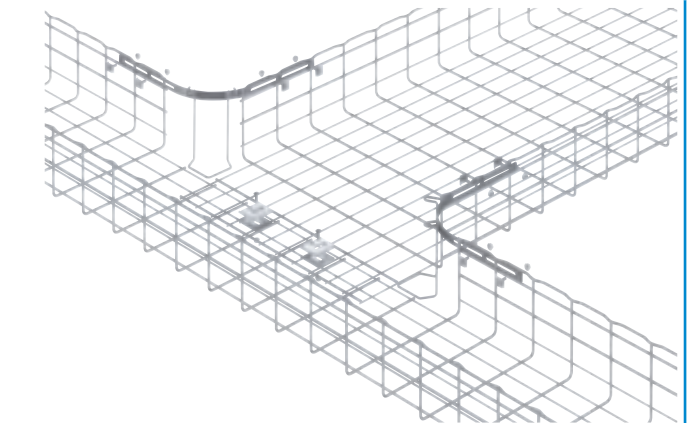

H (mm) Emb. **EZ** **GC**

<b>RADT 90 KIT 6</b>	150	1 P	942 942	943 160
----------------------	-----	-----	---------	---------

### INFORMATIONS

