

F



Dans le cas d'utilisation
d'angles intérieurs
ajustables, poser les
fonds d'angles en premier.

D




Bei Verwendung von
variablen Innenecken
müssen die
Eckunterteile zuerst befestigt
werden.

GB



For variable internal
angle, install the base
of the angle first.

1

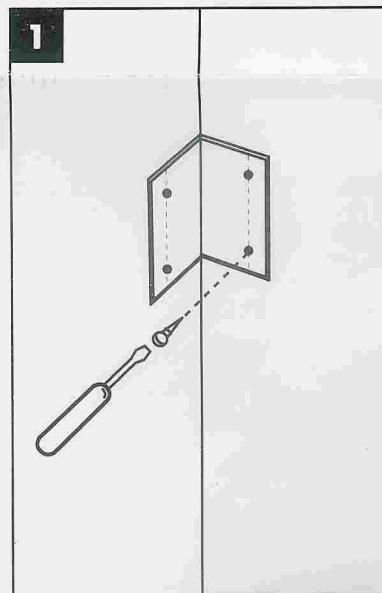


I



In caso di utilizzazione
di angoli interni
variabili fissare
prima i fondi d'angolo.

2

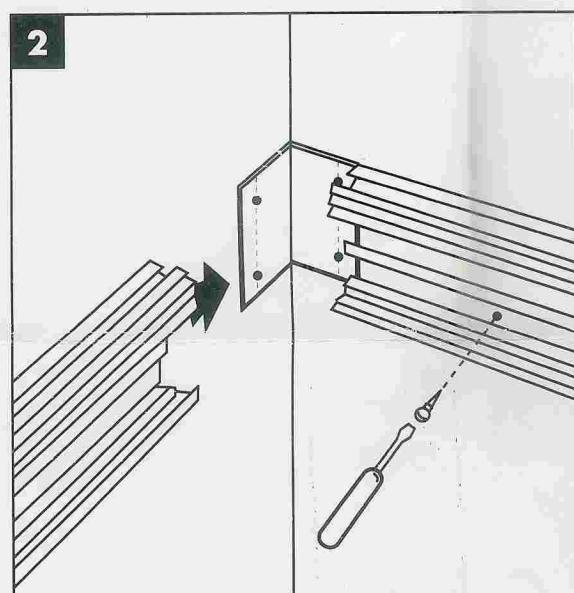

E



En caso de utilización de
ángulos internos variables,
colocar primero las bases de
los ángulos.