


Epure Style Cooker control units

Cat. No(s): AR68053 AR68153 - AR68253 - AR68353 - AR68453

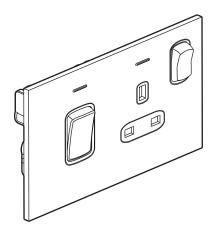

1. USE

British standards of cooker control units 45 A DP switch + 13 A DP switched socket outlet.

 $Complete \ delivered, with compact \ mechanisms \ for \ maximum \ wiring \ space, front \ plate \ control \ unit.$

For flush-mounting, back box to be min. 48 mm deep.

Fixing with screws.


2. RANGE

Cooker control units with blue LED power indicator

AR68053 Configured Cat. No
AR68153 Brushed steel
AR68253 Brushed gold
AR68353 Satin white
AR68453 Matt black

Note: Other finishes and styles are provided, see technical data sheet F02217EN.

3. OVERALL DIMENSIONS (mm)

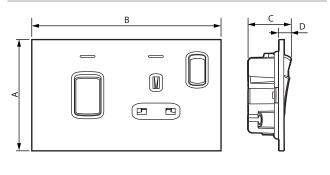

| Α | В | С | D |
|----|-----|------|-----|
| 86 | 146 | 33.5 | 9.5 |

4. DISMANTLING

The plates can be dismantled by inserting the tip of a screwdriver in a purpose-designed notch on the sides of the plate and using it as a lever to unclip it from the fixing points.

Once the plate has been lifted off the wall slightly, just slide your fingers between the plate and the wall to gently remove the plate.

Take care not to pull too hard on the plate, to avoid breaking the fixing

5. CONNECTION

Type of terminals: with screws

Terminal capacity: 3 x 4 mm² - 2 x 6 mm² - 1 x 10 mm² - 1 x 16 mm²

Stripping length: 12 mm

Compatible with flexible or rigid cables.

6. TECHNICAL CHARACTERISTICS

■ 6.1 Mechanical characteristics

Impact tests: IK02

Penetration by solid bodies/liquids: IP20

■ 6.2 Material characteristics

Plates and rockers:

- Decorative brass: AR68153 AR68253
- Brass + paint: AR68353 AR68453

Mechanism housing: PP

Support: steel with surface treatment

Halogen-free

UV-resistant

Self-extinguishing:

850°C/30 s for insulating components holding live parts in place. 650°C/30 s for other insulating components.

■ 6.3 Electrical characteristics

Voltage: 250 V~ Current: 45 A + 13 A Frequency: 50/60 Hz LED: 0.26 W

■ 6.4 Climate characteristics

Storage temperature: - 10° C to + 70° C Usage temperature: - 5° C to + 35° C

Epure Style Cooker control units

7. CARE

■ 7.1 Installation

To protect the products, it is essencial to install them:

- once all surface coatings are completely dry,
- in a dry, non-agressive environment,
- indoors only.

It is recommended that you install the plates only after the wall coatings have been completely finished (paint, fabrics, etc.).

■ 7.2 Instructions

Clean and dust using a soft, damp cloth (dampened with water) or wipes impregnated with a product containing less than 5% alcohol and anionic surfactant.

■ 7.3 Banned products

- solvents, various essential oils, paint, or adhesive tape,
- scouring powders (because are abrasive),
- products containing bleach,
- special products for stainless steel,
- renovators (because they often contain abrasives and chemical agents),
- splashes or fumes from floor, paint, or wood stripping products, etc.

Caution: Always test before using other special cleaning products. Any mechanical attack or foreign object (screwdriver, etc.) striking the surface of the plate would damage the finish and therefore also the surface treatment.

8. STANDARDS AND APPROVALS

Compliant with installation and manufacturing standards. See e.catalogue.

Created: 06/01/2020 **L7 legrand**