










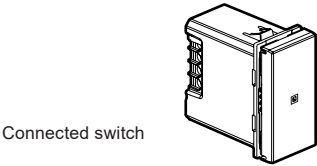



This product is a connected accessory which **requires** you to buy and install the Arteor with Netatmo connected starter pack first.

**Pack contents**



**Characteristics**

In default operating mode (on/off), this switch works with the following bulbs:


 +45°C +5°C			<b>LED</b> 			
100-240 VAC 50/60 Hz	1 x 2.5 mm <sup>2</sup>					
240 VAC	Max.	500 W	(*) 100 W	100 W	250 VA	250 VA
	Min.	4 W				
100 VAC	Max.	250 W	(*) 50 W	50 W	125 VA	125 VA
	Min.	8 W				

(\*) Or 10 lamps max. For a good light comfort, it is recommended to use bulbs of the same type and the same manufacturer.


(\*\*) Use only with transformers designed to work with electronic switches.  
Take account of transformer losses when calculating power.  
Transformers must be loaded at more than 60% of their power.

**This product is designed to operate only with light loads. Any other type of load (relays, valves, etc.) is not permitted as this may cause malfunction or damage to the product and/or load.**


**Before you start: wiring precautions**

 **Do not use:** two connected switches to control the same lighting point.


If you plan to install two-way light switches, read the following precautions:

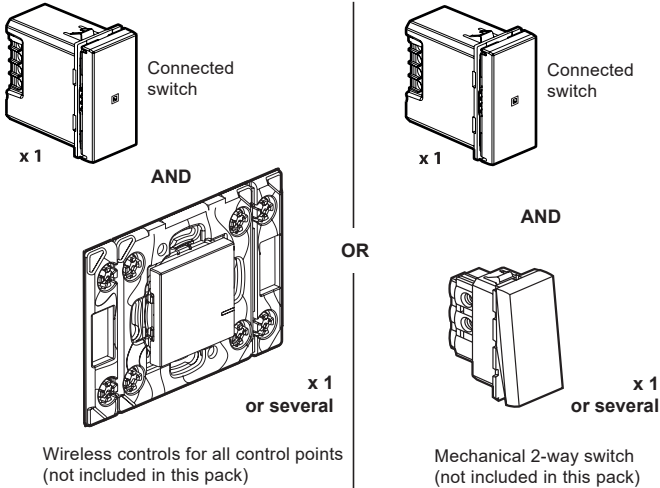


**Tip if replacing a two-way switch using a wireless control:**  
old flush-mounted switch replaced by the wireless control.

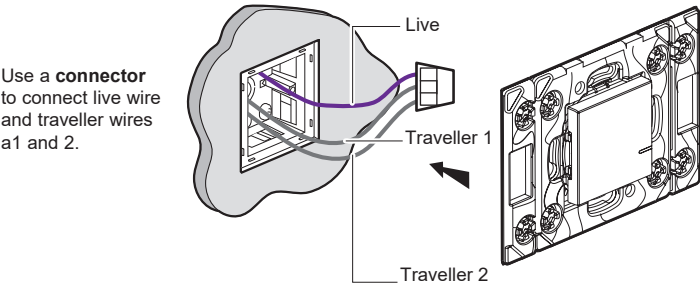


**1 Necessary safety precautions**

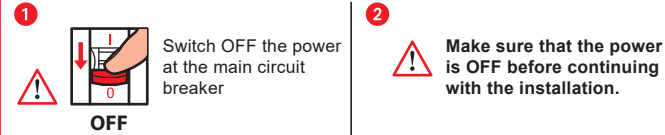

**2 Install the connected switch**

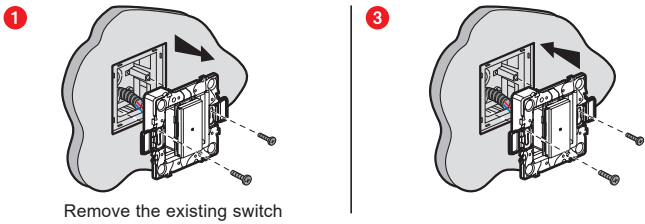

**2 Wire the connected switch**

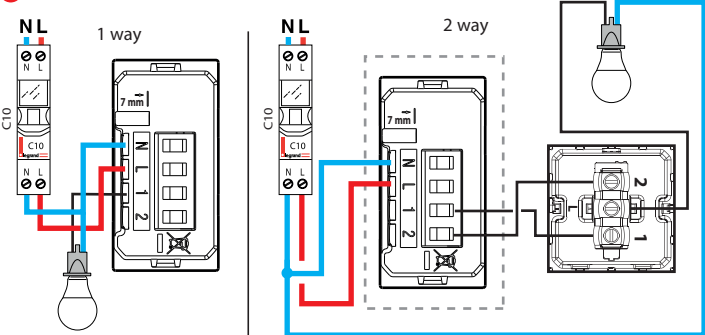

— N (neutral) = blue  
— L (live) = any except blue and green/yellow

Frequency bands: 2.4 - 2.4835 GHz  
Power level: < 100 mW

**3 To add a connected product to your connected installation, you should follow the instructions:**

- in the **Legrand Home + Control** application (Settings/Add a new product section)  
- or consult the user manual on [legrand.com](http://legrand.com)



[www.legrand.com/reference/574211](http://www.legrand.com/reference/574211)

LEGRAND - Pro and Consumer Service - BP 30076  
87002 LIMOGES CEDEX FRANCE • [www.legrand.com](http://www.legrand.com)

**Safety instructions**

This product should be installed in compliance with installation rules, preferably by a qualified electrician. Incorrect installation and/or incorrect use can lead to risk of electric shock or fire. Before carrying out the installation, read the instructions and take account of the product's specific mounting location. Do not open up, dismantle, alter or modify the device except where specifically required to do so by the instructions. All Legrand products must be opened and repaired exclusively by personnel trained and approved by Legrand. Any unauthorised opening or repair completely cancels all liabilities and the rights to replacement and guarantees. Use only Legrand brand accessories.


**SIMPLIFIED EU DECLARATION OF CONFORMITY**

The undersigned,  
**Legrand**  
declares that the radio-electric equipment referred to in these instructions  
complies with directive 2014/53/EU.  
The full text of the EU declaration of conformity  
is available on the following website:

[www.legrand.com/ecatalogue](http://www.legrand.com/ecatalogue)


⚠ يحظر استخدام مفتاحين متصلين للتحكم في نفس موضع الإضاءة.

إذا كنت تنوي تركيب مفاتيح إضاءة ذات تحويلين، فافقرا الاحتياطات التالية:

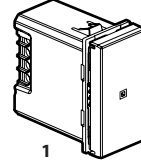


المفتاح المتصل

1

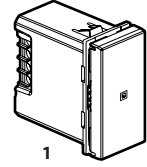


المفتاح المتصل

1

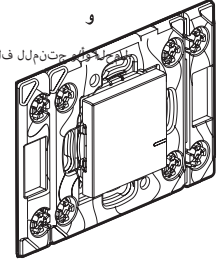

1 أو أكثر

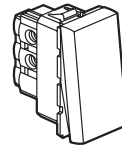


1 أو أكثر

مفتاح ميكانيكي ذو تحويلين (ليست موجودة في هذه العلبة)

وحدات التحكم اللاسلكية لجميع مواضع التحكم (ليست موجودة في هذه العلبة)

نصيحة في حالة استبدال مفتاح ذي تحويلين باستخدام وحدة تحكم لاسلكية: استبدال المفتاح القديم المركب داخل الجدار بوحدة التحكم اللاسلكية.

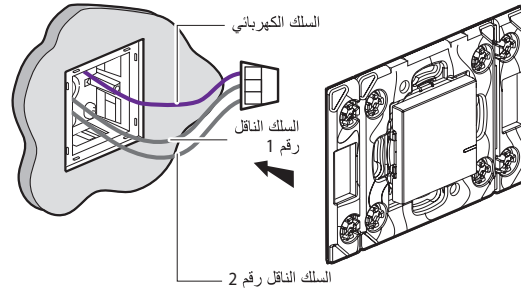

استخدم أداة وصل لتوصيل السلك الكهربائي والأسلاك الناقلة رقمي 1 و 2.

6

#### ① احتياطات السلامة الضرورية

2


تأكد من فصل التيار الكهربائي قبل متابعة خطوات عملية التركيب.

1


افصل التيار الكهربائي من القاطع الرئيسي للدائرة الكهربائية مفصول

#### ② تركيب المفتاح المتصل

3

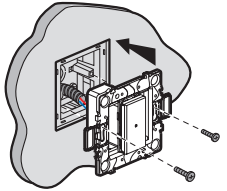


1

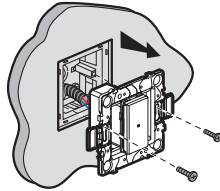

قم بإزالة المفتاح الموجود

#### ② قم بتوصيل أسلاك المفتاح المتصل

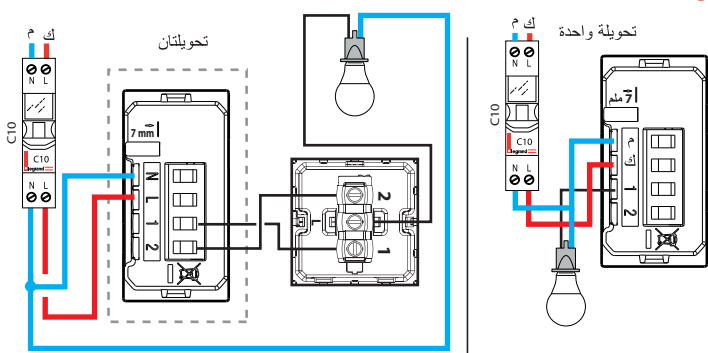

نطاقات التردد: 2.4835 - 2.4 جيجاهرتز  
مستوى القدرة: > 100 مللي واط

م (محايد) = أزرق  
ك (خط كهربائي) = أي واحد فيما عدا الأزرق والأخضر/الأصفر

7

#### ③ لإضافة منتج متصل إلى المنتجات المتصلة المركبة لديك، يجب اتباع الإرشادات:

- الواردة في دليل المستخدم المرفق مع علبة المنتجات الأساسية المتصلة
- الموجودة في التطبيق Home + Control الخاص بشركة Legrand (القسم الإعدادات/إضافة منتج جديد)
- أو راجع دليل المستخدم المتوفر على [legrand.com](http://legrand.com)



[www.legrand.com/reference/574211](http://www.legrand.com/reference/574211)

LEGRAND - Pro and Consumer Service - BP 30076  
87002 LIMOGES CEDEX FRANCE • [www.legrand.com](http://www.legrand.com)

#### ⚠ إرشادات الأمان:

يجب تركيب هذا المنتج طبقاً لقواعد التركيب ويفضل أن يقوم بالتركيب كهربائي مؤهل. فقد يؤدي التركيب الخاطئ و/أو الاستخدام الخاطئ إلى مخاطر التعرض لصدمة كهربائية أو نشوب حريق.  
اقرأ النشرة قبل التركيب، وأفرد مكاناً لتركيب المنتج خاصاً به.  
لا تفتح أو تفك أو تعطل أو تحوّل المنتج ما لم يُشر إلى ذلك بشكل محدد في النشرة. فكل منتجات Legrand يجب فتحها وإصلاحها حصراً من قبل فنيين مدربين ومؤهلين لدى Legrand. وكل فتح أو إصلاح غير مسموح به يُبطل المسؤوليات وحقوق الاستبدال والضمانات. لا تُستخدم سوى إكسسورات من ماركة Legrand حصراً.

#### إعلان مطابقة مبسط للاتحاد الأوروبي:

الموقع أدناه، Legrand،  
يعلن أن المعدات الكهربائية اللاسلكية المشار إليها في هذه  
التعليمات تتوافق مع التوجيه 2014/53.EU.  
النص الكامل لإعلان المطابقة للاتحاد الأوروبي متاح على الموقع الإلكتروني التالي:

[www.legrand.com/ecatalogue](http://www.legrand.com/ecatalogue)

8