


LIGHT UP ACTIVITY MULTISENSOR DETECTOR

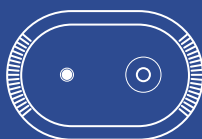

PROCEDURES MANUAL

SEPTEMBER
2024

Table of contents

PRODUCT PRESENTATION	3
ARCHITECTURAL DESCRIPTION	4
POE	7
PRESENTATION AND PRODUCT INSTALLATION	10
CLOSE UP APPLICATION	14
PREREQUISITES FOR USING THE CLOSE UP APPLICATION	15
1. Sign in to the Legrand Close Up application via your Legrand account	15
2. Legrand Close Up application: opening the projects screen	16
SHARING OR TRANSFERRING PROJECT MANAGEMENT	17
1. Share project management	17
2. Transfer project management	17
USING THE CLOSE UP APP.	18
1. Product selection	18
2. Product settings reading	18
3. Access to advanced settings	19
4. Tools access	19
5. Counting module configuration	20
6. Counting module - creation of zones per move	20
7. Counting module - manual zone creation through coordinate input	22
8. Advanced features	23
9. Calibration	24
USE CASES	25
Meeting room	25
Open-plan office	25
Medium office	26
Circulation area	26
FLOW MATRIX	27
MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST	28
1. Prerequisites	28
2. First time use	29
3. MQTT client configuration	31
4. Metrics transmission frequency configuration	40
PRODUCT UPDATE	41
1. Via API	41
2. Via the Close Up application	44

PRODUCT PRESENTATION


The Light Up Activity Multisensor detector is intended for tertiary buildings (small or large) such as offices, co-working spaces, meeting rooms, shared spaces, etc., to relay information enabling third parties to provide services such as :

- Managing space occupancy
- Managing cleanliness on the premises
- Improving air quality and the comfort of living spaces

With regard to these objectives, the Light Up Activity Multisensor includes sensors able to detect the number/location/activity of people and perform readings on physical factors : temperature, humidity, VOCt, eCO2, IAQ, noise level, brightness, etc.

The counting module can count the number of people present as well as their position.

The Light Up Activity Multisensor is a connected object whose function is to broadcast information from its various sensors onto the network via the MQTTs protocol.

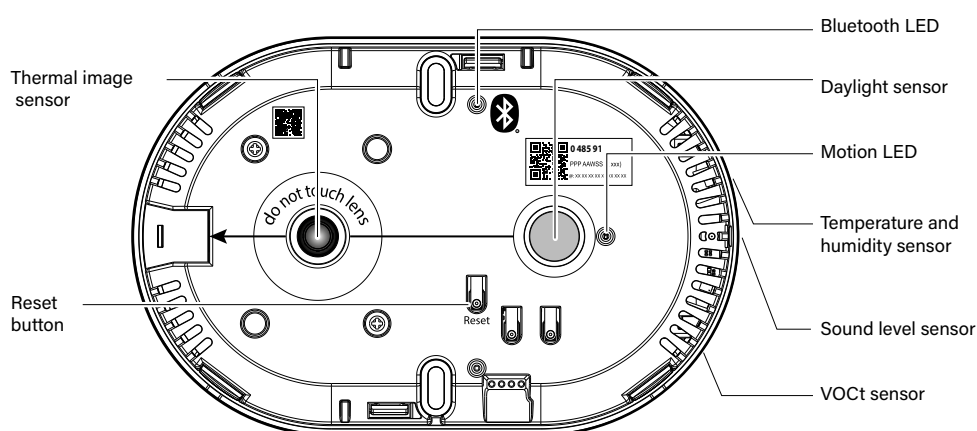

Reset button :

Restores factory settings with this key.

Bluetooth light (blue) :

Indicates that a device is paired with the Close Up application.

Motion light (green) :

Green light for start-up and movement.

ARCHITECTURAL DESCRIPTION

Installation principle


The product must be installed by a qualified technician who complies strictly with installation conditions, taking into account operating modes.

Office building


A 5-storey building with 5 office floors.

One Activity Sensor per office floor (64 m²).

FLOOR EXAMPLE

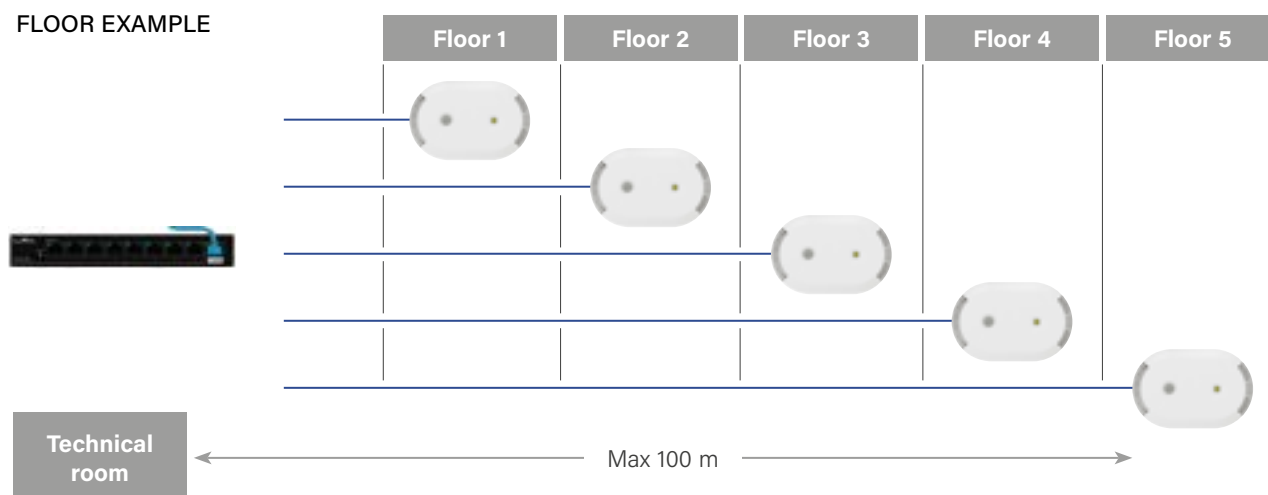

ARCHITECTURAL DESCRIPTION (CONTINUED)

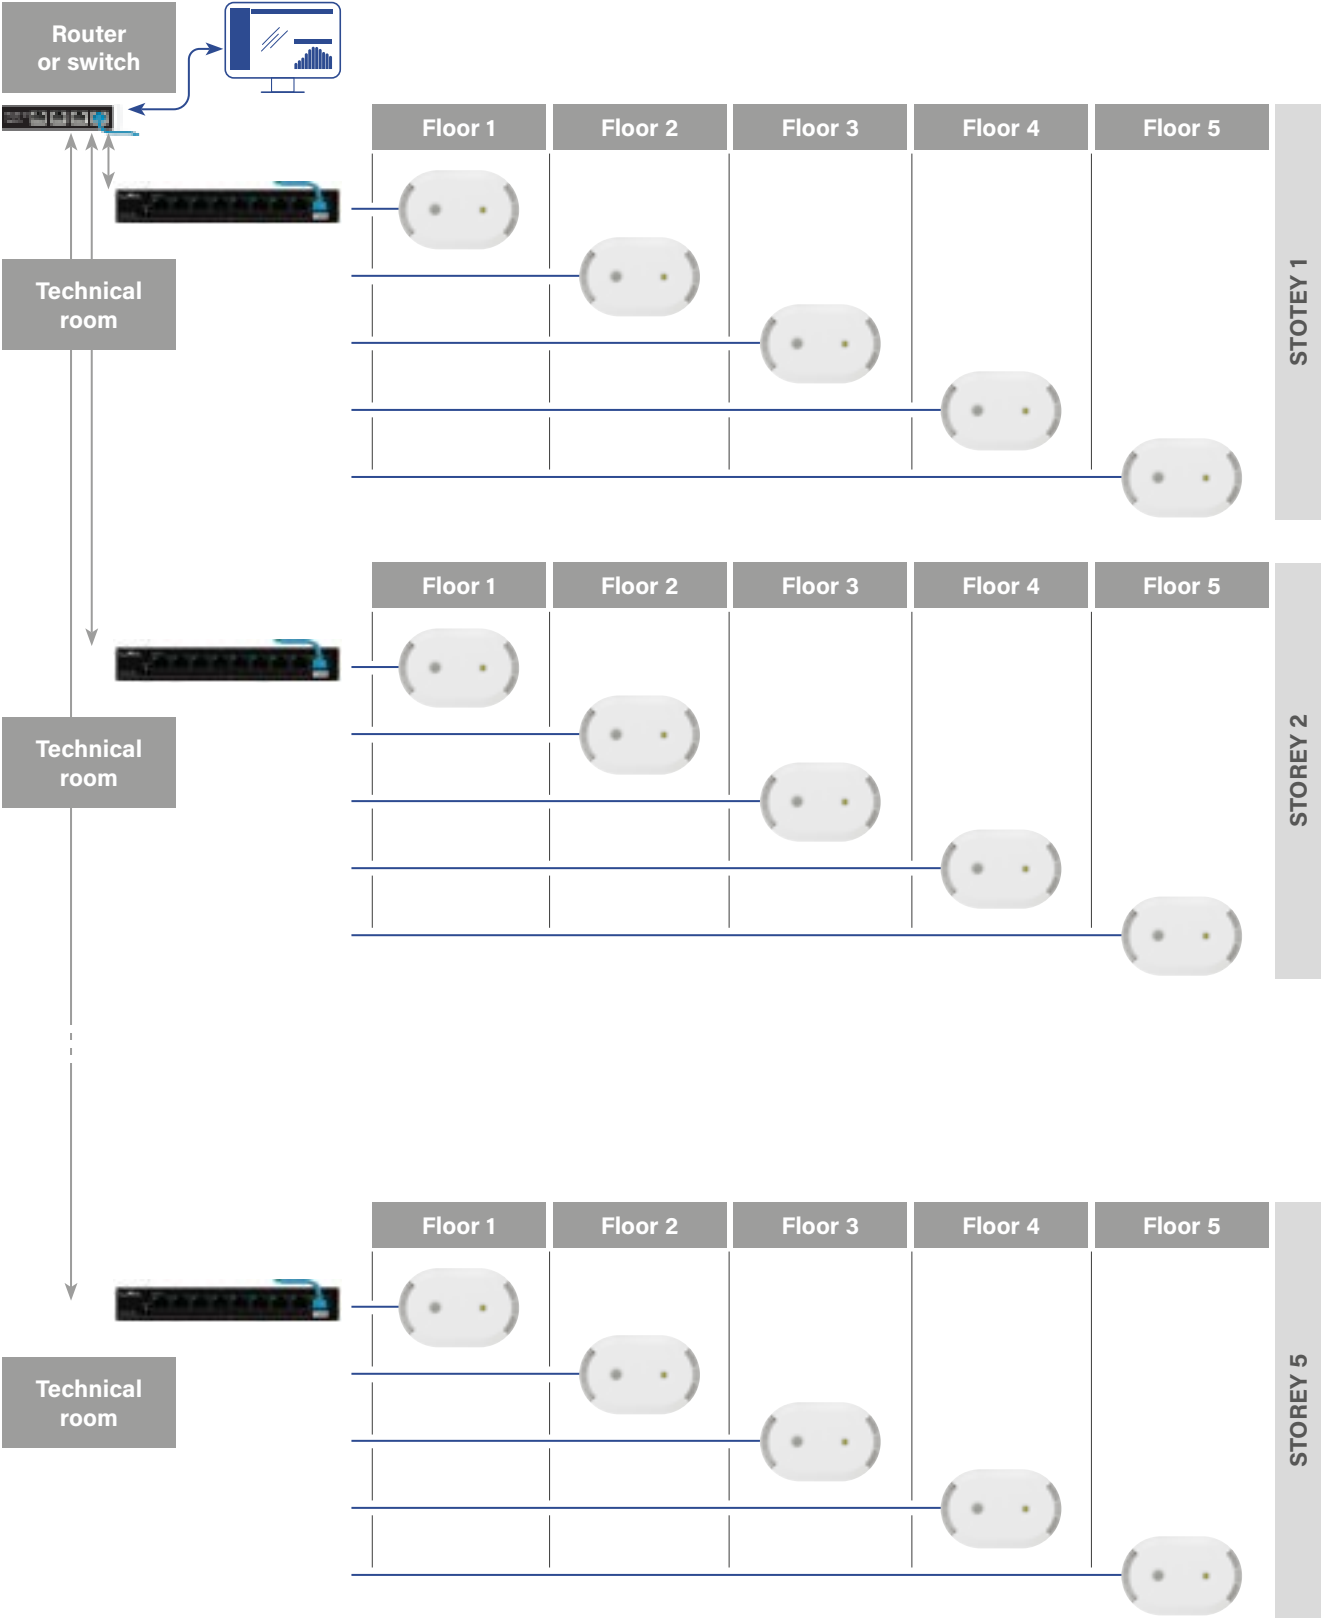


ARCHITECTURAL DESCRIPTION

Commerce

A commercial site consisting of 2 functional areas.
One Activity Sensor per functional area (max 64 m²).

EXAMPLE OF A FUNCTIONAL ZONE

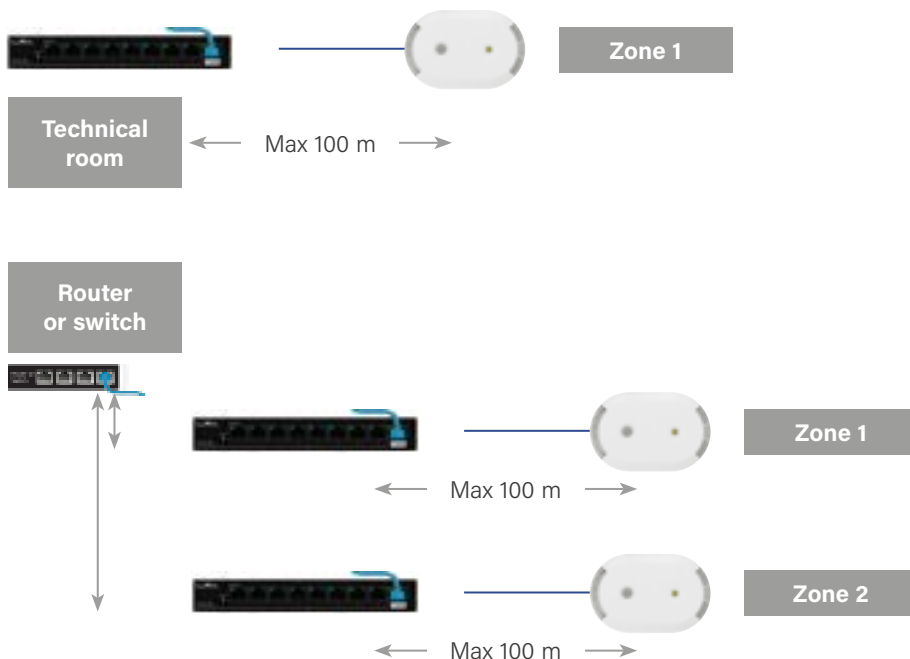

POE

The purpose of this chapter is to outline the requirements and recommendations for a PoE installation of the Activity Multisensor detector. The correct operation of our products cannot be guaranteed if these constraints are not respected.

Power-over-Ethernet is now widely used in the IT sector.

Used in many applications, PoE is the preferred solution for powering Activity Multisensor detectors.

PoE equipment performance

PoE : Power Over Ethernet Simplified technical chart	802.3bt							
	Type 3				Type 4			
	802.3at							
	802.3af Type 1		Type 2					
Power supply equipment class (PSE - Power Sourcing Equipment)	Class 1	Class 2	Class 3	Class 4	Class 5	Class 6	Class 7	Class 8
Max PSE power	4 W	7 W	15.4 W	30 W	45 W	60 W	75 W	90 W
Minimal power to PoE remote-powered equipment (PD - Powered Device)	3.84 W	6.49 W	13 W	25.5 W	40 W	51 W	62 W	71.3 W
Used pairs	2 pairs		2 or 4 pairs		4 pairs			

Wiring recommendations

The structured wiring system must be designed to ensure PoE compliance. This includes the following requirements :

- PoE certified components
- Development of a solution ensuring system operation under PoE, including installation methods to limit heat and reduced distances to maintain performance at temperatures above 20°C.
- Guaranteed compliance with category RP3 in accordance with ISO/IEC 14763-2.

All products, developments and tests must comply with ISO/IEC 11801 and all related standards.

The structured cabling solution must be designed and installed to provide the telecommunications infrastructure (patch panels, chassis, patch cords, cables, plates and telecommunication sockets) needed to set up a uniform distribution system in the premises to support the required applications.

For a wiring installation conforming to ISO/IEC 11801-2, ISO/IEC 11801-3, ISO/IEC 11801-4 and ISO/IEC 11801-6, the planning, installation and administration requirements of category RP3 must be applied.

All cables dedicated to the PoE power supply of the Activity Multisensor must be compatible up to 90 W (IEEE 802.3 af, IEEE 802.3 at, IEEE 802.3 bt) and installed in accordance with the installation standards ISO/IEC 14763-2 (final version) and/or EN 50174-2: 2018.

To simplify the calculation of the infrastructure while guaranteeing class RP3, Legrand has defined simple rules for a range of parameters: ambient temperature, type of beam, distances, etc. The following table summarises these simple rules.

POE

Maximum ambient temperature around cables	40°C
Maximum number of cables per cluster	24
Maximum number of clusters	Depending on enclosure type
Maximum length of Permanent Link	80 m
Maximum cord length for workspace	5 m
Maximum equipment cord length	5 m
The specific conditions for outdoor wiring are applied	
The specific identification for PoE is respected	

Categories of cables for use

Under the specified conditions and using Legrand cables, LCS³ Class E (Cat. 6) and Class EA (Cat. 6A) cabling systems meet the RP3 requirements of ISO/IEC 14763-2 (and EN 50174-2) and therefore provide Ethernet and PoE on 100% of the installed links.

Class D (Cat. 5) is excluded from the PoE recommendations because it generates significant losses in the transport of energy.

PoE switch recommendations

PoE switches must be IEEE compliant. This ensures compliance with IEC 62368-3 and therefore enables the circuit to be considered as SELV.
SELV installation rules apply.

Legrand recommendations

LCS² 19-inch PoE Ethernet Switch

- 24 PoE+ ports
- 1 manageable gigabit
- 370 W power supply

Product reference : 0 334 92

Acceptance testing

Perform tests in accordance with ISO/IEC 11801-1.

The Legrand PoE guide combined with the ambient temperature assumptions can replace the PoE heating calculations in the inspection file.

POE

Acceptance testing with worksite plug :

The test equipment used for certification must comply with the following requirements :

- It must comply with the IEC 61935-1 norm: Enables permanent link tests in accordance with the IEC 61935-1 norm and MPTL tests in accordance with the ISO/IEC 14763-4 norm
- Use dedicated permanent link adapters for permanent link (PL) testing. (Channel adapters with cords are not accepted)
- Use dedicated adapters for MPTL tests, generally referred to as 'patch cord adapters'
- Enable test results to be verified using dedicated software, either installed or cloud-based



PRESENTATION AND PRODUCT INSTALLATION

Characteristics

IPv4 & IPv6.


Metrics published via MQTTs protocol.

Configuration via API REST HTTPs or COAPs.

API documentation in Swagger/OpenAPI format (Version 3).

Protocol security provided by TLS/DTLS 1.2.

Dimensions

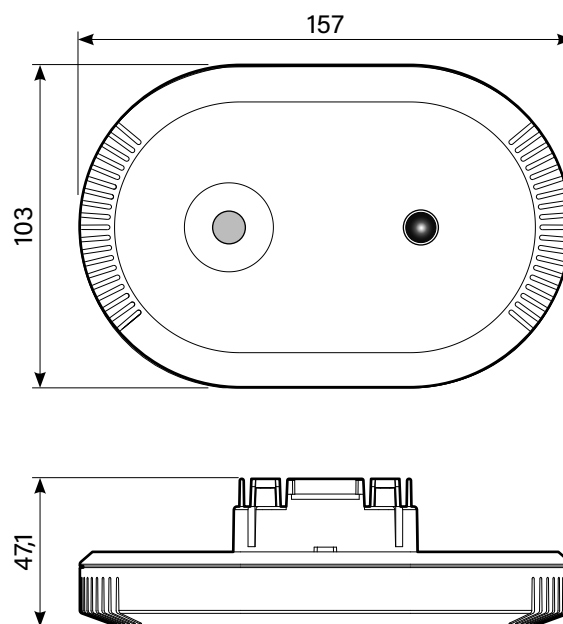


Monitored area and installation height

Maximum detection area : 64 m² → 8 m x 8 m square, independently of product installation height (between 2,5 m and 4 m)





The measurement of the light level is carried out vertically to the detector on a diameter of 3 m.

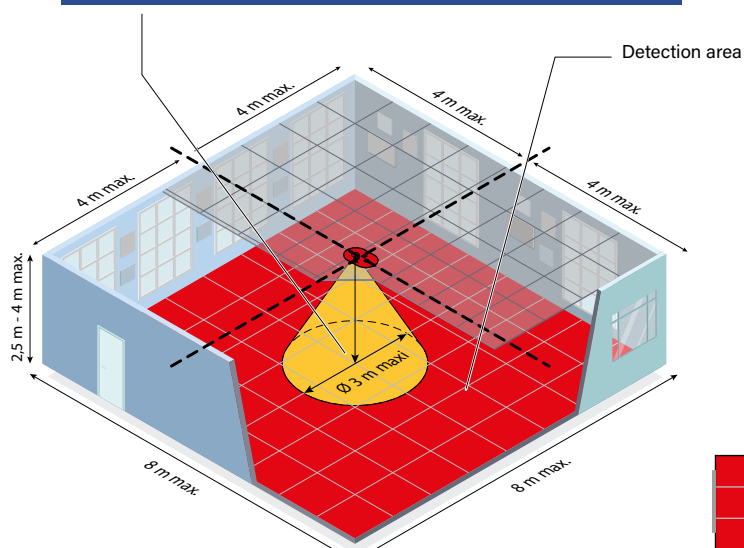

Detects the position of people in three dimensions: X, Y, Z.

Accuracy of people's coordinates in X, Y: 50 cm from any direction, regardless of posture.


In height (Z) only differentiation between sitting/standing position.

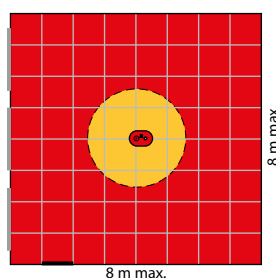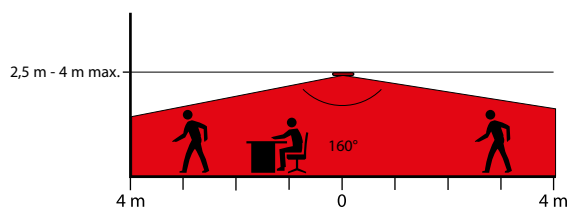


Up to 6 configurable **Zones of Interest** and/or **Exclusion** can be monitored.

PRESENTATION AND PRODUCT INSTALLATION (CONTINUED)

Ceiling installation (2.5 m to 4 m high) flush-mounted

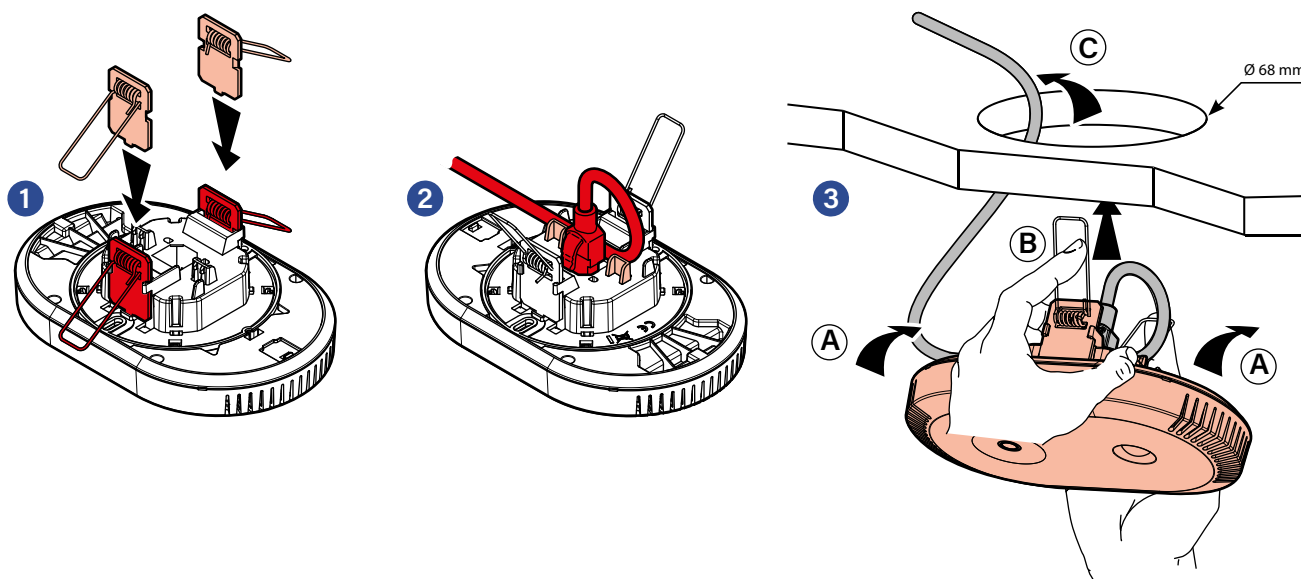


Accessory ref. 0 485 80 for surface mounting

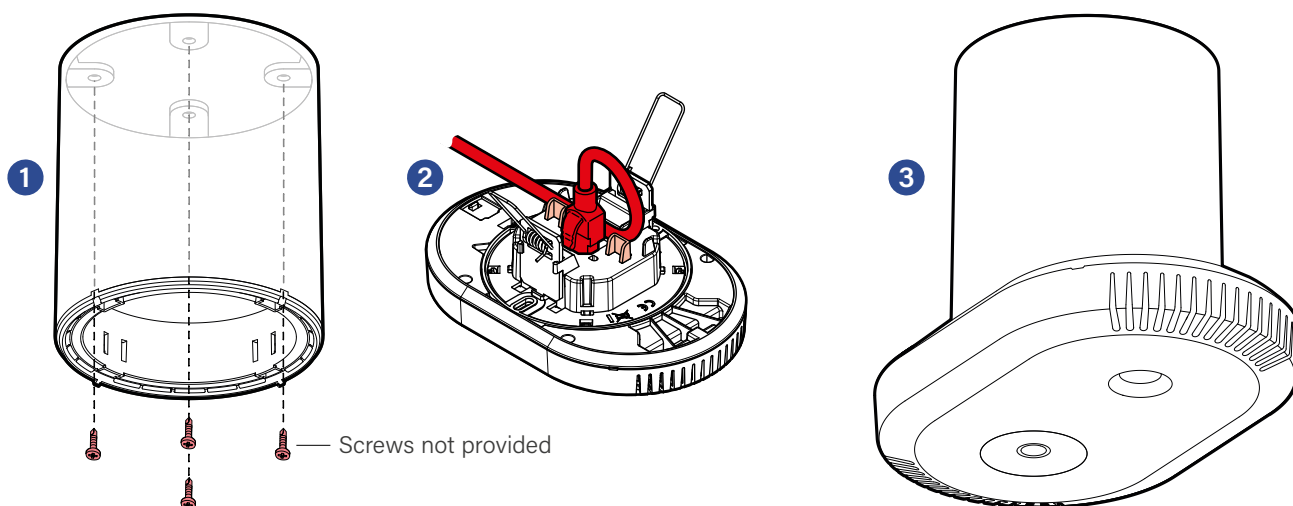


PRESENTATION AND PRODUCT INSTALLATION (CONTINUED)

The detector must be mounted perfectly horizontal.

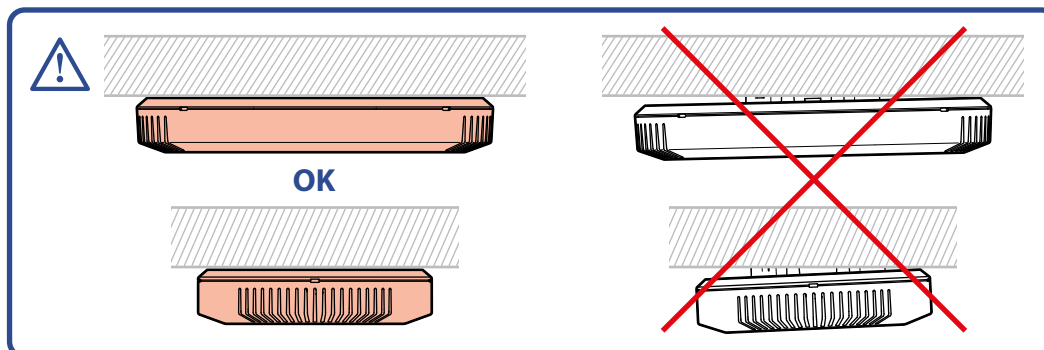

Sensor orientation parallel to wall : it is recommended to orient the detector towards the back of the room following the door's movement.

In large areas that require the installation of several devices, it is recommended to install them in a row and facing in the same direction.

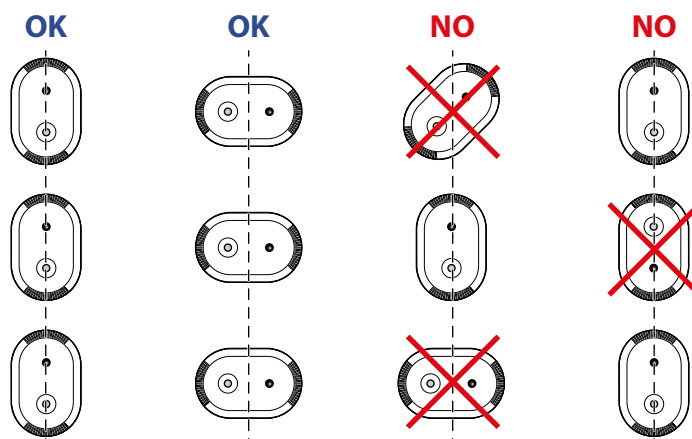


To avoid double counting, position the detectors far enough apart (8 m).

If this isn't possible → create an exclusion zone on the 2 sensors to exclude the overlapping zone.


PRESENTATION AND PRODUCT INSTALLATION (CONTINUED)

It is recommended to :

- install the product in the center of the room
- avoid direct airflow over product vents. Place the detector at a distance of over 1.5 m from a glass surface to avoid infra-red reflection.
- keep the product away from an electrical supply column or suspended luminaire to maintain maximum field of vision.

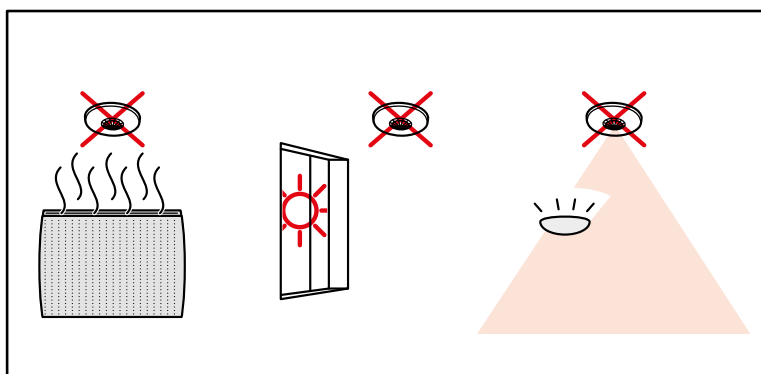

No direct airflow over the product.

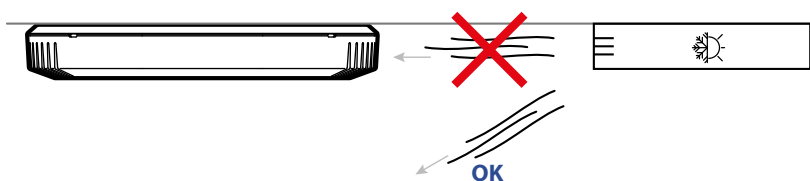

Do not move the detector after calibration.

Should it be necessary to relocate the detector : mandatory re-calibration procedure and redefinition of existing counting zones, if any.

CLOSE UP APPLICATION

Product configuration via Close Up enables :

- Securing the detector.
- Access to Activity multisensor settings.
- Configuration of the people counting module: calibration, operating modes, creation of zones.




Legrand
Close Up

TÉLÉCHARGEMENT GRATUIT SUR



App Store is a service mark of Apple Inc. registered in the United States and other countries. Google, Google Play, Android, are registered trademarks of Google LLC.

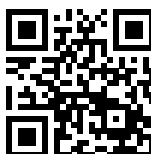

On opening the Legrand Close Up application for the first time, you must accept the following terms and conditions to ensure optimal use :

- geolocation : necessary for Bluetooth use
- access to photos, videos, music/audio files : to save settings within a file
- take photos and record videos: for scanning QR codes




PREREQUISITES FOR USING THE CLOSE UP APPLICATION

1. SIGN IN TO THE LEGRAND CLOSE UP APPLICATION VIA YOUR LEGRAND ACCOUNT



Internet connection is required as all your sites will be linked to your Legrand account.


- Open the Legrand Close Up application :
- If you already have a **Legrand account**, log in and go directly to the following page.
- Otherwise, click on **Create a single account for all our applications**.

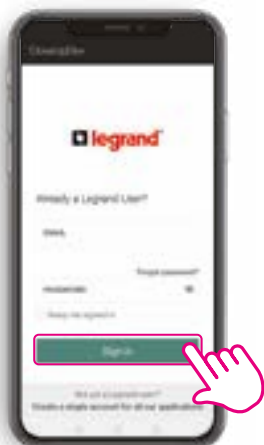

Or



- To create your Legrand account, enter your **e-mail address** and the **verification code** you received before entering the required information.

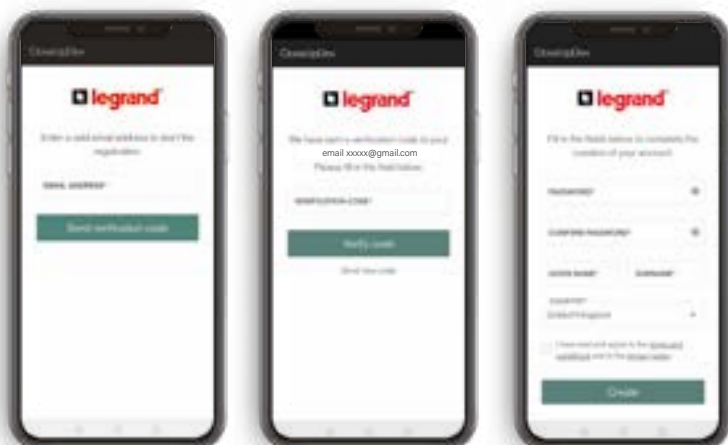

PREREQUISITES FOR USING THE CLOSE UP APPLICATION (CONTINUED)

2. LEGRAND CLOSE UP APPLICATION: OPENING THE PROJECTS SCREEN

The project exists :
Click on it to select it.



NOTE


A project corresponds to a site (with one or more buildings, floors and zones)

IMPORTANT

Once you have selected a site, any product you connect to afterwards will be linked to that site. As a result, it will no longer be possible to connect to this product from another site.

It is, however, possible to share or delegate sites.

The project does not exist :
Click on **Create project** and fill in the requested details.

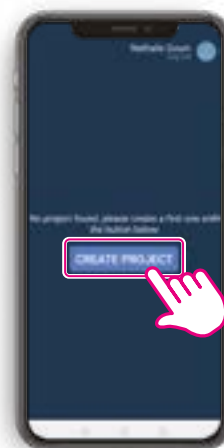


Internet access is required to create a project.

Offline access to the project requires the use of Close Up with a recent internet connection (less than 24 hours).

SHARING OR TRANSFERRING PROJECT MANAGEMENT

1. SHARE PROJECT MANAGEMENT

- Open the projects list.
- Swipe from **right to left**.
- Click the **share** button.

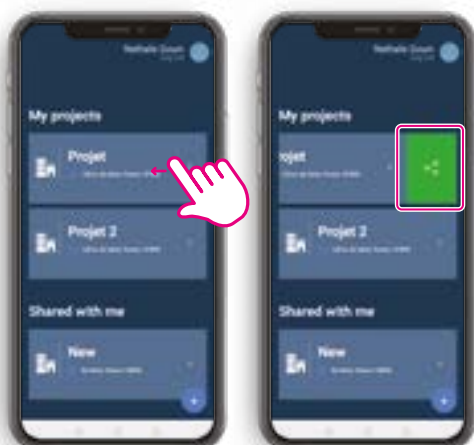


- Select **Delegation of ownership**.
- Enter the **e-mail** address of the person you want to share ownership of the project with.
- Click on **Validate**.



Ownership of the project is shared, preserving all your access settings.

2. TRANSFER PROJECT MANAGEMENT

- Open the projects list.
- Swipe from **right to left**.
- Click the **share** button.

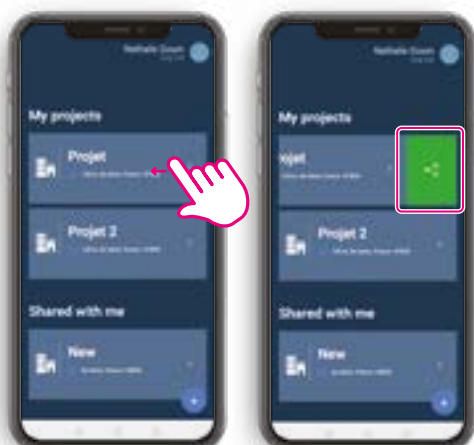



- Select **Transferring ownership of the project**.
- Enter the **e-mail** address of the person you want to transfer ownership of the project to.
- Enter your **Legrand account password**.




Ownership of the project is transferred completely. You will no longer have access to it.

USING THE CLOSE UP APPLICATION

1. PRODUCT SELECTION

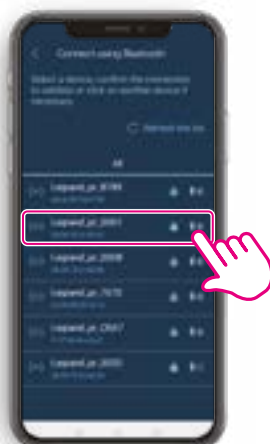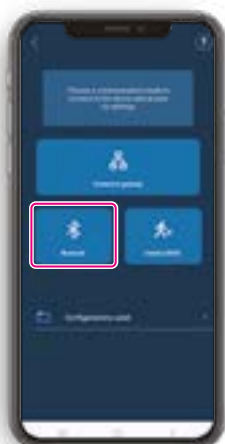


2. PRODUCT SETTINGS READING

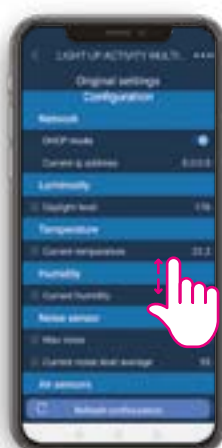

USING THE CLOSE UP APPLICATION (CONTINUED)

3. ACCESS TO ADVANCED SETTINGS

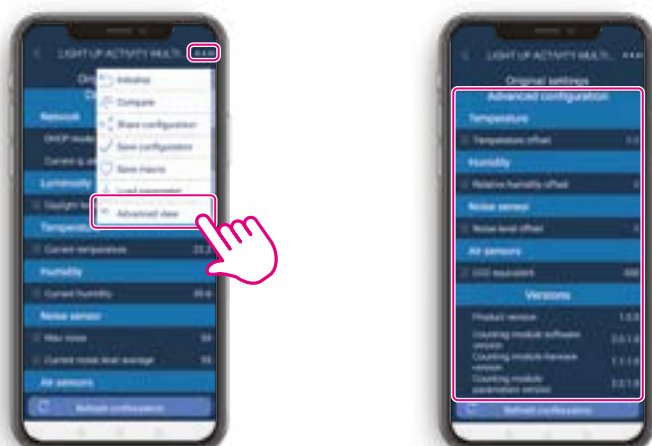

4. TOOLS ACCESS



USING THE CLOSE UP APPLICATION (CONTINUED)

5. COUNTING MODULE CONFIGURATION



List of selectable **USE CASES** :

- **DemoMode** : demonstration mode, reaction times are very fast.
- **Open-plan office** : open area where people are positioned at work stations. Default value.
- **Meeting room** : situation where people are within close proximity of each other and hardly move.
- **Circulation area** : hall, a place where people are very mobile (or don't stop at all).
- **Medium office** : Office less than 40 m², very few people and very little mobility.

6. COUNTING MODULE - CREATION OF ZONES PER MOVE

- Click on + to add a zone.

- Once you are well positioned, click **OK**.



IMPORTANT

Before creating a counting zone (exclusion or interest), make sure that no one is present in the zone monitored by the product.



IMPORTANT

Ensure that the screen is oriented towards the product installation.

USING THE CLOSE UP APPLICATION (CONTINUED)

6. COUNTING MODULE - CREATION OF ZONES PER MOVE (CONTINUED)

- Click on **Zone per move**.
- Choose between an **Interest zone** or an **Exclusion zone**.
- Move around the room and confirm the starting angle of the zone being created by clicking on **Start corner**.
- Then, move to the end point of the zone being created and confirm it by clicking on **End corner**.



- The zone is created
- Repeat the operation for each area of interest as well as exclusion by clicking on +
- Coordinates and surface area can be modified.



NOTE

Zone creation: max. 6 interest zones / max. 6 exclusion zones.

Counting only on interest zones. To create the zones, it is necessary to stand 80 cm away from obstacles (tables, desks, etc.) to set the coordinates of the start and end angles.

Use of exclusion zones :

Designed to filter passage areas. Avoid overlapping zones between 2 sensors. Exclude devices with rapid temperature variations.

IMPORTANT

Zones must not overlap.


TIP

You'll have :
6 zones of interest maximum
and
6 exclusion zones maximum

USING THE CLOSE UP APPLICATION (CONTINUED)

7. COUNTING MODULE - MANUAL ZONE CREATION THROUGH COORDINATE INPUT

- Select **Enter coordinates**.
- Choose between an **Interest zone** or an **Exclusion zone**.
- The zone is displayed in the center of the screen.
- Next, enter the desired coordinates for points A and B.
- Click on the ✓ icon to validate.

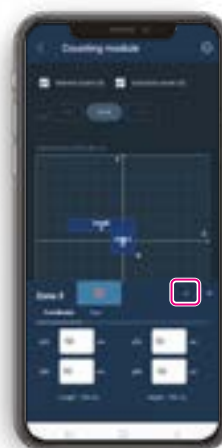

- The zone has now been created.




USING THE CLOSE UP APPLICATION (CONTINUED)

8. ADVANCED FEATURES

- Click on the 3 small dots to display the **advanced features**.

- 1** Set up room configuration.

- 3** Add zone tutorial

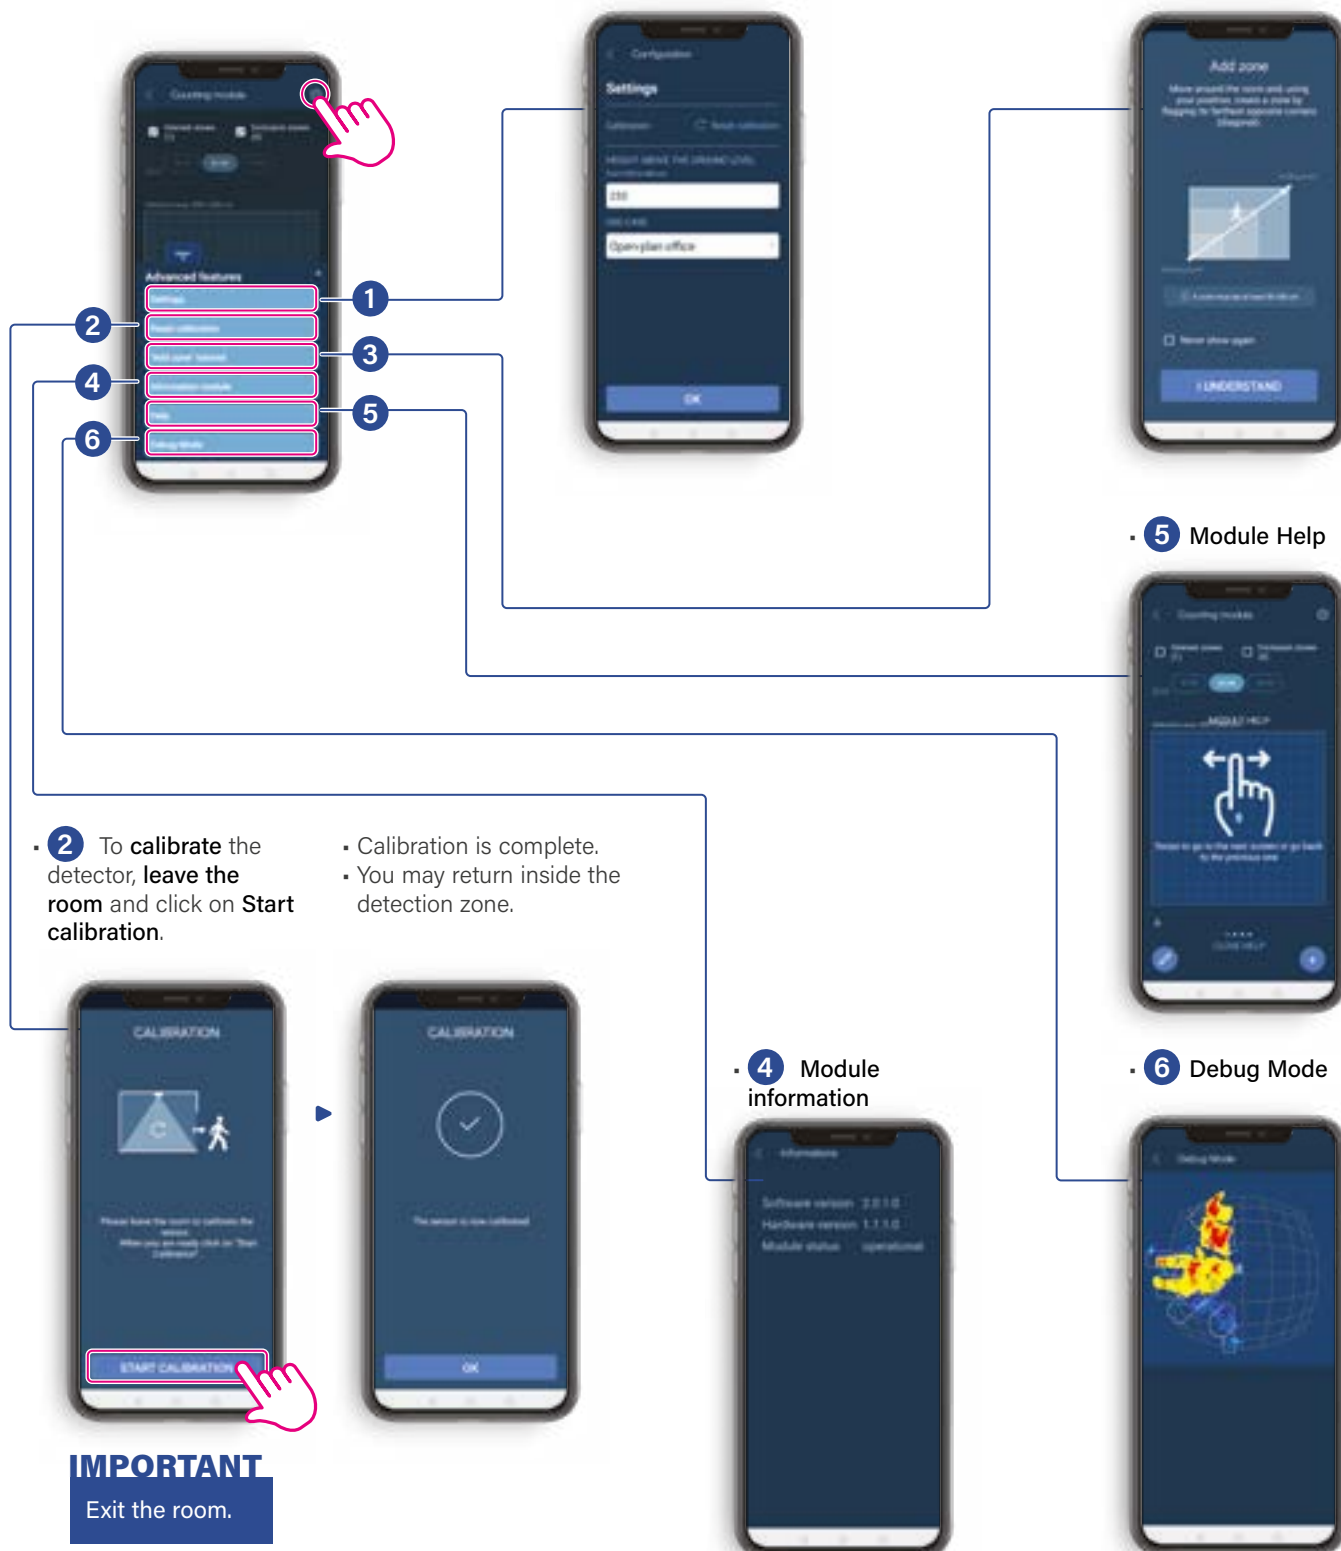

USING THE CLOSE UP APPLICATION (CONTINUED)


9. CALIBRATION

The product is operational after 5 minutes.

The product will self-calibrate in 20 minutes (adapting to its environment).

To calibrate immediately, start calibration from Close Up.

- Press on the 3 small dots to display the **advanced features**.
- Click on **Reset calibration**.
- To **calibrate** the detector, **leave the room** and click on **Start calibration**.
- Calibration is complete.
- You may return inside the detection zone.

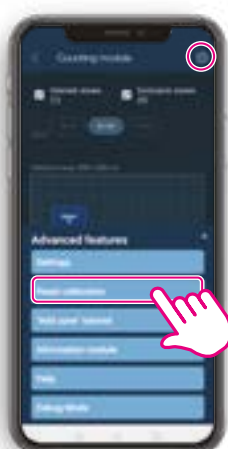

IMPORTANT
Exit the room.

NOTE

During calibration, hot spots corresponding to electrical equipment (screens, lighting, convectors, etc.) are automatically treated as image backgrounds and are not counted as people.

On first use, calibration will be fully effective after 24 hours.

USE CASES

The operating modes described in this guide are sample configurations corresponding to specific uses. For each operating mode, it is essential to verify the correct positioning and configuration of the products.

MEETING ROOM



- **Definition :**
Space where people (around 10 on average) are close to each other (approximately 80 cm).
Individuals are likely to move in and out of the room in groups. They move sparingly (non-displacement) but may spread out : deploy a computer, lean towards another person.
A single entrance allows access to the space.
- **Expectations :**
95% reliability on people counting within one minute of installation. Space clearance (presence and counting reset to zero) within three minutes (maximum) of participants' departure.
- **Zone management :**
Interest zone : Little or no need to create this type of zone in a meeting room.
Exclusion zone : Filtering of passage areas (room entrance).

OPEN-PLAN OFFICE



- **Definition :**
Collective workspace (less than 20 people) where workstations are not separated by any dividers (open space).
Individuals are separated (approx. 1.2 m) from one another.
There is a high probability that people will come and go individually or in small groups. They are likely to move around and interact with each other.
Access to the area is possible from all directions.
- **Expectations :**
90% reliability when counting people within one minute of one or more people accessing the area.
The space is cleared within 12 minutes of the last person leaving (on average less than 3 minutes).
- **Zone management :**
Interest zone : Up to 6 zones can be created, depending on space organization.
Exclusion zone : Filtering of passage areas. Avoid overlapping zones between 2 sensors.

USE CASES (CONTINUED)

MEDIUM OFFICE



- **Definition :**
Work space, less than 40 m², with a small number of people (less than 6). Individuals are separated (approx. 1.2 m) from one another. There is a high probability that people will come and go individually or in small groups. They are likely to move around and interact with each other. Access to the area is generally through a single entrance.
- **Expectations :**
90% reliability when counting people within one minute of one or more people accessing the area.
The space is cleared within 12 minutes of the last person leaving (on average less than 3 minutes).
- **Zone management :**
Interest zone : Up to 6 zones can be created, depending on space organization.
Exclusion zone : Filtering of passage areas.

CIRCULATION AREA



- **Definition :**
The circulation zone is a space intended to facilitate the passage of individuals between different areas of a building, such as corridors, main entrances, lobbies... This zone is characterized by a high flow of people moving in various directions, often rapidly and transiently. Unlike static environments such as meeting rooms or offices, transition zones are not intended to accommodate occupants for extended periods. This case is particularly suitable for tracking people's whereabouts.
- **Expectations :**
80% reliability on counting people within 10s of one or more people entering the space. The space is cleared within 30s of the last person leaving.
- **Zone management :**
The use of interest zones is not recommended.
Exclusion zone : exclude zones where detection (and therefore lighting) is not desired, and avoid overlapping zones between 2 sensors.

FLOW MATRIX

The network flow matrix specifies the network flows used by the product for configuration and operation.

FLUX TYPE	PROTOCOL	DESTINATION PORT	SOURCE	DESTINATION
Configuration	TCP	443	HTTP Client	Activity Multisensor
Operation	TCP	8883	Activity Multisensor	MQTT Broker
Operation	UDP	53	Activity Multisensor	DNS Server
Operation	UDP	68	Activity Multisensor	DHCP Server
Operation	UDP	123	Activity Multisensor	NTP Server
Operation	UDP	5353	Activity Multisensor	MDNS

MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST

1. PREREQUISITES

- To find out the product's IP address, it is possible to obtain it in several ways :
- By logging on to the product using the Close Up application and reading through all the product settings.
- By requesting mDNS if our pc is connected on the same subnet as the product, for example with dns-sd :

```
dns-sd -B _legrand._tcp
```

Then ping the name instance, adding the suffix **.local**

```
ping LGR-ACTIVITY-0004742C0012.local
```

In the following examples, curl is installed to send HTTP requests.
The examples also use [jq](#), this command simply formats the json and is optional.

MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST (CONTINUED)

2. FIRST TIME USE

The API HTTP - REST uses basic authentication to manage access rights to the product.

User is always **admin**.

Factory password is **Password_XXXXXX** with **XXXXXX** being the last 6 characters of the MAC address.

In the following example, the product MAC address is 00:04:74:2C:00:12, the default password is **Password_2C0012**.

NOTE


The product includes documentation of the REST API, which can also be used to test the various endpoints.

To access it, use the following URL [https://\[ip du produit\]/v1/swagger](https://[ip du produit]/v1/swagger).

In order to use all API routes, the password must be changed, otherwise the product will respond with a 403 error code.

```
> curl -X GET -u "admin:Password_2C0012" --insecure
https://10.2.42.174/v1/configuration/mqtt | jq .
```

```
{
  "status": "Forbidden",
  "description": "Set user authentication to access this method"
}
```

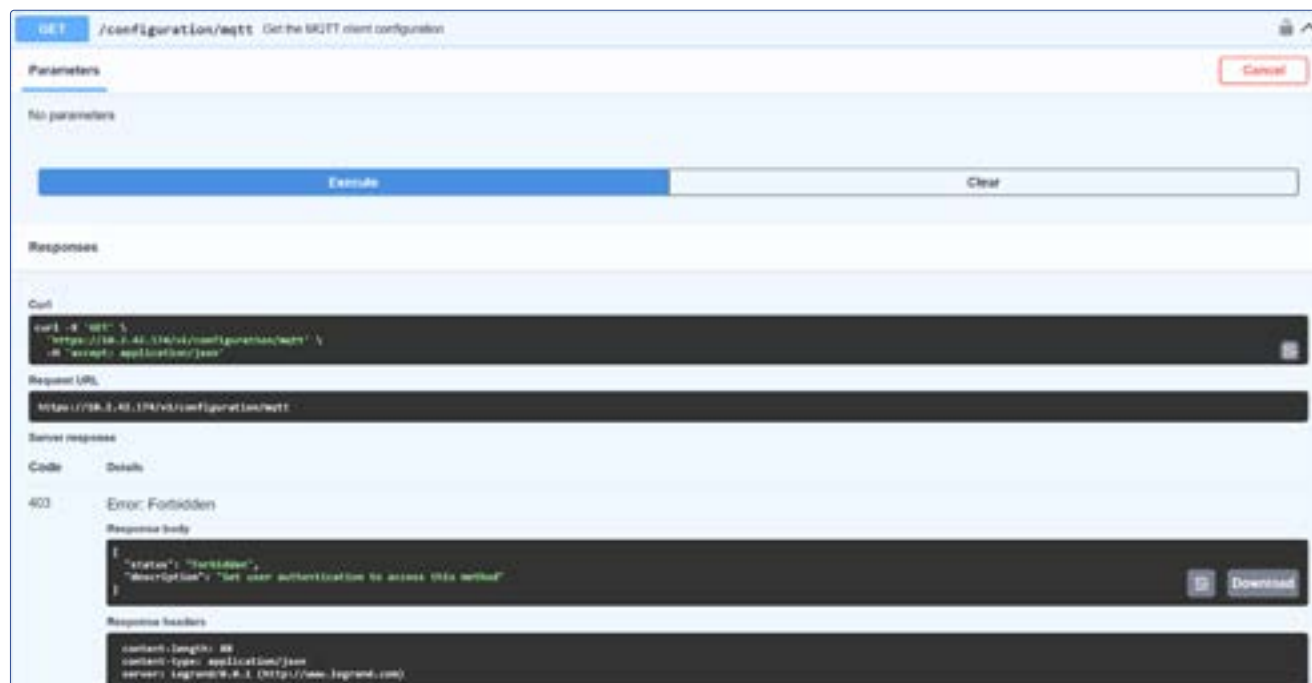

MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST (CONTINUED)

2. FIRST TIME USE (CONTINUED)

Curl password modification.

```
> curl -X POST -u "admin:Password_2C0012" -H "Content-Type: text/plain"
-d "Password_demo1" --insecure https://10.2.42.174/v1/configuration/user_password | jq .
```

```
{
  "status": "ok"
}
```

Password modification through OpenAPI documentation.

The screenshot shows an OpenAPI client interface for a POST request to `/configuration/user_password`. The request body is `Password_demo1`. The response is a 200 status with a JSON body `{ "status": "ok" }`.

Parameters

No parameters

Request body *required*

text/plain

The password have to contain lower and upper case, number and special characters

Password_demo1

Execute **Clear**

Responses

200

Response body

```
{
  "status": "ok"
}
```

Response headers

```
content-length: 20
content-type: application/json
server: Legrand/6.6.1 (http://www.legrand.com)
```

MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST (CONTINUED)

3. MQTT CLIENT CONFIGURATION

Example of curl client configuration.

```
> curl -X POST -u "admin:Password_demo1" -H "Content-Type: application/json"
-d '{"mqtt":{"enable":true,
"server":"c320119151834cbfa931bc564255535d.s2.eu.hivemq.cloud",
"clientPrefix":"demo","login":"LG2C0012","password":"Password_2C0012!",
"clientId":"sensup_2C0012","ssl":true,"certificateId":0,"port":8883,
"keepAlive":60,"qos":1}}'
--insecure https://10.2.42.174/v1/configuration/mqtt | jq .
```

```
{
  "status": "ok",
  "macAddress": "00:04:74:2C:00:12"
}
```

Example of MQTT client configuration using the OpenAPI page.

POST /configuration/mqtt Add a new MQTT client configuration

Parameters

No parameters

Request body **required** application/json

Just like with client MQTT configuration

Examples

[Modified value]

```
{
  "mqtt": {
    "enable": true,
    "server": "c320119151834cbfa931bc564255535d.s2.eu.hivemq.cloud",
    "clientPrefix": "demo",
    "login": "LG2C0012",
    "password": "Password_2C0012!",
    "clientId": "sensup_2C0012",
    "ssl": true,
    "certificateId": 0,
    "port": 8883,
    "keepAlive": 60,
    "qos": 1
  }
}
```

Execute

MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST (CONTINUED)

3. MQTT CLIENT CONFIGURATION (CONTINUED)

It is possible to retrieve the current configuration (excluding the password).

```
curl -X GET -u "admin:Password_demo1" --insecure
https://10.2.42.174/v1/configuration/mqtt | jq .
```

```
{
  "mqtt": [
    {
      "enable": true,
      "server": "c320119151834cbfa931bc564255535d.s2.eu.hivemq.cloud",
      "clientPrefix": "demo",
      "login": "LG2C0012",
      "password": "*****",
      "clientId": "sensup_2C0012",
      "ssl": true,
      "certificateId": 0,
      "port": 8883,
      "keepAlive": 60,
      "qos": 1
    }
  ]
}
```

In this example, the server uses a TLS connection with server authentication.

It is therefore necessary to send the server's CA certificate so that the product can verify the certificate provided by the server.

Example of CA server certificate configuration using curl.

```
curl -X POST -u "admin:Password_demo1" --data-binary @hivemqca.pem
--insecure https://10.2.42.174/v1/configuration/mqtt/ca_cert | jq .
```

```
{
  "status": "ok"
}
```


MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST (CONTINUED)

3. MQTT CLIENT CONFIGURATION (CONTINUED)

Example of CA server certificate configuration via the OpenAPI page.

The screenshot shows the OpenAPI interface for the endpoint `POST /configuration/mqtt/ca_cert` with the description "Send broker CA certificate".

Parameters: No parameters are listed.

Request body: The media type is set to `application/octet-stream`. A file named `testmqtt.pem` is selected for upload.

Execute: A blue button to execute the request.

Responses:

curl:

```
curl -X 'POST' \
  'https://192.168.1.42:5742/v1/configuration/mqtt/ca_cert' \
  -H 'accept: application/json' \
  -H 'Content-Type: application/octet-stream' \
  --data-binary @testmqtt.pem
```

Request URL: `https://192.168.1.42:5742/v1/configuration/mqtt/ca_cert`

Server response:

Code	Details
200	<p>Response body:</p> <pre>{ "status": "ok" }</pre> <p>Response headers:</p> <pre>content-length: 39 content-type: application/json server: legrand/9.4.1 (https://www.legrand.com)</pre>

Double TLS authentication can be configured, but is not documented in this document.
It is possible to get an indication of the MQTT client status by inquiring the product status.

MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST (CONTINUED)

3. MQTT CLIENT CONFIGURATION (CONTINUED)

Example of curl error status.

```
> curl -X GET -u "admin:Password_demo1" --insecure https://10.2.42.174/v1/status | jq .
```

```
{
  "reference": "048591",
  "device_model": "light-up-activity",
  "build_type": "pre-production",
  "mac": "00:04:74:2C:00:12",
  "ip_v4": "10.2.42.174",
  "binary_package": "0.3.0",
  "application": "1.5.4",
  "connectivity": {
    "app": "0.0.28",
    "softdevice": "0x006ACFC1"
  },
  "pcm": {
    "software": "2.0.1.0",
    "hardware": "1.0.0.0",
    "parameters": "2.0.1.0",
    "status": "operational"
  },
  "mqtt": [
    {
      "status": "not_connected",
      "configuration": "done",
      "error": "CLIENT NOT AUTHORIZED"
    }
  ]
}
```

MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST (CONTINUED)

3. MQTT CLIENT CONFIGURATION (CONTINUED)

Example of error status on the OpenAPI page.

The screenshot displays the OpenAPI interface for a GET request to the endpoint `/v1/status`. The interface includes a 'Parameters' section (currently empty), an 'Execute' button, and a 'Responses' section. The 'Server response' section shows a 200 status code. The response body is a JSON object with the following structure:

```

{
  "reference": "123456",
  "device_model": "light-up-activity",
  "model_type": "type-protection",
  "mac": "00:00:10:00:00:01",
  "ip_v4": "192.168.1.104",
  "binary_package": "B.1.0",
  "application": "1.1.0",
  "connectivity": {
    "mac": "00:00:10:00:00:01",
    "reference": "123456"
  },
  "port": {
    "software": "2.0.0.0",
    "hardware": "1.0.0.0",
    "parameters": "1.0.0.0",
    "status": "operational"
  },
  "mqtt": {
    "status": "out_of_service",
    "configuration": "done",
    "error": "CLIENT NOT AUTHORIZED"
  }
}

```

The response headers are also visible at the bottom:

```

content-length: 488
content-type: application/json
server: legrand/0.0.1 (http://www.legrand.com)

```

MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST (CONTINUED)

3. MQTT CLIENT CONFIGURATION (CONTINUED)

Example of an ok status on curl.

```
curl -X GET -u "admin:Password_demo1" --insecure https://10.2.42.174/v1/status | jq .
```

```
{
  "reference": "048591",
  "device_model": "light-up-activity",
  "build_type": "pre-production",
  "mac": "00:04:74:2C:00:12",
  "ip_v4": "10.2.42.174",
  "binary_package": "0.3.0",
  "application": "1.5.4",
  "connectivity": {
    "app": "0.0.28",
    "softdevice": "0x006ACFC1"
  },
  "pcm": {
    "software": "loading",
    "hardware": "loading",
    "parameters": "loading",
    "status": "start-up"
  },
  "mqtt": [
    {
      "status": "connected",
      "configuration": "done"
    }
  ]
}
```

MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST (CONTINUED)

3. MQTT CLIENT CONFIGURATION (CONTINUED)

Example of an ok status on the OpenAPI page.

The screenshot displays an OpenAPI client interface for a GET request to the endpoint `/status`. The interface includes a 'Parameters' section with 'No parameters', a 'Responses' section, and a 'Server response' section. The 'Server response' section shows a 200 status code and a JSON response body. The JSON body contains metadata about the device and its configuration status.

Request:

```
curl -X 'GET' \
  'https://192.168.178.178/v1/status' \
  -H 'accept: application/json'
```

Request URL: `https://192.168.178.178/v1/status`

Server response:

Code: 200

Response body:

```
{
  "reference": "00000000",
  "device_model": "light-up activity",
  "build_type": "pre-production",
  "mac": "00:00:00:00:00:00",
  "ip_v4": "192.168.178.178",
  "library_package": "1.0.0",
  "application": "1.0.0",
  "connection": {
    "app": "1.0.0",
    "deviceId": "00000000"
  },
  "user": {
    "software": "1.0.0",
    "hardware": "1.0.0",
    "parameters": "1.0.0",
    "status": "operational"
  },
  "mqtt": {
    {
      "status": "connected",
      "configuration": "done"
    }
  }
}
```

Response headers:

```
content-length: 400
content-type: application/json
server: legrand/1.0.0 (https://www.legrand.com)
```

MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST (CONTINUED)

3. MQTT CLIENT CONFIGURATION (CONTINUED)

By connecting an MQTT client to this same broker, it is possible to verify if metrics are being correctly sent.



MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST (CONTINUED)

4. METRICS TRANSMISSION FREQUENCY CONFIGURATION

The MQTT client has a default configuration (out of factory or after factory reset procedure).
Configuration query for sending metrics on curl.

```
curl -X GET -u "admin:Password_demo1" --insecure  
https://10.2.42.174/v1/configuration/metrics_broker | jq .
```

```
[  
{  
  "id": 0,  
  "period": 60,  
  "on_change": 0.25  
},  
{  
  "id": 1,  
  "period": 60,  
  "on_change": 1  
},  
{  
  "id": 2,  
  "period": 60  
},  
{  
  "id": 4,  
  "period": 60  
},  
{  
  "id": 5,  
  "period": 60  
},  
{  
  "id": 6,  
  "period": 60,  
  "on_change": 1  
},  
{  
  "id": 7,  
  "period": 60  
},  
{  
  "id": 8,  
  "period": 60  
},  
{  
  "id": 9,  
  "period": 60  
},  
{  
  "id": 10,  
  "period": 60  
},  
{  
  "id": 11,  
  "period": 60,  
  "on_change": true  
},  
]
```

MQTT CLIENT CONFIGURATION USING THE ACTIVITY'S API HTTP - REST (CONTINUED)

4. METRICS TRANSMISSION FREQUENCY CONFIGURATION (CONTINUED)

```
{
  "id": 12,
  "period": 60,
  "on_change": true
}
```

This configuration can be modified.

Example of metrics transmission frequency modification by openAPI.

The screenshot shows an OpenAPI interface for the endpoint `POST /configuration/metrics_breaker` with the description "Add a new metrics_breaker description".

Parameters: No parameters are listed.

Request body: Required, with a media type of `application/json`.

JSON file with metrics_breaker configuration object:

ID	METRICS ID
0	TEMPERATURE
1	HUMIDITY
2	LUMINOSITY
4	AVERAGE_NOISE_DB_SPL
5	MAX_NOISE_DB_SPL
6	POW_OCCUPANCY
7	POW_PEOPLE_COUNT
8	TVOC
9	CO2
10	IAQ
11	POW_PEOPLE_COUNT_PER_ZONE
12	POW_OCCUPANT_LOCATION

Examples: A dropdown menu shows "default-value-example".

```
{
  "id": 0,
  "period": 60,
  "on_change": 0.25
},
{
  "id": 1,
  "period": 60,
  "on_change": 1
},
{
  "id": 2,
  "period": 60
},
{
  "id": 4,
  "period": 60
}
```

Buttons: "Cancel" (top right), "Execute" (bottom center).

PRODUIT UPDATE

1. VIA API

Product version

The product version can be obtained using a status query.

```
> curl -X GET -u "admin:Password_demo1" --insecure https://10.2.42.174/v1/status | jq .
```

Example of a payload responding to a request on the route /status.

```
{
  "reference": "048591",
  "device_model": "light-up-activity",
  "build_type": "production",
  "mac": "00:04:74:2C:00:12",
  "ip_v4": "10.2.42.174",
  "binary_package": "0.3.0",
  "application": "1.5.4",
  "connectivity": {
    "app": "0.0.28",
    "softdevice": "0x006ACFC1"
  },
  "pcm": {
    "software": "2.0.1.0",
    "hardware": "1.0.0.0",
    "parameters": "2.0.1.0",
    "status": "operational"
  },
  "mqtt": [
    {
      "status": "not_connected",
      "configuration": "done",
      "error": "CLIENT NOT AUTHORIZED"
    }
  ]
}
```

The useful information in this reply is the value of the field **binary_package**.

PRODUIT UPDATE (CONTINUED)

1. VIA API (CONTINUED)

Update obtainment

The update file is available at the following address <https://developer.legrand.com/local-interoperability/#How%20to%20upgrade%20LightUp%20Activity%20Multisensor>

IMPORTANT

A Legrand account is required to access the update download page.
If you do not have a Legrand account, you can create one using the link above.

Implementing an update

The update is sent using a POST to the route /update.

Example of a POST/update using curl

```
> curl -X POST -H "Content-Type: application/octet-stream" --data-binary
@048591_ota_update_1.0.1.bin -u "admin:Password_demo1" --insecure
https://10.2.42.174/v1/status | jq .
```

Response to a successful upload of an update file.

```
{
  "status": "ok"
}
```

In some cases, sending fails with the curl message: **curl: (56) Failure when receiving data from the peer**, in which case repeat the command.

Delivery of an update file via the Openapi interface.

IMPORTANT

The file to be sent is in **.bin** format

Once the file has been sent, the product applies the update, an operation that should take around ten minutes.

PRODUIT UPDATE (CONTINUED)

1. VIA API (CONTINUED)

A query on the route/status is used to check the update progress.

```
{
  "reference": "048591",
  "device_model": "light-up-activity",
  "build_type": "production",
  "mac": "00:04:74:2C:00:12",
  "ip_v4": "10.2.42.174",
  "binary_package": "1.0.1",
  "application": "1.5.5",
  "connectivity": {
    "app": "0.0.29",
    "softdevice": "0x006ACFC1"
  },
  "pcm": {
    "software": "2.0.6.2",
    "hardware": "1.0.0.0",
    "parameters": "2.0.6.2",
    "status": "operational"
  },
  "mqtt": [
    {
      "status": "connected",
      "configuration": "done"
    }
  ]
}
```


The value of the **binary_package** field must be the new version.

Check the status value of the pcm object, if it is equal to 'updating' then the applying update has not been completed.


PRODUIT UPDATE (CONTINUED)

2. VIA THE CLOSE UP APPLICATION

- Connect to the detector using Bluetooth.
- Click **Update Now** to launch the update.

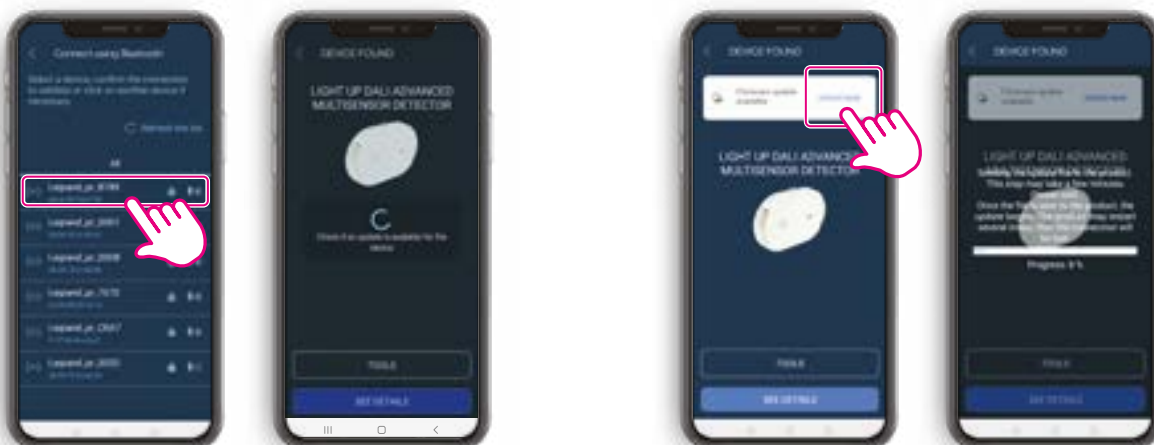

- The update file has been sent to the detector.
- The detector will blink cyan during the update. This step requires the detector to be restarted.

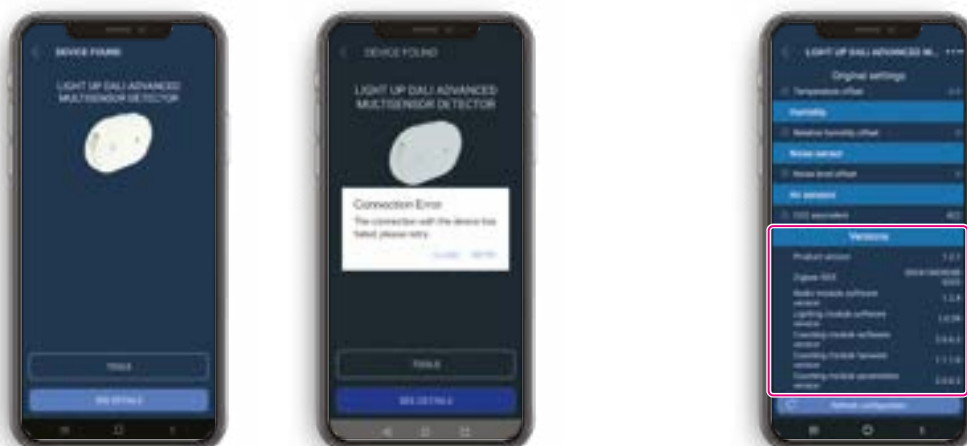

TIP

To check the version of the product in the settings list, activate the "Advanced view".



facebook/legrand



linkedin/legrand



twitter/legrand



pinterest/legrand



legrand.fr

Service Relations Pro

0810 48 48 48

Free service
+ price call

Monday to Friday 8am to 6pm

128 av. de Lattre de Tassigny

87045 Limoges Cedex - France

E-mail : accessible sur legrand.fr

