



Céliane™

Easy-to-handle socket outlet





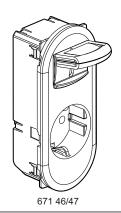

1. USE


16 A - 250 V~ socket outlet to franco-belgian and german standard, specially adapted for ease of use.

2. GAMME


Designation	Cat. Nos.		Number of modules	Fixing method	Weight (g)	General characteristics
2P+E easy-to-handle socket outlet franco-belgian standard	White	671 33	5	with clips	102.2	16 A - 250 V~
	Titane	671 34				
2P+E easy-to-handle socket outlet schuko standard	Blanc	671 46	5	with clips	102.2	16 A - 250 V~
	Titane	671 47				

3. INSTALLATION

The mechanism can be flush or surface-mounted.

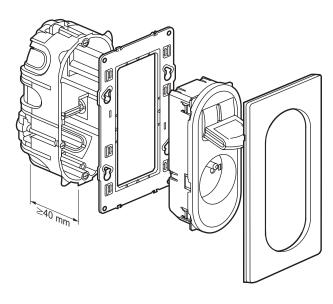

4. OVERALL DIMENSIONS

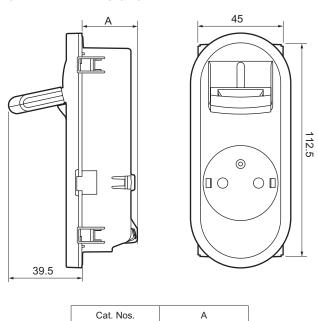

29.3

32.3

671 33/34

671 46/47

Technical data sheet: F00533EN/01	Updated: 21/01/2010	Created: 15/05/2008

Céliane™

Easy-to-handle socket outlet

5. CONNECTION

Terminal type: automatic Number of terminals: 3 Terminal capacity: 2 x 2.5 mm² Stripping length: 13 mm



Référence(s): 671 33/34/46/47

6. OPERATION

The socket outlet is fitted with a lever to make the insertion and removal of the plug easier.

Actuating the lever:

- reduces the effort needed to insert a plug
- makes removal of the plug easier

Maximum effort needed to move lever: 22.8N (maximum effort advised by specialist: 30N).

When the lever is not actuated, the socket operates as a traditional

2P+E socket outlet.

7. TECHNICAL DATA

7.1 Mechanical characteristics

Impact resistance: IK 04

Penetration by solid/liquid bodies: IP 20

7.2 Material characteristics

Base: Polycarbonate

Cover plate: Polycarbonate (RAL 9003)

Lever: ABS (RAL 9003).

7.3 Climatic characteristics

Self-extinguishing: 650 °C / 30 s. Storage temperature: -10 °C to +70 °C Operating temperature: - 5 °C to +50 °C

8. CLEANING

Surface cleaning using a cloth.

Do not use: acetone, tar remover or trichloroethylene.

8.1 Resistance to cleaning products

Resistant to the following products:

- Hexane (EN 60669-1),
- Methylated spirit,
- Soapy water,
- Diluted ammonia.
- 10% bleach solution,
- Window cleaning products,
- Moist towelettes.

8.2 Resistance to medical cleaning products

Resistant to the following products:

Technical data sheet: F00533EN/01

- Anios
- Surfanios,
- Bactilysine,
- Hydrogen peroxide (35%).

Warning: conduct preliminary tests before using any other specific cleaning products.

Updated: 21/01/2010