

LEGRAND - BP30076 87045 LIMOGES CEDEX FRANCE Telephone: 05 55 06 87 87 - Fax: 05 55 06 88 88

EMS CX³ – Universal state module

Cat. N°: 4 149 30

Contents	Pages
1. Description - Use	1
2. Range	1
3. Overall dimensions	1
4. Preparation - Connection	1
5. General characteristics	7
6. System architectures	12
6.1 Stand Alone	12
6.1.1 with local addressing	12
6.1.2 with remote addressing	13
6.2 Supervised	14
6.2.1 with local addressing	14
6.2.2 with remote addressing	16
7. Compliance and approvals	18

1. DESCRIPTION - USE

. Module dedicated to Energy Management System (EMS CX³) use. . Enables to display a clear indication on the status of a circuit or of an associated modular device (MCBs, RCCBs, RCBOs...) and/or power devices (e.g. ACBs, MCCBs...) via voltage-free SPST-NO contacts.

. Equipped with DIP switches (on the side) allowing product configuration of:

- type of information returned by the device:

open, closed, tripped positions of a modular or power device spring state of an ACB

... (see § "Module configuration")

Symbol:




2. RANGE

. Cat. n° 4 149 30: Universal State Module; 3 inputs from voltagefree SPST-NO contact with one common terminal.

Width:

. 1 module. 17,8 mm width.


3. OVERALL DIMENSIONS

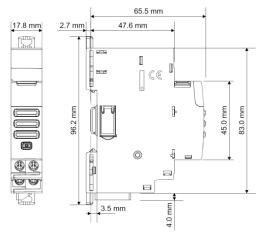

Technical data sheet: F02332EN/03

Updated: 30/09/2020

Created: 20/07/2016

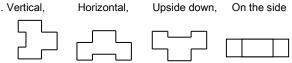

4. PREPARATION -CONNECTION

. On symmetric rail EN/IEC 60715 or DIN 35 rail

Horizontal,

Power Supply:

Operating positions:

. Mandatory in 12 VDC via the specific Power supply module Cat n°4 149 45

. Two ways:

Fixina:

via specific communication patch cords (cat. nos 4 149 07/08/09) to connect at the downstream through dedicated ports



via specific communication rails (cat. nos 4 149 01/02/03) to connect at the rear through dedicated connectors



4. PREPARATION -CONNECTION (continued)

Terminals:

- . Terminal depth: 8 mm
- . Stripping length: 8 mm

Screw head:

. Mixed, slotted and Pozidriv n°1 (UNI7596 type Z1).

Recommended tightening torque:

. 1 Nm.


Recommended tools:

- . For the terminals: Pozidriv n°1 or flat screwdriver 4 mm.
- . For fixing: flat screwdriver 5.5 mm (6 mm maximum).
- . For configuration DIP switches: flat screwdriver 2 mm

Conductor type:

	Copper cable		
	Without ferrule With ferrule		
Rigid Cable	1 x 0,5 mm² to 1,5 mm² 2 x 1,5 mm²	-	
Flexible Cable	1 x 0,5 mm² to1,5 mm² 2 x 1,5 mm²	1 x 0,5 mm² to 1,5 mm² 2 x 1,5 mm²	

Wiring diagrams:

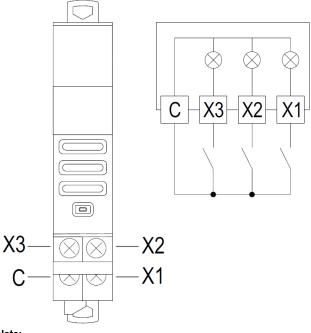

Note:

- . 3 Inputs from voltage-free SPST NO contacts
- . Cable length: max. 1000 m
- . Resistance of the circuit: $R_{max} \le 125 \Omega @ 25^{\circ}C$

4. PREPARATION -CONNECTION (continued)


Module configuration:

. Configuration is possible in two ways:

1. remotely, via EMS CX³ Configuration software (module firmware version ≥ 2.0.2 [production date ≥ 18W32] & Configuration software > 1.05.00)

≥ 1.05.00).

2. locally, via 4 DIP switches on the left side the EMS CX³ module. Dipswitches may be manipulated by a screwdriver

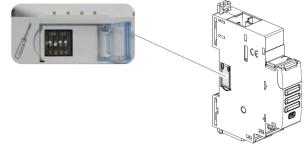

Configuration allows to set:

- information type
- LED behaviour
- Default configuration (switches in 0000 position)





This configuration allows you to make all settings, according to the function you need, remotely via EMS configuration software without actuate any switch (module firmware version \geq 2.0.2 [production date \geq 18W32] & Configuration software \geq 1.05.00)

It is however always possible configure the module by manually actuating micro-switches.


Possible configurations (done locally or remotely) are listed as shown below.

. Table of possible configurations

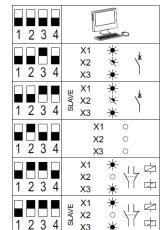

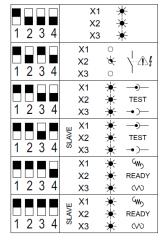

Note:

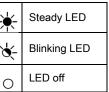

Updated: 30/09/2020


L¹ legrand

4. PREPARATION -CONNECTION (continued)

Connection with an associated device:

. Association with an electro-mechanical DX³ auxiliary contact + fault contact (e.g. Cat. no 4 062 66) or other brands contact/fault auxiliaries.


. EMS CX³ universal state module must be configured (locally or remotely) as shown:

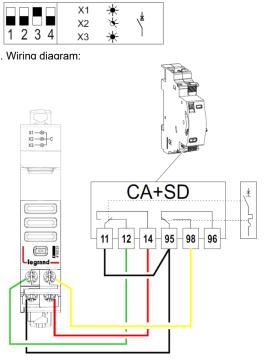

. Association with an electro-mechanical DPX³ auxiliary contact (Cat. no 4 210 11) and DPX³ fault contact (Cat. no 4 210 11) or other brands contact/fault auxiliaries.

. EMS CX³ universal state module must be configured (locally or remotely) as shown:



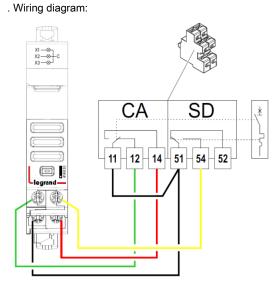

Technical data sheet: F02332EN/03

Updated: 30/09/2020

Created: 20/07/2016

L legrand

4. PREPARATION -CONNECTION (continued)


Connection with an associated device (continued): Note:

Open /Close / Tripped displayed information for a protection device. With any kind of electrical protection device (modular or power) the displayed information must be done in accordance with the handle colour status, as shown below:

"I-ON" (red) = contacts closed



"O-OFF" (green) = contacts open

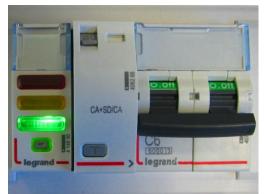


Mind that the cabling of the module has also been done in this way too.

4. PREPARATION -CONNECTION (continued)


Connection with an associated device (continued):

. Association with several electro-mechanical DX 3 fault contact (Cat. no 4 062 60) or other brands fault auxiliaries.

. EMS CX³ universal state module must be configured (locally or remotely) as shown:

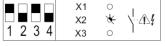


. Wiring diagram:

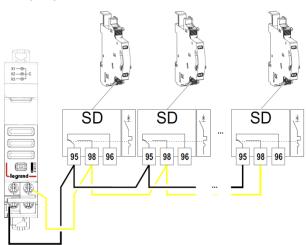


For DPX³ fault contact auxiliaries use terminals 51 (instead of 95) and 54 (instead of 98) of the cat. no 4 210 11

. Association with an electro-mechanical Contactor or Latching relay auxiliary contact (e.g. Cat. no 4 124 29/30) or other brands auxiliaries.

. EMS CX³ universal state module must be configured (locally or remotely) as shown:

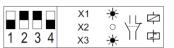

. Wiring diagram:

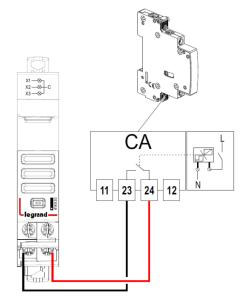

Technical data sheet: F02332EN/03

4. PREPARATION -CONNECTION (continued)


Connection with an associated device (continued):

. Association with an electro-mechanical contact "ready to close" with charged springs for DMX³ (e.g. Cat. no 0 288 14) or other brands auxiliaries.

. EMS CX³ universal state module must be configured (locally or remotely) as shown:

• •			
	X1	☀	GMD
	X2	☀	READY
1234	X3	*	$\langle \rangle \rangle$

. Wiring diagram:

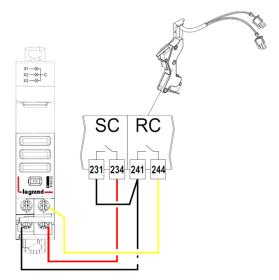


. Association with an electro-mechanical Signalling contact for DPX³ or DMX³ draw-out version (e.g. Cat. no 0 288 13 for DMX³ / 0 265 74 for DPX³) or other brands auxiliaries.

. EMS CX³ universal state module must be configured (locally or remotely) as shown:

	X1	☀	_)_
	X2	☀	TEST
1 2 3 4	X3	☀	→)—

. Wiring diagram for 0 288 13:

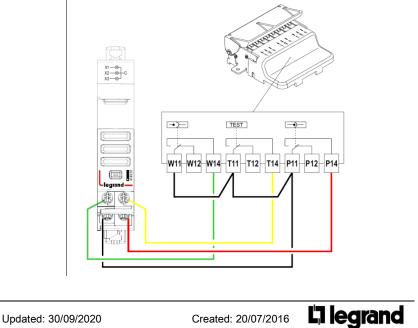



4. PREPARATION -CONNECTION (continued)

Module configuration (continued):

Note 2:


SLAVE = Repeat function

. This configuration allows you to use an EMS CX³ universal state module (cat. no 4 149 30) as Salve of an ½ state module (cat. no 4 149 29) or of another EMS CX³ universal state module (cat. no 4 149 30) Master.

- . Slave module receives via EMS bus and repeats the signalizations of the master module trough 3 frontal led.
- . No need to wire the terminals of the slave module
- . Slave module must have the same address of the Master module

. **Example**, EMS CX 3 Universal state module used as salve of an $\frac{1}{2}$ state module

. EMS CX³ universal state Slave module must be configured (locally or remotely) as shown:

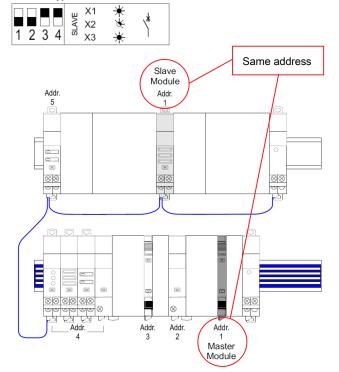


4. PREPARATION -CONNECTION (continued)

Data connection (EMS CX³ modules inter-connection):


. Via specific communication patch cords (cat. nos 4 149 07/08/09)



Allow data transmission between the different EMS CX³ modules. This type of connection is recommended when there are few EMS CX³ modules, distributed all over the enclosure.

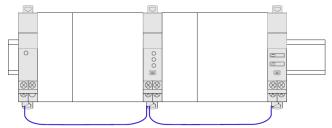

Implementing: with this configuration, the plastic protection cover of the backside communication ports on the EMS CX³ module must be keep on.

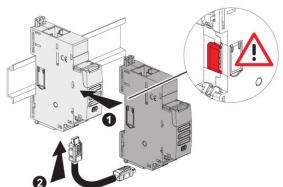

La legrand

4. PREPARATION -CONNECTION (continued)


Data connection (EMS CX³ modules inter-connection) (continued):

. Via specific communication rails (cat. nos 4 149 01/02/03).

. Allow data transmission between the different EMS CX³ modules. This type of connection is recommended when there are several EMS CX³ modules on the same DIN row.



Implementing: with this configuration, the plastic protection cover of the backside communication ports on the EMS CX³ module must be removed.

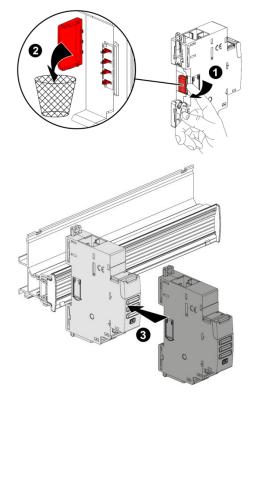


4. PREPARATION -CONNECTION (continued)

Data connection (EMS CX³ modules inter-connection) (continued):

. Via a mix between specific communication patch cords and communication rails in order to create a link between several rows


Two situations:

Individually connected with communication rails.
The communication patch cord allows to connect two rows.

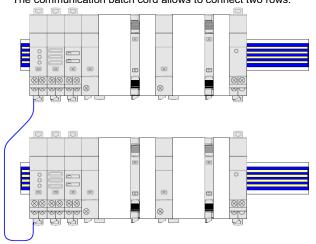

- Individually connected with communication patch cords & communication rail.

The communication patch cords allow to connect EMS CX³ module on a row and to connect two rows.

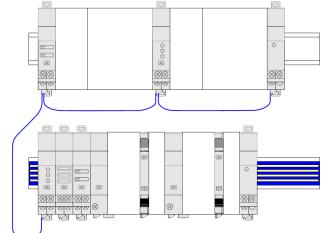

Labelling:

. Circuit identification by way of a label inserted in the label holder situated on the front of the product.



Technical data sheet: F02332EN/03

Updated: 30/09/2020


Created: 20/07/2016

L legrand

4. PREPARATION -CONNECTION (continued)


Position in a row:

. The product profile and the position of the terminals at the downstream allow the insertion of the prong-busbar by the upstream. In this way the position of the EMS CX³ device in a row can be freely chosen

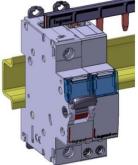

Module maintenance:


. A device may be replaced in the middle of a row supplied with prong-busbar without disconnecting the other devices.

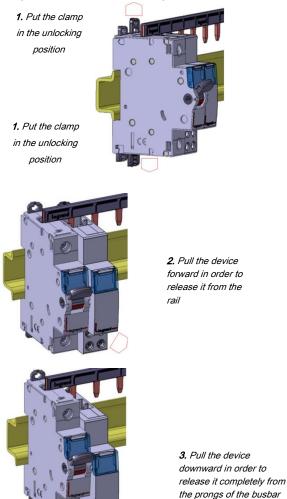

5. GENERAL CHARACTERISTICS


Front face marking:

. By permanent ink pad printing (red line) and laser marking

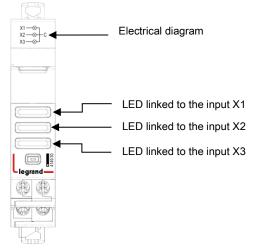


Lateral side marking:

- . By laser.
- left side: Standard and programming information

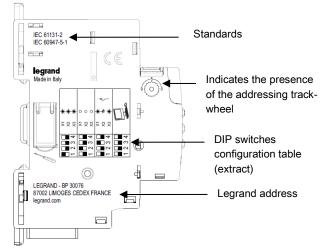

right side: cabling and traceability information

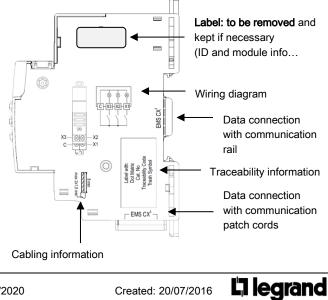


5. GENERAL CHARACTERISTICS (continued)

Signalling LEDs:

. Equipped with configurable signalling LEDs: red, yellow and green


- (see § "Module configuration"):
- LED turned on: indicates that the corresponding inputs is high (contact cabled between the common terminal "C" and the corresponding terminal "X1", "X2", or "X3" is closed)
- LED turned off: indicates that the corresponding inputs is low (contact cabled between the common terminal "C" and the corresponding terminal "X1", "X2", or "X3" is open)

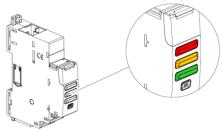

- . Technology: non-replaceable LED lamps
- . Life time 100 000 hours without maintenance.
- . The ergonomic design of the translucent plastic window allows a homogeneous projection of the light.

Multi-Functions button:

. Front face button as several functions:

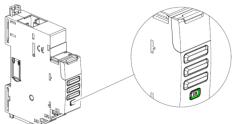

Gives information about the operating state on the module

Possible states:

Led colour	State	Meaning	
	Slow blinking	Error (e.g. addressing error)	
red	Fast blinking	No function	
	Steady (pressing the multifunction button longer than 10 sec.)	Total reset [any firmware updates are preserved]	
	Slow blinking	System process is running. Wait until the Led turns steady	
green	Fast blinking (pressing the multifunction button for 5 sec.)	put in "Stand-by" the EMS CX ³ module (no remote action and communication available)	
	Steady	System OK, connection is running	
	Slow blinking	Creation of a link with "Link Functionality" procedure <i>(see next §)</i>	
orange	Fast blinking	Device's firmware update in progress	
	Steady	No function	

Technical data sheet: F02332EN/03



5. GENERAL CHARACTERISTICS (continued)

Link Functionality:

. This function allows you to link two EMS CX³ modules to create automatic actions that, once programmed, can run independently without a connection to a manager is needed.

The basic rule is the link between an event (circuit breaker that trip, a threshold exceeded, etc.) and an action accordingly (signalling, opening of a circuit by motorized control or contactor, etc.).

Possible associations are:

	Action module		
Event generator	Command: 4 149 32	State + Command: 4 149 31	State: 4 149 30
Measure: 4 149 18/19/20/21/ 22/23/24/25/27	\checkmark	\checkmark	Only with the module configured (locally or remotely) as shown:
State: 4 149 29/30	\checkmark	\checkmark	★ Simply configure the module (locally or remotely) as "Slave"
State + Command: 4 149 31	\checkmark	\checkmark	★ Simply configure the module (locally or remotely) as "Slave"

Note:

- association can only be of type 1 to 1 (1 event and 1 action).

- modules already associated cannot be used for other associations.

- all the configuring procedure will be done with the Configuration Software (available online for free). [For more details refer to the Installation Manual of EMS CX³ Configuration software]

La legrand

5. GENERAL CHARACTERISTICS (continued)

Link Functionality (continued):

Modules compatible with "Link Functionality" feature: firmware versions and production date:

Cat n°	Firmware version	Production date indicated on the label sticked on the side of the module
4 149 18	all firmware versions	any production date
4 149 19	ver. ≥ 2.0.1	date ≥ 18W29
4 149 20	ver. ≥ 2.0.1	date ≥ 18W49
4 149 21	all firmware versions	any production date
4 149 22	all firmware versions	any production date
4 149 23	ver. ≥ 2.0.1	date ≥ 18W49
4 149 24	all firmware versions	any production date
4 149 25	all firmware versions	any production date
4 149 27	all firmware versions	any production date
4 149 29	ver. ≥ 2.0.1	date ≥ 18W49
4 149 30	ver. ≥ 2.0.2	date ≥ 18W32
4 149 31	ver. ≥ 2.0.6	date ≥ 18W45
4 149 32	ver. ≥ 3.0.2	date ≥ 18W39
4 149 36	ver. ≥ 2.0.4	date ≥ 18W38
4 149 37	ver. ≥ 2.0.4	date ≥ 18W43
4 149 40	ver. ≥ 3.0.8	date ≥ 18W34

Insulation voltage:

. Ui = 400 V

Impulse withstand voltage Uimp:

. EMS ports / Input terminals: wave 1,2 / 50 μs: 6 kV alternate current 50 Hz / 1 min.: 3 kV

Pollution degree:

. 2 according to IEC/EN 60898-1.

Overvoltage category:

. 111

Dielectric strength:

. 2500 V

Plastic material:

- . Self-extinguishing polycarbonate.
- . Heat and fire resistant according to IEC/EN 60695-2-12, glow-wire test at 960°C.
- . Classification UL 94 / IECEN 60695-11-10: V1

Ambient operating temperature:

. Min. = -25°C. Max. = +70°C

Ambient storage temperature:

. Min. = -40°C. Max. = +70°C

Technical data sheet: F02332EN/03

Updated: 30/09/2020

L¹ legrand

5. GENERAL CHARACTERISTICS (continued)

Protection Index:

. Protection index of terminals against direct contacts: IP2X (IEC/EN 60529).

. Protection index of terminals against solid and liquid bodies (wired device): IP 20 (IEC/EN 60529).

. Protection index of the front face against solid and liquid bodies: IP 40 (IEC/EN 60529).

. Class II, front panel with faceplate.

Average weight per device:

. 0,055 kg.

Volume when packed:

. 0,21 dm³.

Consumption:

. Values at 12 VDC

Configuration	w	mA
Stand-by	0,258	21,5
All led OFF	0,258	21,5
1 led ON	0,298	24,8
2 led ON	0,337	28,1
All led ON	0,376	31,4

11 / 18

L¹ legrand

6. SYSTEM ARCHITECTURES

The EMS CX³ is a polyvalent system and, according to the needs of the customer, can be set up and/or used as "Stand-alone" or "Supervised" system. Based on this choice the configuration and addressing methods are different.

Four possible architectures are provided:

6.1 Stand-alone system

6.1.1 with local addressing (through the track wheel) 6.1.2 with remote addressing (through a computer)

6.2 Supervised (Computer Supervisory System)

6.2.1 with local addressing

6.2.2 with remote addressing

6.1 Stand-alone system

. **Stand-alone** = autonomous system. To be used by the end-user if it is not necessary to have a computer for the supervision outside the envelope. Everything can be managed on site.

6.1.1 Stand-alone system with local addressing (through the track wheel)

Local addressing advantages:


- No configuration software needed to set-up the installation
- It is not necessary to use a computer to manage settings (configurations, test, ...) and to use the system (visualize and be alerted, ...). Everything can be done through the Mini configuration module (local display, cat. no 4 149 36/37). [Refer to the technical sheet dedicated to this module for details].
- No communication Interfaces or gateways are required.
- Installation can be done without the intervention of a System Integrator

Programming procedure:

. For EMS CX³ modules which need some: mandatory through the lateral DIP-switches of each EMS CX³ module (see § "Module configuration")

Addressing procedure:

. For all EMS CX³ modules: mandatory through the track wheel located on the top upper face of each EMS CX³ modules . Marked from 0 to 9 in order to locally define the Modbus address of the EMS CX³ modules

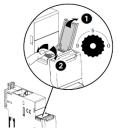


Note for Measure Module "3x single phase":

This module is to be consider as 3 modules with 3 different Modbus Address. The module takes automatically the two addresses immediately following to the programmed one (e.g. Programmed address = 12, Addresses of the module 12, 13, 14)

Consequences of the local addressing mode (through the track wheel):

- . Each device of the system must be addressed.
- . Addresses available: from 1 to 9
- . Address 0 not permitted

. It is possible to assign to several devices the same address with the purpose of grouping different functions, **because they are related to the same electrical circuit**. For example, it is possible to assign the same address to a signalling auxiliary module (cat. no 4 149 29), a universal control module (cat. no 4 149 32), a measuring module, and so on. In this way on the EMS CX³ mini configuration module (local display) the grouped function will be displayed as a unique "device" with all grouped functions. *[Refer to the schemes hereunder]*

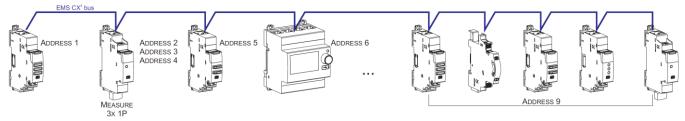

Note for the mini configuration module (local display)

. It is possible to assign it the same address as another EMS CX³ through the programming menu of the device

. The mini configuration module can be placed everywhere in the EMS CX³ bus

Technical data sheet: F02332EN/03

Updated: 30/09/2020

Created: 20/07/2016

Llegrand

6. SYSTEM ARCHITECTURES

6.1 Stand-alone system (continued)

6.1.2 Stand-alone system with remote addressing (through a computer)


Remote addressing advantages:

- Whole configuration (addresses and functions) can be set up through the EMS Configuration software
- Configuration software available for free
- Automatic detection of the EMS CX³ modules installed in the system (characteristics, functions, configuration...)
- Increased settings possibilities: load shedding function
- Increased addressing: up to 30 Modbus addresses in a system

Programming procedure:

. For EMS CX³ modules which need some: possible through the lateral DIP-switches of each EMS CX³ module or via the configuration software (see § "Module configuration").

Addressing procedure:

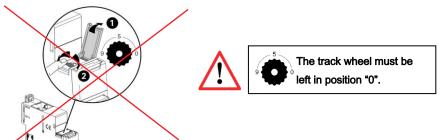


. It is not necessary to address the EMS CX³ modules. The track wheel must be left in default position "0".

. All the addressing/configuring procedure will be done with the Configuration Software (available online for free)

. With remote addressing, the software does the automatic detection of modules installed in the system, but the supervision is not possible until the user assigns the remote address and all the characteristics to each module.

Note: it is mandatory to connect the computer to the Mini configuration module with an USB-micro USB cable. [For more details, refer to the technical data sheet of the Mini configuration module EMS CX³]

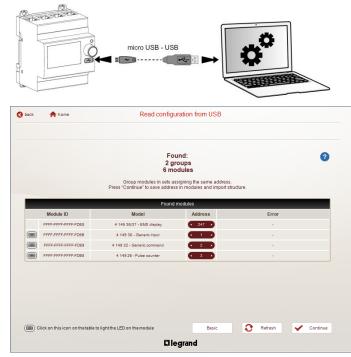

Note for Measure Module "3x single phase":

This module is to be consider as 3 modules with 3 different Modbus Address. The module takes automatically the two addresses immediately following to the programmed one (e.g. Programmed address = 2, Addresses of the module 2, 3, 4)

Technical data sheet: F02332EN/03



6. SYSTEM ARCHITECTURES


6.1 Stand-alone system (continued)

6.1.2 Stand-alone system with remote addressing (through a computer) (continued)

Consequences for the system architecture:

- for 1 mini configuration module (cat. no 4 149 36/37)
 - up to 30 EMS CX³ modules (e.g. 30 devices grouped per functions with addresses from1 to 30)

It is possible to assign to several devices the same address with the purpose of grouping different functions, **because they are related to the same electrical circuit**. For example, it is possible to assign the same address to a signalling auxiliary module (cat. no 4 149 29), a universal control module (cat. no 4 149 32), a measuring module, and so on. In this way on the EMS CX³ display or in a supervision system the grouped function will be displayed as a unique "device" with all grouped functions. *[Refer to the schemes here under]*

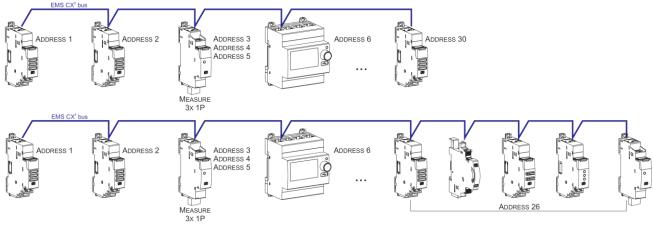

Note for the mini configuration module (local display)

. It is possible to assign it the same address as another EMS CX³

. The mini configuration module can be placed everywhere in the EMS CX³ bus

6.2 Supervised system (Computer Supervisory System)

. Supervised system = System to be used through a Computer Supervisory System to remotely read data from the EMS CX³ devices and/or do operations on these devices (e.g. commands of a motor driven or contactor ...).

6.2.1 Supervised system-with local addressing (through the track wheel)

Local addressing advantages:


- No configuration software needed to set-up the installation
- Installation can be done without the intervention of a System Integrator

Programming procedure:

. For EMS CX³ modules which need some: mandatory through the lateral DIP-switches of each EMS CX³ module (see § "Module configuration")

Addressing procedure:

. For all EMS CX³ modules: mandatory through the track wheel located on the top upper face of each EMS CX³ modules

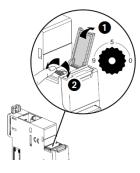

. Marked from 0 to 9 in order to locally define the Modbus address to EMS CX³ modules In this system the Modbus address of an EMS CX³ module device or group of modules (several functions) is obtained considering the address of the interface Modbus/EMS CX³ Interface as tenth and the address of a device or group of function as unit (e.g. Interface address 1 = 10 \rightarrow address of module n°5 = Modbus address 15)

Note for Measure Module "3x single phase":

This module is to be consider as 3 modules with 3 different Modbus Address. The module takes automatically the two addresses immediately following to the programmed one (e.g. Programmed address = 12, Addresses of the module 12, 13, 14)

Technical data sheet: F02332EN/03

Updated: 30/09/2020

Llegrand

6. SYSTEM ARCHITECTURES (continued)

6.2 Supervised system (Computer Supervisory System) (continued)

6.2.1 Supervised system-with local addressing (through the track wheel) (continued)

Consequences of the local addressing mode (through the track wheel):


. Each device of the system must be addressed.

. Addresses available: from 1 to 9

. Address 0 not permitted

It is possible to assign to several devices the same address with the purpose of grouping different functions, **because they are related to the same electrical circuit**. For example, it is possible to assign the same address to a signalling auxiliary module (cat. no 4 149 29), a universal control module (cat. no 4 149 32), a measuring module, and so on. In this way on the EMS CX³ display or in a supervision system the grouped function will be displayed as a unique "device" with all grouped functions. *[Refer to the scheme hereunder]*

Note: In this configuration the Modbus address of an EMS CX³ module device or group of modules (several functions) is obtained considering the address of the interface Modbus/EMS CX³ Interface as tenth and the address of a device or group of function as unit (e.g. Interface address 1 = 10 and device address $= 5 \rightarrow$ Modbus address = 15)

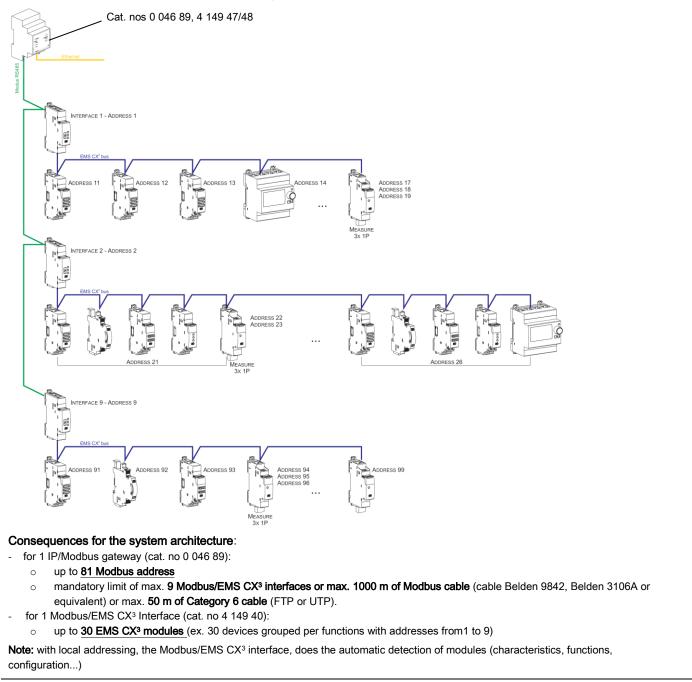

Updated: 30/09/2020

L legrand

6. SYSTEM ARCHITECTURES (continued)

6.2 Supervised system (Computer Supervisory System) (continued)

6.2.2 Supervised system-with remote addressing (through a computer)


Remote addressing advantages:

- Whole of configuration (addresses and functions) can be done a remotely through the EMS Configuration software
- Configuration software available for free
- Automatic detection of the EMS CX³ modules installed in the system (characteristics, functions, configuration...)
- Increased settings possibilities: load shedding function
- Increased addressing: up to 32 Modbus/EMS CX³ interfaces
- Increased addressing: up to 247 Modbus addresses in a system

Programming procedure:

. For EMS CX³ modules which need some: possible through the lateral DIP-switches of each EMS CX³ module or via the configuration software (see § "Module configuration").

Addressing procedure:

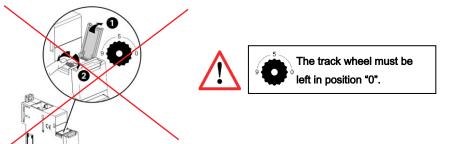


. It is not necessary to address the EMS CX³ modules. The track wheel must be left in default position "0".

. all the addressing/configuring procedure will be done with the Configuration Software (available online for free)

. With remote addressing, the software does the automatic detection of modules installed in the system, but the supervision is not possible until the user assigns the remote address and all the characteristics to each module.


Note: it is mandatory to connect the computer to the different Modbus/EMS CX³ interface with an USB-micro USB cable (one interface at a time). [For more details, refer to the technical data sheet of the Modbus/EMS CX³ interface]

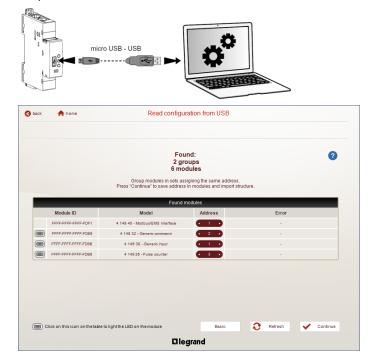

Note for Measure Module "3x single phase":

This module is to be consider as 3 modules with 3 different Modbus Address. The module takes automatically the two addresses immediately following to the programmed one (e.g. Programmed address = 2, Addresses of the module 2, 3, 4)



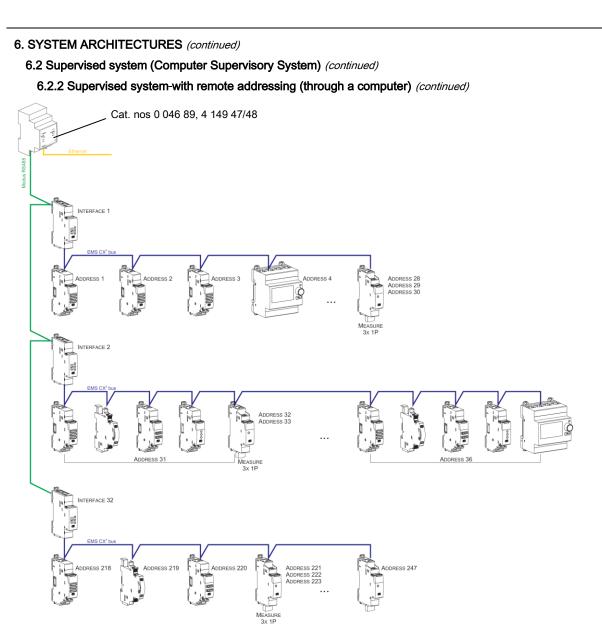

Consequences for the system architecture:

- for 1 IP/Modbus gateway (cat. no 0 046 89):
- up to 247 Modbus address

_

- Because of Modbus: mandatory limit of max. 32 Modbus/EMS CX³ interfaces or max. 1000 m of Modbus cable (cable Belden 9842, Belden 3106A or equivalent) or max. 50 m of Category 6 cable (FTP or UTP).
- for1 Modbus/EMS CX³ Interface (cat. no 4 149 40):
 - up to 30 EMS CX³ modules or grouped modules (e.g. 30 devices grouped per functions with addresses from 1 to 30)

It is possible to assign to several devices the same address with the purpose of grouping different functions, **because they are related to the** <u>same electrical circuit</u>. For example, it is possible to assign the same address to a signalling auxiliary module (cat. no 4 149 29), a universal control module (cat. no 4 149 32), a measuring module, and so on. In this way on the EMS CX³ display or in a supervision system the grouped function will be displayed as a unique "device" with all grouped functions. *[Refer to the scheme up here]*

La legrand

7. COMPLIANCE AND APPROVALS

Compliance to standards:

. Compliance with Directive on electromagnetic compatibility (EMC) $n^\circ\,2014/30/EU$

. Compliance with low voltage directive n° 2014/35/EU.

. Electromagnetic Compatibility:

IEC/EN 61131-2

IEC/EN 60947-5-1

Environment respect - Compliance with EU directives:

. Compliance with Directive 2011/65/EU as amended by Directive 2015/863 (RoHS 2) on the restriction of the use of certain hazardous substances in electrical and electronic equipment. . Compliance with REACH regulation (1907/2006): at the date of the

publication of this document no element of the SVHC substance list (updated on 27/06/2018) is present in these products.

. WEEE directive (2012/19/EU): the sale of this product is subject to a contribution to eco-organisations in each country responsible for managing end-of-life products in the field of application of the European Waste Electronic and Electrical Equipment Directive.

Plastic materials:

. Halogens-free plastic materials.

. Marking of parts according to ISO 11469 and ISO 1043.

Packaging:

. Design and manufacture of packaging compliant to decree 98-638 of the 20/07/98 and also to directive 94/62/CE.

Environmental profile:

. PEP document available

Installation software:

. XL PRO³.