




7 661 X1



7 661 X2



7 661 X3







7 661 X4


1. USE

Frame plates for fitting on SEANO mechanisms.

2. RANGE

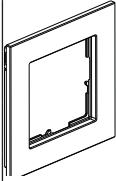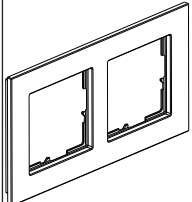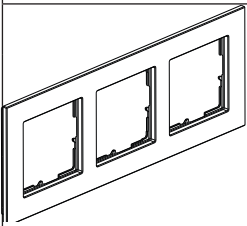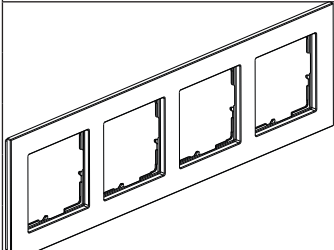	Gang	Colour	Reference number
	1 Gang	white glass	7 661 01
		smoked glass	7 661 11
		aluminium	7 661 21
		dark oak	7 661 31
		light oak	7 661 41
	2 Gang	white glass	7 661 02
		smoked glass	7 661 12
		aluminium	7 661 22
		dark oak	7 661 32
		light oak	7 661 42
	3 Gang	white glass	7 661 03
		smoked glass	7 661 13
		aluminium	7 661 23
		dark oak	7 661 33
		light oak	7 661 43
	4 Gang	white glass	7 661 04
		smoked glass	7 661 14
		aluminium	7 661 24
		dark oak	7 661 34
		light oak	7 661 44

3. DIMENSIONS (mm)

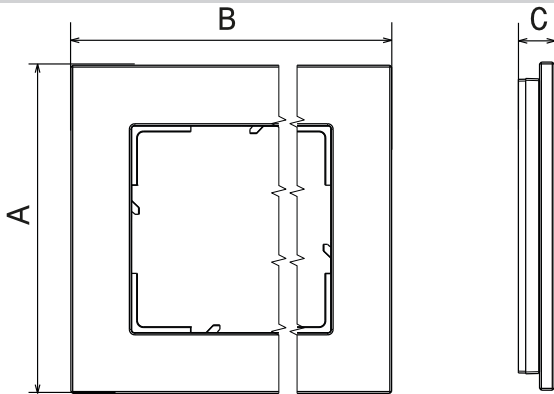

References	A	B	C
7 661 X1	90	90	9,8
7 661 X2	90	161	9,8
7 661 X3	90	232	9,8
7 661 X4	90	303,75	9,8

4. MOUNTING

The plates snap onto the socket adapter or the switch cover. In case of the sockets, the socket cover clamp the frame.

5. TECHNICAL DATA

■ 5.1 Mechanical characteristics

Impact tests: IK 04

■ 5.2 Material characteristics

Plastic plates: ABS

Decor plaque: white / smoked glass; aluminium; dark / light oak

UV resistant

Halogen free

Self-extinguishing only for plastic part: 650° C / 30 s

5.3 Climatical characteristics

Storage temperature: - 10° C to + 70° C

Use temperature: - 5° C to + 40° C

6. MAINTENANCE

Surface cleaning with a cloth.

Do not use:

Acetone, tar remover, trichloroethylene.

In the dish-washer not proof.

■ 6.1 Resistance to the following cleaning substances except dark / light oak; aluminium

- Hexane (EN 60669-1),
- Methylated spirit,
- Soapy water,
- Diluted ammonia,
- Diluted pure bleach 10%,
- Glass cleaning product,
- Pre-impregnated wipes.

■ 6.2 Resistance to the following hospital-type cleaning substances except dark / light oak and aluminium

- Anios,
- Surfanios,
- Bactilyline,
- Hydrogen peroxide (oxygenated water 35%).

Caution: A spot test should be carried out before using any other specific cleaners.

Caution: A spot test should be carried out before using any other specific cleaners.

7. SPECIAL USE

The plates must not be painted.