

# Temperature control unit

## 573918/19

Installation manual





# Contents

<b>1 - Introduction</b>	<b>4</b>
1.1 - Warnings and tips	4
1.2 - Contents of package	4
<b>2 - Installation</b>	<b>5</b>
2.1 - Rear view of the Control Unit	5
2.2 - Connecting the battery	6
2.3 - Installing the unit	6
<b>3 - Switching on for the first time</b>	<b>7</b>
3.1 - Selecting the language	7
3.2 - Learning the zones	8
3.3 - Configuring the zone actuators	9
3.4 - Configuring the pumps	11
3.5 - Setting the Date and Time	13
3.6 - Setting the Summer/Winter system	14
<b>4 - Programming</b>	<b>15</b>
4.1 - Programming from personal computer	15
<b>5 - Main menu</b>	<b>16</b>
5.1 - Maintenance	16
<b>Appendix</b>	<b>31</b>
<b>Troubleshooting</b>	<b>32</b>
<b>Note</b>	<b>33</b>

# 1 - Introduction

## 1.1 - Warnings and tips


Before proceeding with the installation this manual should be read carefully, because the guarantee is automatically cancelled in the event of negligence, incorrect manoeuvre or improper use or if unauthorised people tamper with the circuit.

Moreover it is cancelled when the fault is due to strong accidental overvoltages on the power supply network. Thus if the Control Unit is installed in a place which is subject to violent atmospheric discharges (storms), suitable protection must be installed on the power supply line and it must be connected to the earth as rigorously as possible and respecting IEC standards.

## 1.2 - Contents of package


The Control unit package contains:

- Temperature control unit 573918/19.
- Installation manual.
- User manual.
- CD-ROM containing ThermoConfig software and manuals in PDF format.

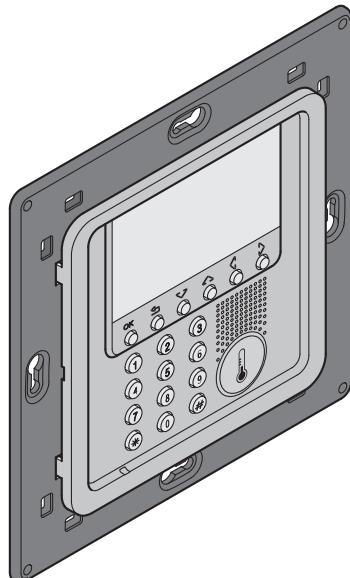

## 2 - Installation


### 2.1 - Rear view of the Control Unit

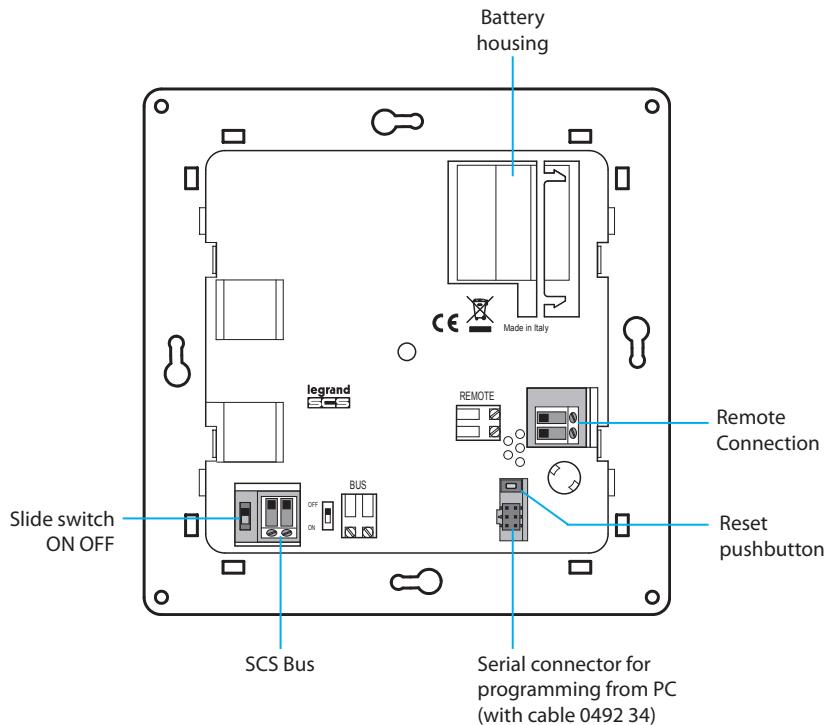

## 2 - Installation


### 2.2 - Connecting the battery

Connect the battery to the connector respecting the polarities indicated inside the housing.

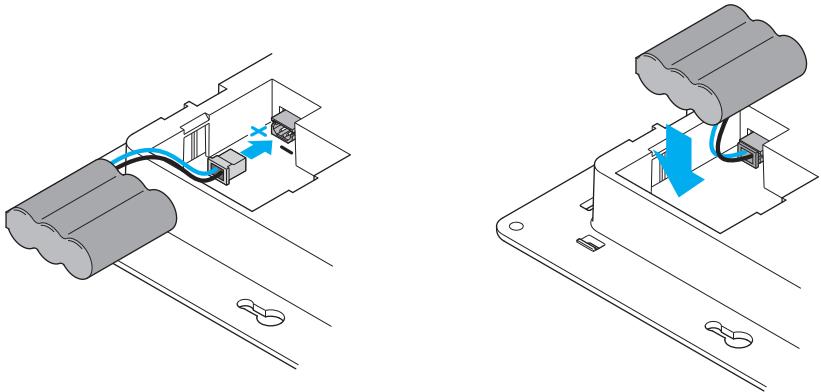

### 2.3 - Installing the unit

After making all connections, fasten the Unit to the base. Be careful not to damage the wires.

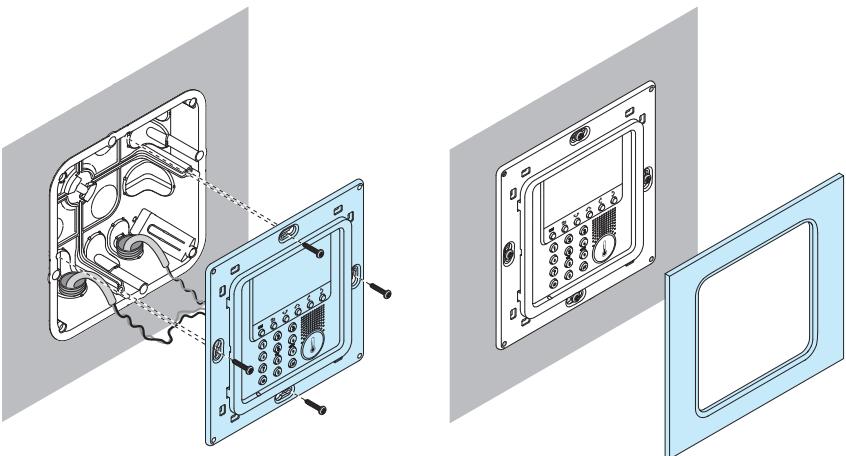

### 3 - Switching on for the first time

When the Control Unit is switched on for the first time it shows the Maintenance menu with the **Language** function highlighted.

To activate the Control Unit and make it operational:

- Select the **Language**.
- Perform the zone learning - **Zone search**.
- Configure the zone **Actuators**.
- Configure the zone **Pumps**.
- Enter time and date.
- Define the system state (Summer/Winter).

#### 3.1 - Selecting the language

Use this function if the language preset in the factory is not that required:

Language
Configured zones
Probe setting
System test



Select **Language**



**OK**

Confirm by pressing **OK**

English
العربية
简体中文
繁體中文




Select the language required  
Enter by pressing **OK**

English
العربية
简体中文
繁體中文

## 3 - Switching on for the first time

### 3.2 - Learning the zones

This function lets the Control Unit recognise all the system zones.

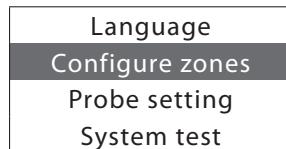

Select **Configures zones**




**OK**

Confirm by pressing **OK**




**OK**


Confirm by pressing **OK**

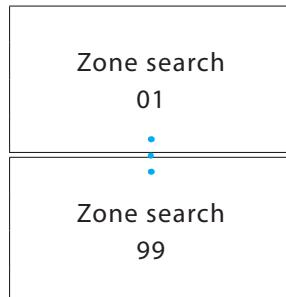

*The Control Unit searches the zones from 1 to 99. Depending on the size of the system, this operation may take a few minutes*

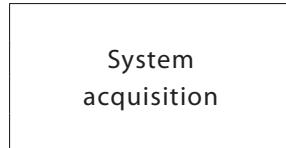

*When the search is completed it returns to the Configure zones menu*

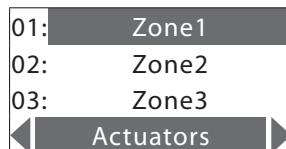

### 3 - Switching on for the first time


#### 3.3 - Configuring the zone actuators

This function completes the zone configuration, indicating:

- which actuators are installed for Heating;
- which actuators are installed for Cooling;
- which type of load the zone manages.



*Only perform with Standard configuration (see Technical Guide)*

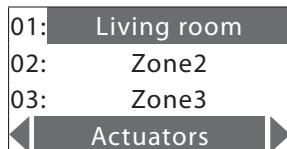


Select the **zone** (e.g. Living room)



OK

Confirm by pressing OK

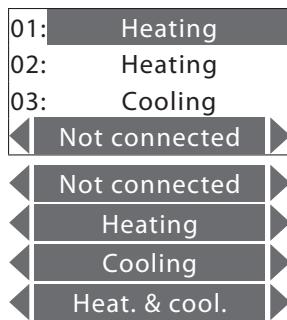

*One of the following options can be selected for each actuator in the list:*

Not present on the system

Is used to manage the Heating system


Is used to manage the Cooling system

Is used to manage both the Heating system and the Cooling system (e.g.: 2-pipe fan coil)



OK

Confirm by pressing OK

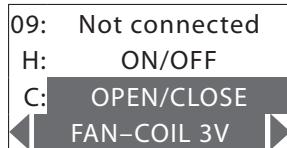

*The last two items of the menu can select the type of load managed*



NEXT

### 3 - Switching on for the first time



09: Not connected

H: ON/OFF

C: OPEN/CLOSE

FAN-COIL 3V



One of the following options can be selected for each operation:

FAN-COIL 3V

Fan-coil with control of one valve and selector switch up to 3 speeds

ON/OFF

Load managed by just one contact (e.g. thermostatic valve)

OPEN/CLOSE

Load managed by two interlocked relays (e.g.: motor-driven valve with opening contact and closing contact)

GATEWAY

Interface for Climaveneta Fan-coil



On pressing the key the configuration set is sent to the zone

Zone test ...



01: Living room

02: Zone2

03: Zone3



When the zone is configured press twice to return to the Main Menu

Current profiles

Programming


Setup

Maintenance

### 3 - Switching on for the first time

#### 3.4 - Configuring the pumps

Can complete the zone configuration, indicating which pumps must control the zone and with how much delay.

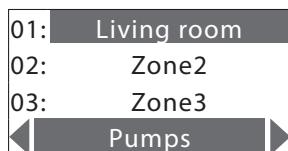


Select the **Zone** (e.g.: Living room)



OK

Confirm by pressing **OK**

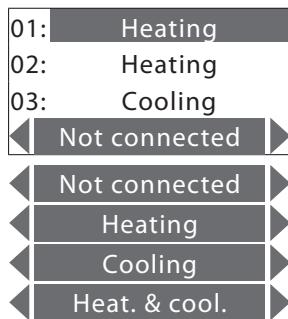

One of the following options can be selected for each actuator in the list:

Not present on the system or not managed by the zone selected

Is used to manage the Heating system


Is used to manage the Cooling system

Is used to manage both the Heating system and the Cooling system



OK

Confirm by pressing **OK**

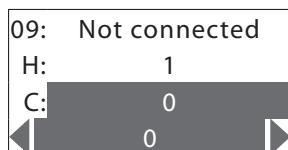

The last two items of the menu can select the delay in activating the pump



Selects the minutes of delay





OK

Press **OK** to confirm

NEXT


### 3 - Switching on for the first time

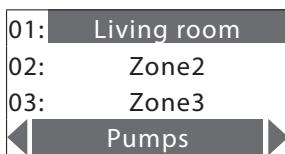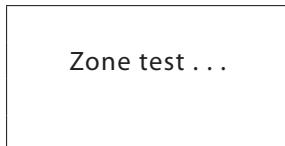

On pressing the key the configuration set is sent to the zone.

The control unit sends the configuration:


*The following error message may be given*

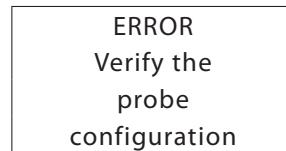

## 3 - Switching on for the first time

### 3.5 - Setting the Date and Time

Setting the Date/Time correctly is important for correct running of the set weekly programs.

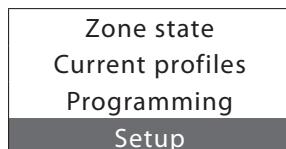


Select **Setup**



**OK**

Confirm by pressing **OK**

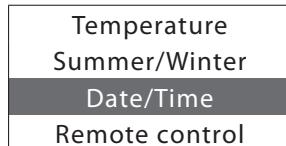

Select **Date/Time**



**OK**

Confirm by pressing **OK**




Type current Time and Date



The keys move the selection by one digit



The keys change the Time/Date line and vice versa

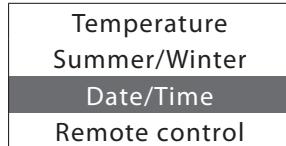

**OK**

Confirm by pressing **OK**

## 3 - Switching on for the first time

### 3.6 - Setting the Summer/Winter system

Sets the mode of operation of the Cooling or Heating system.



*Before performing the switching, perform all the operations necessary for the hydraulic system to work correctly.*



Select **Summer/Winter**



**OK**

Confirm by pressing **OK**



*The display indicates the current state: Winter*



**OK**

Confirm by pressing **OK**



*A BEEP signal that the modification has been made*

*The display indicates the new setting: Summer*



*After the switching the system is set on Antifreeze/Heat Protection mode.*

## 4 - Programming

### 4.1 - Programming from personal computer

#### Type of program

The Unit can be programmed by using the ThermoConfig software.


Programming from a PC requires a cable 0492 34, for the connection between the Unit 6-way connector and a PC USB port.

Connection is carried out as follows:

Use the maintenance code to enter the **Maintenance** using the Maintenance menu, take the Unit OFF the bracket.

Start **ThermoConfig** program.

Connect cable when requested and then follow the program procedure

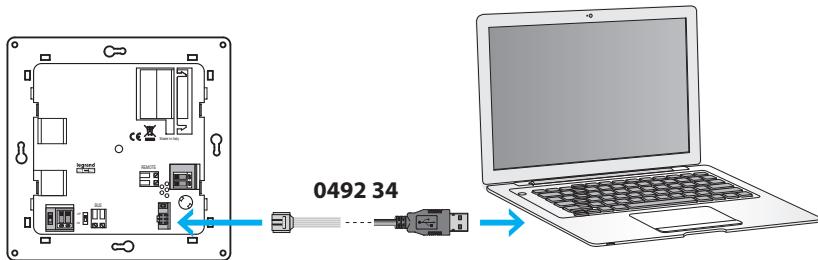

For further information, see **ThermoConfig** software manual.

#### Firmware update

This function allows updating the Unit software with its latest release. Such update allows bringing in improvements as well as new Unit functions.

The latest firmware releases are available at [www.legrandelectric.com](http://www.legrandelectric.com)



*Before starting the firmware updating procedure position the slide switch on OFF*

For further information, see **ThermoConfig** software manual.


## 5 - Main menu



### 5.1 - Maintenance

To prevent inexpert users modifying the settings and affecting the operation of the Temperature control unit, access to this menu is protected by the **Maintenance Code** (base 12345).

To access the MAINTENANCE menu:

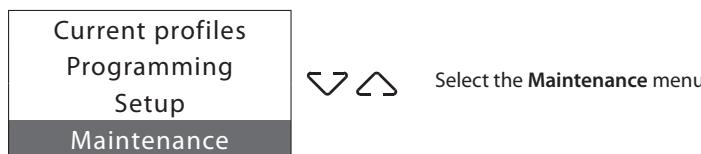


OK

Press OK to confirm



OK

Press OK to confirm

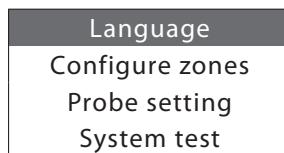

Items present:


- **Language** - Can select the language (base Italian);
- **Configure zones** - Can configure the system zones;
- **Probe setting** - Can vary the temperature measured;
- **System test** - Can perform maintenance or checks on the system;
- **Maintenance code** - Can customise the maintenance code;
- **Total reset** - Resets the control unit totally.

## 5 - Main menu



### 5.1.1 - Language

Can select the language in which the messages are shown on the display.

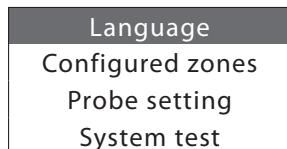

Select Language



OK

Confirm by pressing OK



Select the language required  
Enter by pressing OK




## 5 - Main menu



### 5.1.2 - Configure zone


Can perform the system learning and manage the zone configuration.

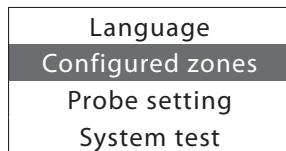

▽ △ Select **Configure zones**




**OK** Confirm by pressing **OK**

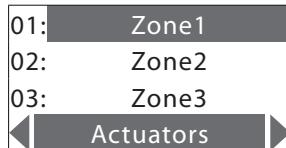

▽ △ Select the zone

*The following functions are available for the zone selected:*

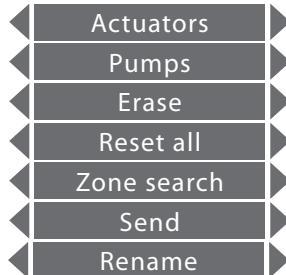

▶ Can configure the actuators for the zone selected

▶ Can configure the pumps for the zone selected

▶ Can erase the zone selected

▶ Can zero the configuration of all the zones

▶ Searches all the zones in the system

▶ Configures the zones on the basis of the settings received from the PC via the ThermoConfig software

▶ It enables renaming the selected zone

Use the ▽ △ keys to select the function required.


## 5 - Main menu



### 5.1.2.1 - Actuators

This function completes the zone configuration, indicating:

- which actuators are installed for Heating;
- which actuators are installed for Cooling;
- which type of load the zone manages.

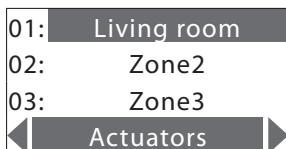


Select the **zone** (e.g. Living room)



OK

Confirm by pressing OK

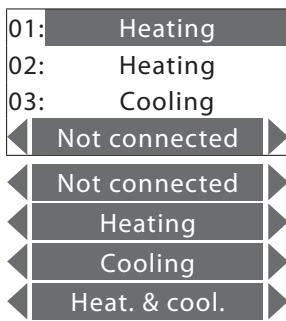

One of the following options can be selected for each actuator in the list:

Not present on the system

Is used to manage the Heating system


Is used to manage the Cooling system

Is used to manage both the Heating system and the Cooling system (e.g.: 2-pipe fan coil)



OK

Confirm by pressing OK

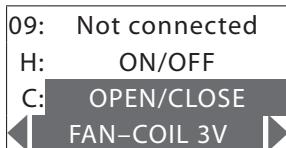

The last two items of the menu can select the type of load managed



NEXT

## 5 - Main menu



09: Not connected  
H: ON/OFF  
C: OPEN/CLOSE  
FAN-COIL 3V



One of the following options can be selected for each actuator in the list:

FAN-COIL 3V

Fan-coil with control of one valve and selector switch up to 3 speeds

GATEWAY

Interface for Climaveneta Fan-coil

ON/OFF

Load managed by just one contact (e.g.: thermostatic valve)

OPEN/CLOSE

Load managed by two interlocked relays (e.g. motor-driven valve with opening contact and closing contact)



Press the key to send the configuration set to the zone

Zone test ...



01: Living room  
02: Zone2  
03: Zone3  
Pumps

Configuration  
invalid

Trying to set a configuration of actuators which is not allowed (example: actuators of different type for the same function) in a probe


ERROR  
Verify the  
probe  
configuration

## 5 - Main menu



### 5.1.2.2 - Pumps

Can complete the zone configuration, indicating which pumps must control the zone and with how much delay.

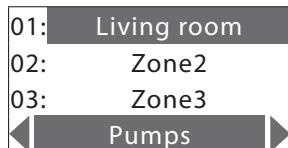


Select the **Zone** (e.g.: Living room)



**OK**

Confirm by pressing **OK**

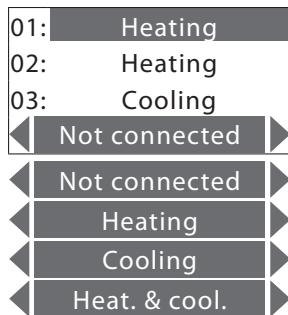

One of the following options can be selected for each actuator in the list:



Not present on the system or not managed by the zone selected

Is used to manage the Heating system


Is used to manage the Cooling system

Is used to manage both the Heating system and the Cooling system



**OK**

Confirm by pressing **OK**

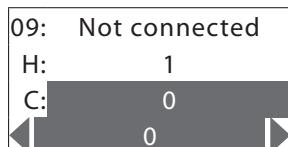

The last two items of the menu can select the delay in activating the pump



Selects the minutes of delay




**OK**


Press **OK** to confirm

NEXT

## 5 - Main menu

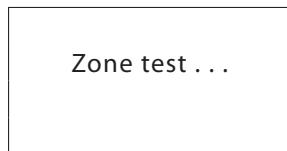


Zone test ...

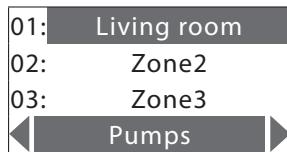

Press the key to send the configuration set to the zone.

The control unit tests the configuration:

*The following error message may be given*

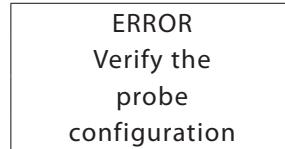


*Check that the probe is in configuration (P=CEN) and try again; if it is not this type of configuration, the control unit cannot configure the probe.*

## 5 - Main menu



### 5.1.2.3 - Erase

Can erase the zone selected from the configuration.

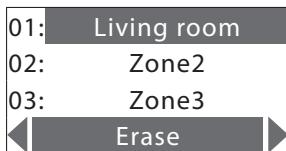

Select the zone




OK

Press OK to confirm



Select YES

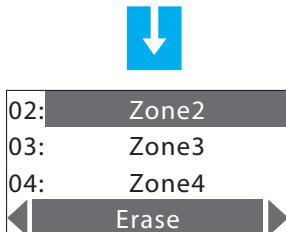

OK

Press OK to confirm

Press to return to the previous page; hold down to go back to the first page




*The Control Unit no longer manages the erased zones.*

## 5 - Main menu




### 5.1.2.4 - Reset all

Can erase the saved configuration of all the zones.

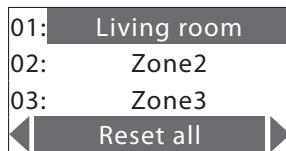


OK

Press OK to confirm

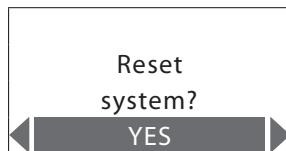

OK

Press OK to confirm

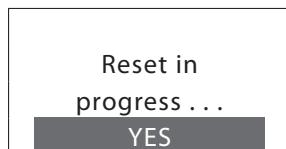

OK




*From this moment on the Control Unit no longer manages any zones.  
To reset the system operation, perform the zone LEARNING*

## 5 - Main menu




### 5.1.2.5 - Zone search

Searches all the zones in the system.

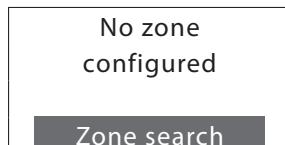

OK


Press OK to confirm

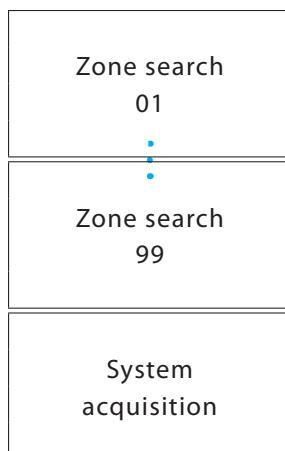

*The system searches the zones from 1 to 99. Depending on the system size, this operation may take a few minutes*



*When the search has finished it returns to the Configure zones menu*

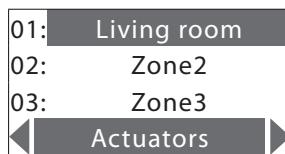


*Press ↺ to return to the previous page; keep pressed to return to the first page*

## 5 - Main menu




### 5.1.2.6 - Send

Sends the actuator and pump settings to all the configured zones.

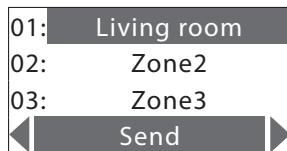

OK

Press OK to confirm

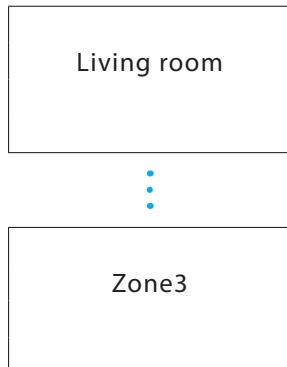


*The control unit sends the configuration set to the zones in the system.*

*This message may be displayed during the send phase:*

ERROR  
Verify the  
probe  
configuration



Pressing cancels sending the configuration  
Press OK to go to the next zone

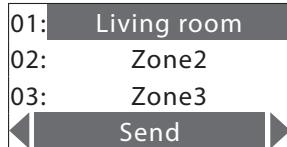


*When the send is completed, it returns to the Configure zones menu*

## 5 - Main menu



### 5.1.3 - Probe setting

Can align the temperature measured by the probes to a value measured with other devices (thermometer,...) to guarantee better precision in system operation.

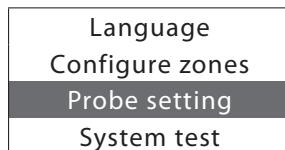


Select **Probe setting**



**OK**

Confirm by pressing **OK**

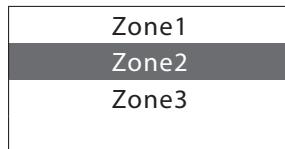


Select the zone (e.g.: Zone2)



**OK**

Press **OK** to confirm


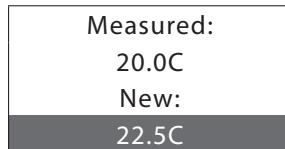


Set the effective temperature measured in the room ( $\pm 0.1^\circ\text{C}$  increment)



**OK**

Press **OK** to confirm

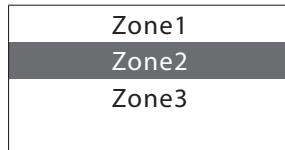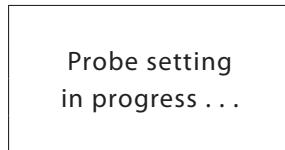

Press to return to the previous page; keep pressed to return to the first page

## 5 - Main menu



### 5.1.4 - System test

Can put the **System in test** (the whole system OFF) to check the system. It automatically disables all the commands (including the remote commands).

Language  
Configure zones  
Probe setting  
**System test**



Select **System test**



**OK**

Confirm by pressing **OK**

M30 : 00.10  
PIC : 01.07  
HW : 00.10  
Exit with CLEAR

*The display indicates the Control Unit software and hardware versions:  
M30 – firmware version  
PIC – firmware version SCS interface  
HW – hardware version*



Press to return to the previous page

Language  
Configure zones  
Probe setting  
**System test**

## 5 - Main menu



### 5.1.5 - Maintenance code

Can set a new Maintenance code.

Configure zones  
Probe setting  
System test  
Mainten. code



Select the Maintenance Code



OK

Press OK to confirm

Current:  
12345  
New:  
12345



① ② ③  
④ ⑤ ⑥  
⑦ ⑧ ⑨  
⑩ ⑪ ⑫

Type the new maintenance code (e.g.: 55555)

Current:  
12345  
New:  
55555



OK

Press OK to confirm

Language  
Configure zones  
Probe setting  
System test

*From now on you must type the new code set to access the Maintenance menu*




*If a new MAINTENANCE CODE is set, make a note of it in the space on page 22 of this manual.*

## 5 - Main menu



### 5.1.6 - Total reset

Can perform a Control Unit total reset. All the settings will be lost and the factory settings will be reset (see page 10 of the manual).

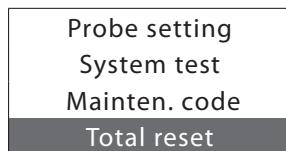


Select **Total reset**



**OK**

Press **OK** to confirm

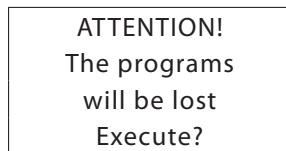


**OK**

Press **OK** to confirm



*The Reset operation takes about 30 seconds.*

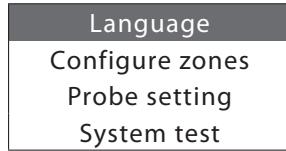

Press to return to the previous page, keep pressed to return to the first page



*With this operation the system configuration and all the programs run will be lost!*

## Appendix

### Technical data

Power supply from SCS bus	18 – 28 V
Absorption – Max	55mA
Operating temperature	5 – 40 °C
Degree of protection	IP 30

### Standard references

The Item in this manual is provided with the CE Conformity Declaration according to the requirements shown below:

Legrand declares that the product, Item:

**573918/19**

is in compliance with the essential requirements of the 2006/5/CE directive, as it complies with the following standards:

**EN60950 EN50090-2-2**

CE mark year, according to the specified directive: 2008

More information concerning reference standards can be found at:

[www.legrandelectric.com](http://www.legrandelectric.com)

## Troubleshooting

PROBLEM	SOLUTION
<b>Battery flat signal</b>	Check that the battery is correctly connected. If the problem continues, replace the battery.
<b>A zone does not adjust correctly</b>	Check whether any problems have been signalled (Settings>Diagnostic>Update).
<b>A zone signals "Error on probe"</b>	The probe does not respond; check whether it is correctly connected (green LED shining steadily or flashing slowly) and configured (correct zone number and mode).
<b>A zone signals "Actuator KO"</b>	An actuator does not respond: <ul style="list-style-type: none"><li>- check whether the actuators are correctly connected and configured (test the actuators with the local key);</li><li>- with standard configuration, check that the configuration has been performed correctly in the control unit (Maintenance&gt;Configure zone&gt;Configure).</li></ul>
<b>A zone signals "Slave probe KO"</b>	A slave probe does not respond: <ul style="list-style-type: none"><li>- check whether it is correctly connected (green LED shining steadily or flashing slowly) and configured (correct zone number, SLA mode);</li><li>- check the correct configuration of the slaves to be managed on the Master probe.</li></ul>
<b>A zone signals "T out of limits"</b>	The temperature measured by the probe is too low or too high: <ul style="list-style-type: none"><li>- check that the probe is installed correctly (e.g. not too close to heat sources);</li><li>- set the probe (Maintenance&gt;Probe setting) measuring the room temperature with a thermometer;</li><li>- if the problem continues, replace the probe.</li></ul>
<b>A zone signals "R/W EEPROM KO"</b>	If there is an internal problem on the probe, replace the probe.
<b>A zone signals "Pump KO"</b>	The actuator configured to control the circulation pump (Zone=00) does not respond: <ul style="list-style-type: none"><li>- check that the actuator is correctly connected and configured (test the actuator with the local key);</li><li>- check the correct configuration of the pump management on the probe.</li></ul>

## Note

Legrand reserves at any time the right to modify the contents of this booklet and to communicate, in any form and modality, the changes brought to the same.



**World Headquarters and  
International Department**  
87045 LIMOGES CEDEX FRANCE

☎: 33 5 55 06 87 87  
Fax : 33 5 55 06 74 55  
[www.legrandelectric.com](http://www.legrandelectric.com)