Description

Video entrance panel with 4.3" display, keypad with numbers and letters (A-I), double face recognition camera, fingerprint reader and badge reader for access control functions. Using the keypad, it is possible to make calls to the apartments and the guard station and enter the access code to release the lock.

- Configuration of different calling modes:
- Apartment code (Area Building Riser Floor Apartment)
- Numeric or alphanumeric codes for residents

Enter the settings menu with a specific code for maintenance and for managing the settings (e.g. backlight brightness, ring volume, speaker volume, button volume, screensaver time). Possibility to upload customized screensavers using the configuration software. The entrance panel can be PoE (power over Ethernet) powered, or directly powered using power supply 375005. Flush mounted installation using the dedicated box 375006.


Related items

375006 Metal box for flush-mounting installation

Technical data

Voltage:	24 Vdc
Maximum consumption:	0.65 A
C NC NO contact output:	125 Vac/0.5A, 30Vdc/2A
Max. cable section for clamps:	0.8 mm ²
Operating temperature:	(- 40) − (+ 70) °C
Working temperature finger print: $(-10) - (+55) \degree C (\pm 2)$	
IP degree of protection:	54
IK degree of protection: 07	
Camera resolution: 1080 p	
Camera viewing field angle: $H = 80^{\circ}$; $V = 53^{\circ}$	
Face recognition distance during daytime:	30 – 80 cm
Face Recognition Distance at Night:	30 – 50 cm
Badge reader Frequency: 13.56 MHz	
Badge reader transmission power:	< 42 dBuA/m @ 10m


Dimensional data

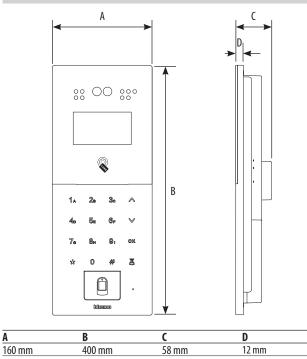



A



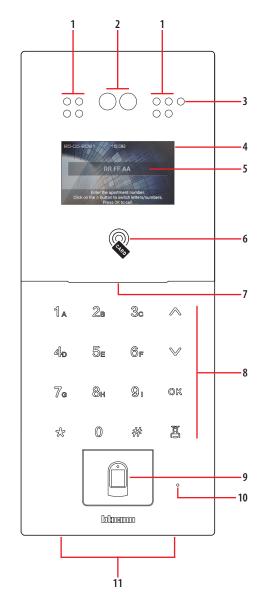


374001

Legend

- 1. LED for the shooting field lighting
- 2. Camera
- 3. Light sensor
- 4. Display 4,3"
- 5. Home Page
- 6. Badge reader for door lock opening
- 7. Loudspeaker
- 8. Backlit keyboard
- 9. Finger print reader
- 10. Microphone
- 11. Locking screws


ST-00001216-EN 27/09/2023

Rear view

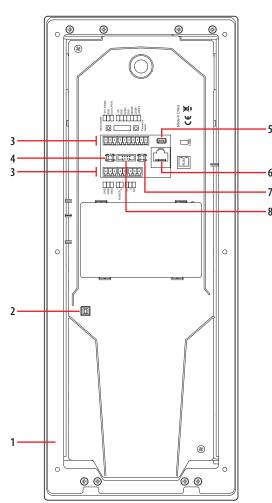

Legend


- 1. Mounting bracket
- 2. Tamper switch
- 3. Connection clamp
- 4. Not used
- 5. USB Connector (not used)
- 6. RJ45 Connector (*)
- 7. Reset setting password and local access code
- 8. Not used
- (*) This device does not support standard POE power supplies, but only POE power supplies identified with item no. 375002. Connect the cat5/5e/6 FTP or cat5/5e/6 UTP cable with ferrite supplied to the connector. The wrong wiring of the Ethernet cable connecting the device to the Poe Switch 375002 could damage the device itself. The RJ45 cable must be at least 200 mm long

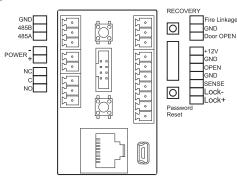

Connection clamps			
GND	trol	system common ground terminal for RS485 connection	
RS485B	Lift Control	terminal A	
RS485A		terminal B	
-		- additional power supply clamps	
+			
NC			
C		interlocked contact	
NO		•	
EIDE Linkago CND	local door lock release pushbutton connection for		
FIRE Linkage – GND		firealarm system	
Door OPEN – GND		local door lock release pushbutton connection	
+12V – GND OPEN		access control devices power supply	
OPEN		third party access control signal input for door lock opening (+12Vdc pulse)	
GND		system common ground terminal for third party connection	
SENSE		door status signal input (dry contact)	
LOCK+	CK+ electric door lock connection and control (12V - 4A		
LOCK-		impulsive on 30 0hm maximum)	

Configuration


To use the device, it is necessary to configure it and create the Community structure using the IP DES System software, following the steps below:

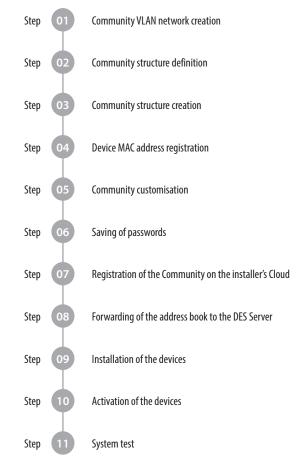

For further information, please refer to the IP DES System Software Manual and Small video entrance panel manual, available for download from www.homesystems-legrandgroup.com website




27/09/2023

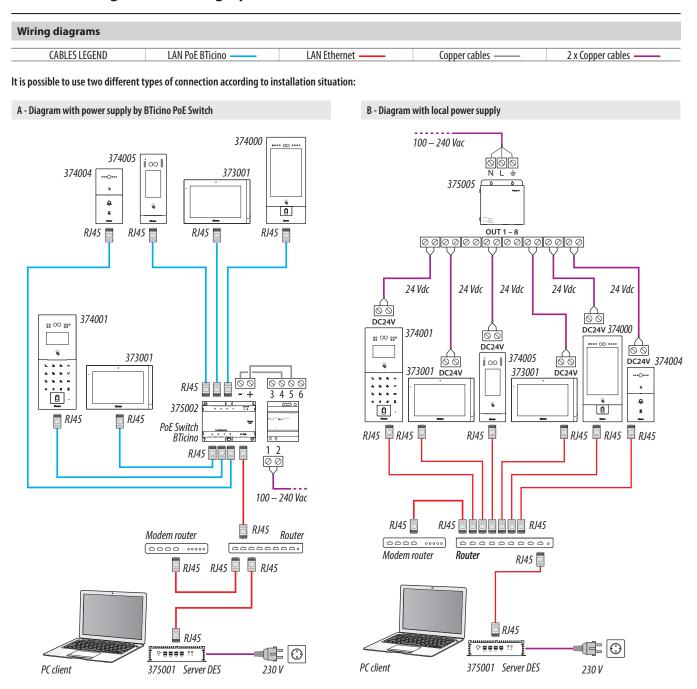

Attention: This device does not support standard POE power supplies, but only POE power supplies identified with 375002. Connect the cat5/5e/6 FTP or cat5/5e/6 UTP cable with ferrite supplied to the connector.


Attention: Do not directly connect PoE ports to an unsuitable network interface, such as a device powered by a different voltage. Connect the UP LINK port to a suitable port, never to a PoE port. Note: To connect the devices it is possible to use both types of wiring (diagram A or diagram B) or even mixed ones. Note: Maximum length of every LAN permanent link line = 90 m.



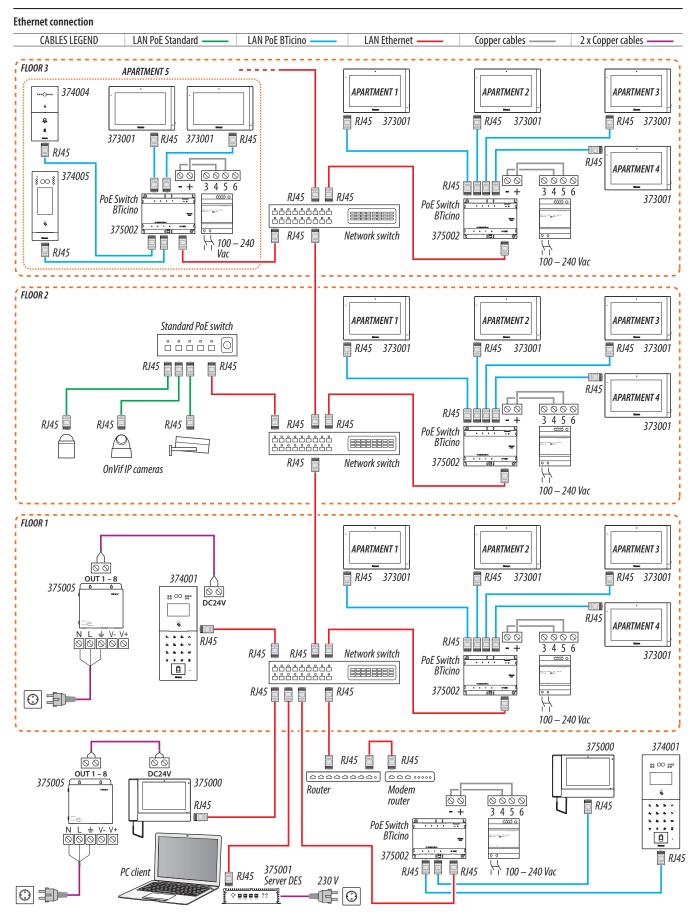

Attention: do not directly connect PoE ports to an unsuitable network interface, such as a device powered by a different voltage. Connect the UP LINK port to a suitable port, never to a PoE port. Note: to connect the devices it is possible to use both types of wiring (diagram A or diagram B) or even mixed ones.



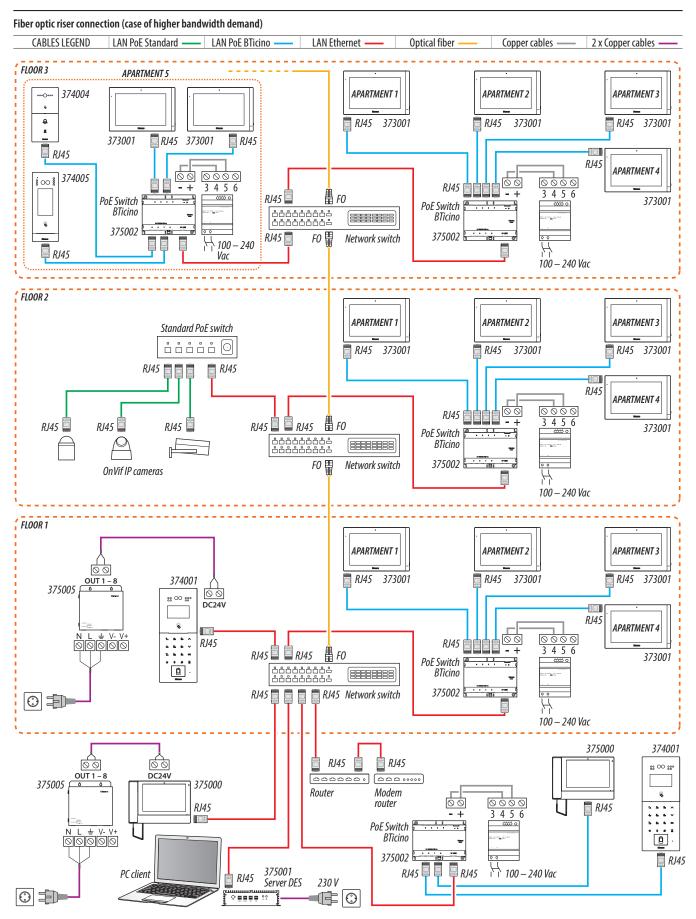


Attention: do not directly connect PoE ports to an unsuitable network interface, such as a device powered by a different voltage. Connect the UP LINK port to a suitable port, never to a PoE port. Note: to connect the devices it is possible to use both types of wiring (diagram A or diagram B) or even mixed ones.



Lift control 1 - Lift control, 1 riser, 1 entrance panel CABLES LEGEND LAN PoE BTicino LAN Ethernet 2 x Copper cables -Copper cables FLOOR 3 APARTMENT APARTMENT APARTMENT APARTMENT 1 2 3 4 373001 373001 373001 373001 🗒 RJ45 🗒 RJ45 🗒 RJ45 📮 RJ45 RJ45 ተገ 000 3456 RJ45 Network switch + 375002 RJ45 🗒 🗒 RJ45 PoE Switch BTicino **in** RJ45 🗒 100 – 240 Vac FLOOR 2 APARTMENT APARTMENT APARTMENT APARTMENT 1 3 4 2 373001 373001 373001 373001 📕 RJ45 🗒 RJ45 🗒 RJ45 📕 RJ45 RJ45 ላገ RJ45 📓 Network switch 375002 RJ45 🗒 🖾 RJ45 PoE Switch BTicino RJ45 🗒 Н 100 – 240 Vac FLOOR 1 APARTMENT APARTMENT APARTMENT APARTMENT 373001 373001 373001 373001 🗒 RJ45 📮 RJ45 📮 RJ45 🗒 RJ45 RJ45 J \otimes + 3 4 5 RJ45 📓 Network switch 375002 RJ45 🔲 🗍 🛄 RJ45 PoE Switch BTicino RJ45 🗒 100 – 240 Vac RJ45 00 375000 .00000000 Router 375002 RJ45 PoE Switch RJ45 BTicino 📕 RJ45 RJ45 📕 100 – 240 Vac Modem router RJ45 9 – 24 Vdc 374001 22 OO 22 Central Unit 88 Lift Control 8 KE ON 5 B 4 B 3 B *** 375010 RJ45 485A1 485B1 PC client 375001 Server DES 230 V RS 485

Attention: do not directly connect PoE ports to an unsuitable network interface, such as a device powered by a different voltage. Connect the UP LINK port to a suitable port, never to a PoE port. Note: to connect the devices it is possible to use both types of wiring (diagram A or diagram B) or even mixed ones.



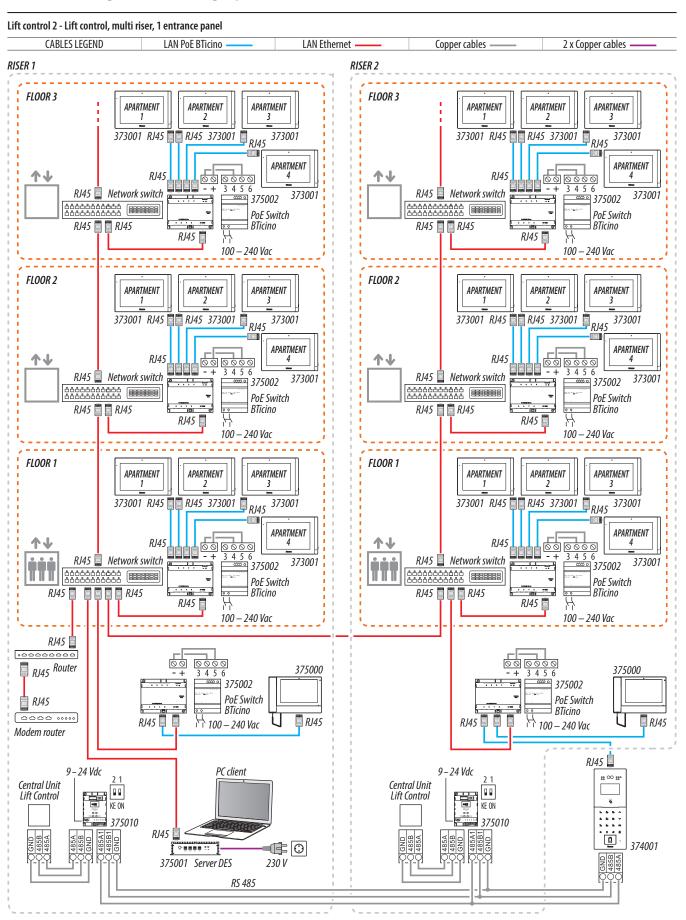


Attention: do not directly connect PoE ports to an unsuitable network interface, such as a device powered by a different voltage. Connect the UP LINK port to a suitable port, never to a PoE port. Note: to connect the devices it is possible to use both types of wiring (diagram A or diagram B) or even mixed ones.



Lift control 3 - Lift control, 1 riser, multi entrance panel CABLES LEGEND LAN PoE BTicino LAN Ethernet 2 x Copper cables · Copper cables FLOOR 3 APARTMENT APARTMENT APARTMENT APARTMENT 1 2 3 4 373001 373001 373001 373001 RJ45 **RJ45** 🗒 RJ45 📲 RJ45 RJ45 \mathbf{v} 00 0000 345 RJ45 🛄 Network switch PoE Switch BTicino RJ45 RJ45 ₩ 100 - 240 Vac RJ45 📗 FLOOR 2 APARTMENT APARTMENT APARTMENT APARTMENT 3 2 4 373001 373001 373001 373001 🛛 RJ45 **RJ45** 🗒 RJ45 RJ45 RJ45 ተ Ы 00000 **...**. 3456 - + RJ45 📓 Network switch PoE Switch BTicino RJ45 RJ45 RJ45 🗒 ₩ 100 – 240 Vac FLOOR 1 APARTMENT 3 APARTMENT APARTMENT APARTMENT 1 2 4 373001 373001 373001 373001 🛛 RJ45 RJ45 RJ45 📲 RJ45 RJ45 RJ45 📓 Network switch 11 RJ45 🔲 🗍 🗍 🖉 RJ45 PoE Switch BTicino ₩ 100 - 240 Vac RJ45 🗒 RJ45 峝 00 0000 .00000000 375000 456 Router RJ45 📕 375002 PoE Switch RJ45 BTicino 🗒 RJ45 _____ RJ45 100 – 240 Vac Modem router RJ45 🛄 RJ45 9 – 24 Vdc ss 00 ss 88 00 889 21 Central Unit 88 Lift Control 8 8 KE ON PC client 1 1 1 1 A 1 1 1 4 7 7 1 1 1 1 5 5 5 A 4 5 6 7 5 5 5 8 8 375010 📋 RJ45 0 374001 374001 GND 485B 485A 375001 Server DES 230 V RS 485

Attention: do not directly connect PoE ports to an unsuitable network interface, such as a device powered by a different voltage. Connect the UP LINK port to a suitable port, never to a PoE port. Note: to connect the devices it is possible to use both types of wiring (diagram A or diagram B) or even mixed ones.



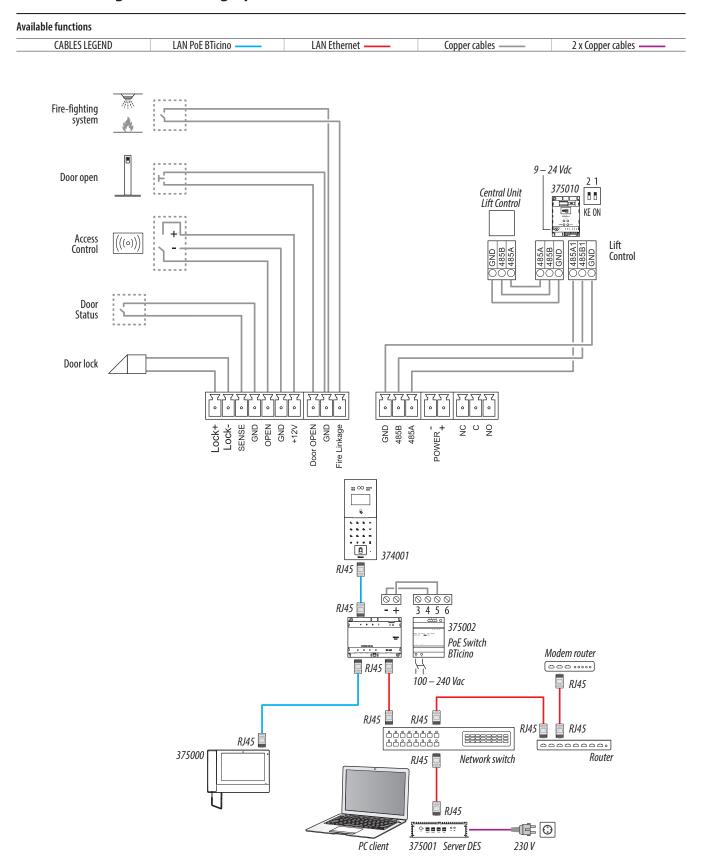

Attention: do not directly connect PoE ports to an unsuitable network interface, such as a device powered by a different voltage. Connect the UP LINK port to a suitable port, never to a PoE port. Note: to connect the devices it is possible to use both types of wiring (diagram A or diagram B) or even mixed ones.



Main functions

Call an IU Function


In this section it is possible to manage the calls to an IU.

Depending on how the community has been configured using the DES Server software, calls can be made in two ways:

- Call using the system address

- Call using the Alias (alphanumeric code)

In both cases, the data required to make the call must be entered in the appropriate field on the Home Page:

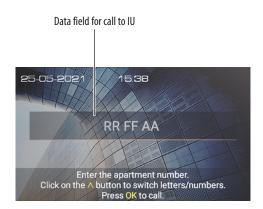

When the IU does not answer a message can be recorded.

Call a GS Function

This function allows to call the reference guard station.

Access Function

It is possible to access the building in different ways:

- using # + code

- using a configured badge or card

- through face recognition (Face recognition function); automatic activation must be enabled
- through fingerprint recognition (Fingerprint function).

Answering machine Function

Using this function, it is possible to leave a photo with own audio message if the IU does not answer after 30 seconds. This function must be active.

Messages Function

When the screensaver is enabled, this function displays messages sent to entrance panels using the DES Server software.

